


# MGate Series



## Industrial Protocol Gateways

### Find an MGate Solution

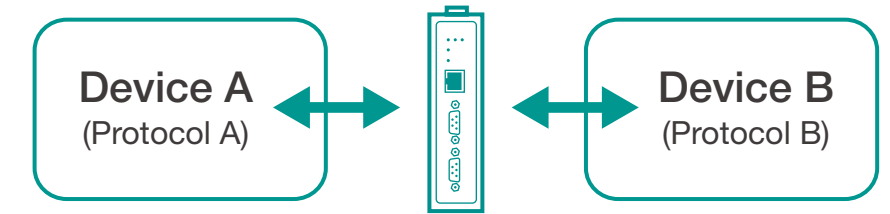

Device A / Device B	Modbus RTU/ASCII Slave	Modbus RTU/ASCII Master	PROFIBUS Slave	PROFIBUS Master	J1939	DNP3 Serial Outstation	DNP3 Serial Master	DF1	IEC 60870-5-101 Slave	IEC 60870-5-101 Master	Modbus TCP Server	Modbus TCP Client	EtherNet/IP Adapter	EtherNet/IP Scanner	PROFINET Controller	DNP3 TCP Outstation	DNP3 TCP Client	IEC 60870-5-104 Server	IEC 60870-5-104 Client	MQTT Broker	BACnet/IP Client	IEC 61850 MMS Client
Modbus RTU/ASCII Slave	-	1) MB3000	-	4101/5111	5118	-	-	-	-	-	5105	MB3000/5109	5105	5105	5103	-	5109	-	5114	5105	5217	5119
Modbus RTU/ASCII Master	1) MB3000	-	-	4101/5111	5118	-	-	-	-	-	MB3000/5109	5105/5109	5105	5105	5103	5109	5109	5114	-	-	-	-
PROFIBUS Slave	-	-	-	-	-	-	-	-	-	-	5101	5101	-	-	5102	-	-	-	-	-	-	-
PROFIBUS Master	4101/5111	4101/5111	-	-	-	-	-	-	-	-	5111	5111	-	5111	5111	-	-	-	-	-	-	-
J1939	5118	5118	-	-	-	-	-	-	-	-	5118	5118	5118	5118	5118	-	-	-	-	-	-	-
DNP3 Serial Outstation	-	-	-	-	-	-	-	-	-	-	-	5109	-	-	-	-	5109	-	-	-	-	5119
DNP3 Serial Master	-	-	-	-	-	-	-	-	-	-	5109	5109	-	-	-	5109	-	-	-	-	-	-
DF1	-	-	-	-	-	-	-	-	-	-	-	-	EIP3000	EIP3000	-	-	-	-	-	-	-	-
IEC 60870-5-101 Slave	-	-	-	-	-	-	-	-	-	-	-	5114	-	-	-	-	-	-	5114	-	-	5119
IEC 60870-5-101 Master	-	-	-	-	-	-	-	-	-	-	5114	-	-	-	-	-	-	5114	-	-	-	-
Modbus TCP Server	5105	MB3000/5109	5101	5111	5118	-	5109	-	-	5114	-	-	5105	5105	5103	-	5109	-	5114	5105	5217	5119
Modbus TCP Client	MB3000/5109	5105/5109	5101	5111	5118	5109	5109	-	5114	-	-	5109	5105	5105	5103	5109	5109	5114	-	-	-	-
EtherNet/IP Adapter	5105	5105	-	-	5118	-	-	EIP3000	-	-	5105	5105	-	-	-	-	-	-	-	-	5105	-
EtherNet/IP Scanner	5105	5105	-	5111	5118	-	-	EIP3000	-	-	5105	5105	-	-	5103	-	-	-	-	-	-	-
PROFINET Controller	5103	5103	5102	5111	5118	-	-	-	-	-	5103	5103	-	5103	-	-	-	-	-	-	-	-
DNP3 TCP Outstation	-	5109	-	-	-	-	5109	-	-	-	-	5109	-	-	-	-	-	-	-	-	-	5119
DNP3 TCP Client	5109	5109	-	-	-	5109	-	-	-	-	5109	5109	-	-	-	-	-	-	-	-	-	-
IEC 60870-5-104 Server	-	5114	-	-	-	-	-	-	-	5114	-	5114	-	-	-	-	-	-	-	-	-	5119
IEC 60870-5-104 Client	5114	-	-	-	-	-	-	-	5114	-	5114	-	-	-	-	-	-	-	-	-	-	-
MQTT Broker	5105	-	-	-	-	-	-	-	-	-	5105	-	5105	-	-	-	-	-	-	-	-	-
BACnet/IP Client	5217	-	-	-	-	-	-	-	-	-	5217	-	-	-	-	-	-	-	-	-	-	-
IEC 61850 MMS Client	5119	-	-	-	-	5119	-	-	5119	-	5119	-	-	-	-	5119	-	5119	-	-	-	-

1) Applies only to the MB3270/3660.

