

Moxa Managed Switch Next-generation OS (v3.x) Layer 2 User Manual

Version 1.0, July 2022

www.moxa.com/products

Models covered by this user's manual:

MDS-G4000-4XGS Series Managed Ethernet Switches

MDS-G4000-L3-4XGS Series Managed Ethernet Switches

RKS-G4000 Series Managed Ethernet Switches



© 2022 Moxa Inc. All rights reserved.

Moxa's Managed Switch Next-generation OS (v3.x) Layer 2 User Manual

The software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

Copyright Notice

© 2022 Moxa Inc. All rights reserved.

Trademarks

The MOXA logo is a registered trademark of Moxa Inc.
All other trademarks or registered marks in this manual belong to their respective manufacturers.

Disclaimer

- Information in this document is subject to change without notice and does not represent a commitment on the part of Moxa.
- Moxa provides this document as is, without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. Moxa reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.
- Information provided in this manual is intended to be accurate and reliable. However, Moxa assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.
- This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

Technical Support Contact Information

www.moxa.com/support

Table of Contents

| | |
|--|-----------|
| 1. About This Manual | 5 |
| Symbols for the Meanings in the Web Interface Configurations | 6 |
| About Note, Attention, and Warning | 7 |
| Configuration Reminders | 8 |
| A: About Mandatory Parameters..... | 8 |
| B: Configurations before Enable/Disable..... | 8 |
| 2. Getting Started | 9 |
| Log in by Web Interface..... | 9 |
| Connecting to the Switch..... | 10 |
| Log in by RS-232 Console | 11 |
| Log in by Telnet..... | 13 |
| 3. Web Interface Configuration | 16 |
| Function Introduction | 16 |
| Device Summary | 17 |
| Model Information | 17 |
| Panel Status | 18 |
| Event Summary (Last 3 Days) | 19 |
| CPU Utilization History | 20 |
| System..... | 21 |
| System Management | 21 |
| Account Management..... | 34 |
| Time | 40 |
| System Time | 41 |
| NTP Server..... | 45 |
| Time Synchronization..... | 46 |
| Port | 50 |
| Port Interface | 50 |
| Link Aggregation | 54 |
| PoE..... | 57 |
| Layer 2 Switching | 65 |
| VLAN | 65 |
| GARP Overview | 73 |
| MAC | 75 |
| QoS..... | 77 |
| Multicast | 92 |
| Network Redundancy | 100 |
| Layer 2 Redundancy | 100 |
| Management | 123 |
| Network Management | 123 |
| Security..... | 127 |
| Device Security | 127 |
| Management Interface | 127 |
| Network Security | 136 |
| IEEE 802.1X | 136 |
| Loop Protection | 159 |
| Authentication | 160 |
| Login Authentication | 161 |
| Diagnostics | 166 |
| System Status | 166 |
| Log & Event Notification | 172 |
| Diagnosis | 189 |
| Industrial Applications | 197 |
| General Settings | 197 |
| Security Settings..... | 199 |
| Maintenance and Tools | 202 |
| Standard/Advanced Mode..... | 202 |
| Disable Auto Save | 203 |
| Reboot..... | 205 |

| | | |
|-----------|---------------------------------------|------------|
| | Reset to Default | 206 |
| | Log Out of the Switch | 207 |
| A. | Account Privileges List..... | 208 |
| | Account Privileges List..... | 208 |
| B. | Event Log Description..... | 210 |
| | Event Log Description..... | 210 |
| C. | SNMP MIB File | 214 |
| | Standard MIB Installation Order | 214 |
| | MIB Tree | 214 |
| D. | Security Guidelines..... | 216 |
| | Installation | 216 |
| | Physical Installation | 216 |
| | Account Management..... | 216 |
| | Vulnerable Network Ports | 217 |
| | Operation | 217 |
| | Maintenance | 219 |
| | Decommission..... | 219 |

1. About This Manual

Thank you for purchasing Moxa's managed switch. Read this user's manual to learn how to connect your Moxa switch with various interfaces and how to configure all settings and parameters via the user-friendly web interface.

Three methods can be used to connect to the Moxa's switch, which all will be described in the next two chapters. See the following descriptions for each chapter's main functions.

Chapter 2: Getting Started

In this chapter, we explain the instruction on how to initialize the configuration on Moxa's switch. We provide three interfaces to access the configuration settings: RS-232 console interface, telnet interface, and web interface.

Chapter 3: Web Interface Configuration

In this chapter, we explain how to access a Moxa switch's various configuration, monitoring, and management functions. The functions can be accessed by web browser. We describe how to configure the switch functions via web interface, which provides the most user-friendly way to configure a Moxa switch.

Appendix A: Account Privileges List

This appendix describes the read/write access privileges for different accounts on Moxa's Managed Ethernet Series switch.

Appendix B: Event Log Description

In this appendix, users can check the event log name and its event log description. When any event occurs, this appendix helps users quickly check the detailed definition for each event.

Appendix C: SNMP MIB File

This appendix contains the SNMP MIB files so that users can manage the entities in a network with Moxa's switch.

Symbols for the Meanings in the Web Interface Configurations

The Web Interface Configuration includes various symbols. For your convenience, refer to the following table for the meanings of the symbols.

| Symbols | Meanings |
|---|---|
|  | Add |
|  | Read detailed information |
|  | Clear all |
|  | Column selection |
|  | Refresh |
|  | Enable/Disable Auto Save When Auto Save is disabled, users need to click this icon to save the configurations. |
|  | Export* |
|  | Edit |
|  | Re-authentication |
|  | Delete |
|  | Panel View |
|  | Expand |
|  | Collapse |
|  | Hint Information |
|  | Settings |
|  | Data Comparison |
|  | Menu icon |
|  | Change mode |
|  | Locator |
|  | Reboot |
|  | Reset to default |
|  | Logout |
|  | Increase |
|  | Decrease |
|  | Equal |
|  | Menu |
|  | Search |

*The **Export** function helps users save the current configurations or information for the specific functions. It is located on the upper part of the configuration area. There are two formats available: **CSV**, or **PDF**. Select the format and save in your local computer.



About Note, Attention, and Warning

Throughout the whole manual, users will see some notes, attentions, and warnings. Here are the explanations for each definition.

Note: It indicates the additional explanations for the situation that users might encounter. Here is the example:



NOTE

By default, the password assigned to the Moxa switch is moxa. Be sure to change the default password after you first log in to help keep your system secure.

Attention: It indicates the situations where users might take some extra care or it might bring some problems. Here is the example:



ATTENTION

When a different type of module has been inserted into the switch, we suggest you configure the settings, or use reset-to-default.

Warning: It indicates the situations where users need to pay particular attention to, or it might bring serious damage to the system or the switch. Here is an example:




WARNING

There is a risk of explosion if the battery is replaced by an incorrect type.

Configuration Reminders

In this section, several examples will be used to remind users when configuring the settings for Moxa's switch.

A: About Mandatory Parameters

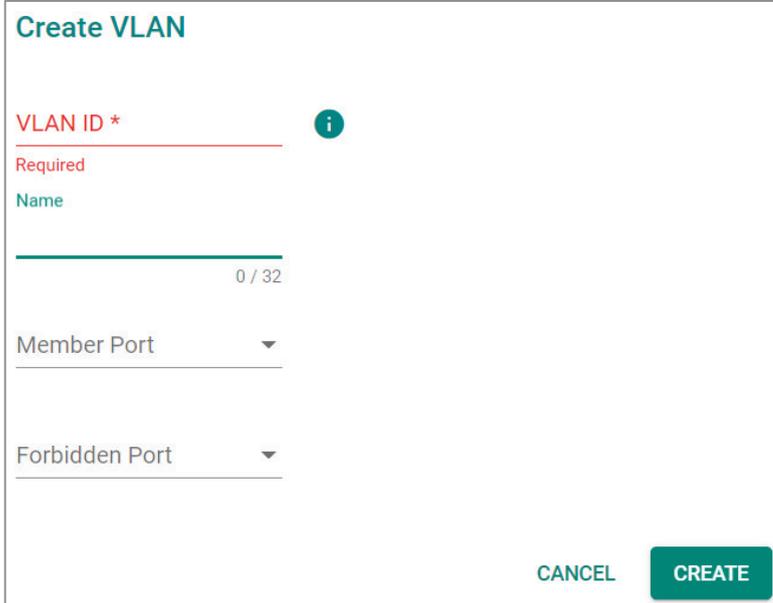


1. The items with asterisks mean they are mandatory parameters that must be provided. In the figure above, the parameters for VLAN, Version, and Query Interval all need to be provided, or it will not be created or applied.
2. If the item is marked with red it means this item has been skipped. You need to fill in the parameters or you cannot apply or create the function.

In addition, some parameter values will be limited to a specific range. If the values exceed the range, it cannot be applied or created.

B: Configurations before Enable/Disable

In another situation, some settings can be configured first, but remain disabled. Users can decide to enable them when necessary without configuring the same settings again. This is particularly convenient and user-friendly when configuring various settings. For example, in Spanning Tree configuration page, users can configure the Guard settings first, but later select to disable the Guard settings in the General tab. When users decide to enable the Guard settings, they only need to select Enable in General settings, so that the Guard setting can be enabled at the same time.

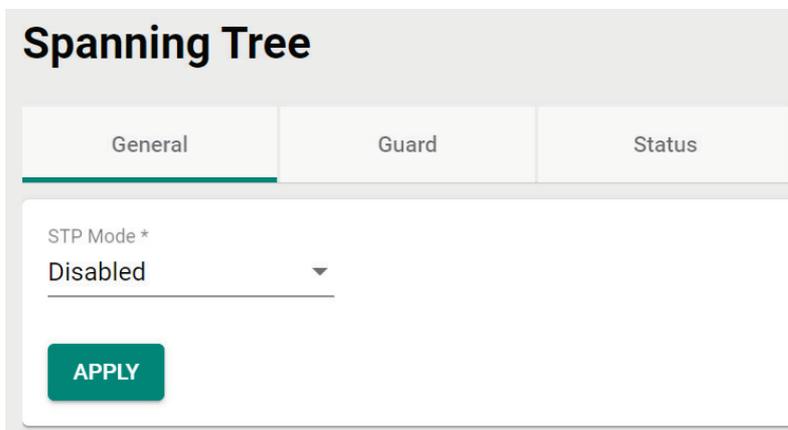

2. Getting Started


In this chapter, we explain how to log in a Moxa's switch for the first time. There are three ways to access the Moxa switch's configuration settings: RS-232 console, or web-based interface.

Log in by Web Interface

You can directly connect a Moxa switch to your computer with a standard network cable or install your computer on the same intranet as your switch. You will then need to configure your computer's network settings. The default IP address for a Moxa switch is:

192.168.127.253

For example, you can configure the computer's IP setting as **192.168.127.99**, and the subnet mask as 255.255.255.0.

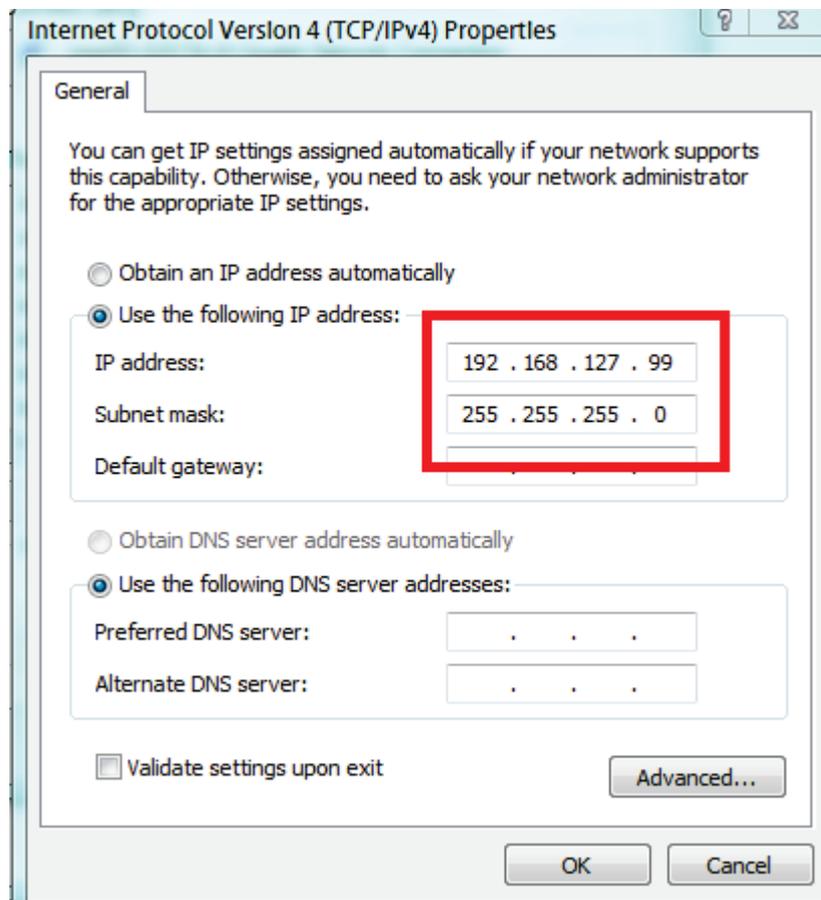

Click **OK** when finished.

Connecting to the Switch

Open a browser, such as Google Chrome, Internet Explorer 11, or Firefox, and connect to the following IP address:

https://192.168.127.253



NOTE

To enhance network security, all HTTP connections will be automatically redirected to HTTPS connections. In addition, when a web browser displays a warning message because a certificate has not been signed by a certification authority, you may add an exception rule for that certificate in the web browser or use a custom certificate to continue. Please go to the following: Security > Device Security > SSH & SSL > SSL

The default username and password are:

Username: **admin**

Password: **moxa**

Click **LOG IN** to continue. If you have logged in before, you will see a screen indicating the previous login information. Click **CLOSE**.



Another system message will appear, reminding you to change the default password. We recommend that you change your password, or a message will appear whenever you log in telling you to change your password. You can change the password in the **Account Management** section. Click **CLOSE** to continue.

Change Default Password

Please change the default username and password in order to enhance security.

CLOSE


Log in by RS-232 Console

The Moxa's managed switch offers a serial console port, allowing users to connect to the switch and configure the settings. Do the following steps for the serial connection and configuration.


1. Prepare an RS-232 serial cable with an RJ45 interface.
2. Connect the RJ45 interface end to the console port on the switch, and the other end to the computer.
3. We recommend you use **PComm Terminal Emulator** for serial communication. The software can be downloaded free of charge from Moxa's website.

After installing PComm Terminal Emulator, access the Moxa switch's console as follows:


4. From the Windows desktop, click **Start → Moxa → PComm Terminal Emulator**.

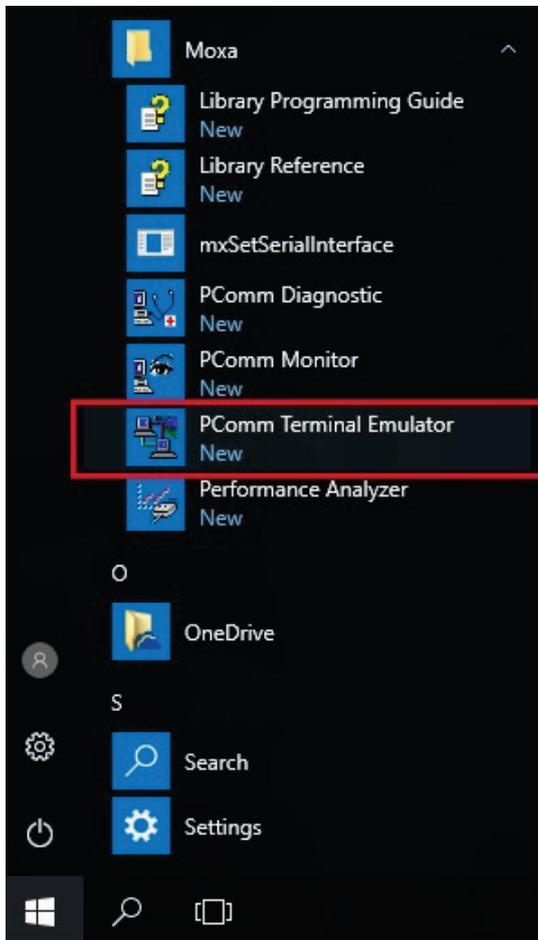


5. Select **Open** under the **Port Manager** menu to open a new connection.

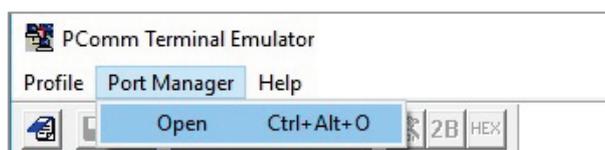


- The **Property** window should open. On the **Communication Parameter** tab for **Ports**, select the COM port that is being used for the console connection. Set the other fields as follows: **115200** for **Baud Rate**, **8** for **Data Bits**, **None** for **Parity**, and **1** for **Stop Bits**.

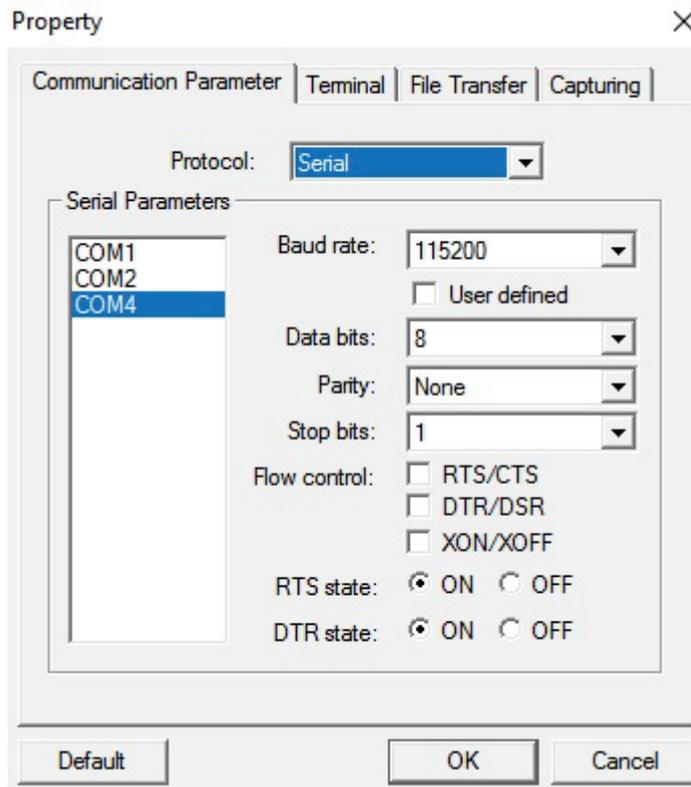

- On the **Terminal** tab, select **VT100** for **Terminal Type**, and then click **OK** to continue.

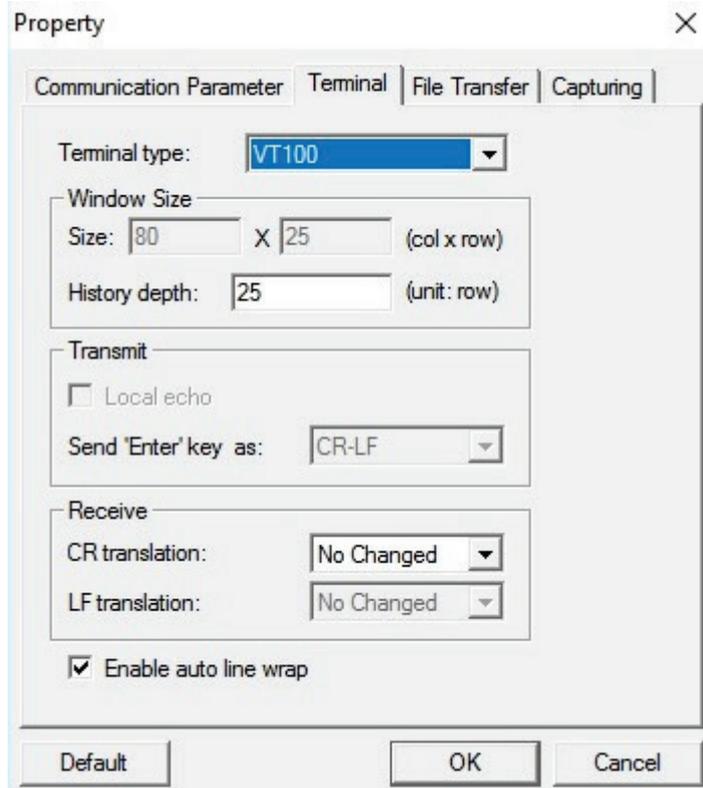

- The console will prompt you to log in. The default login name is **admin**, and the default password is **moxa**. This password will be required to access any of the consoles (web, serial, Telnet).

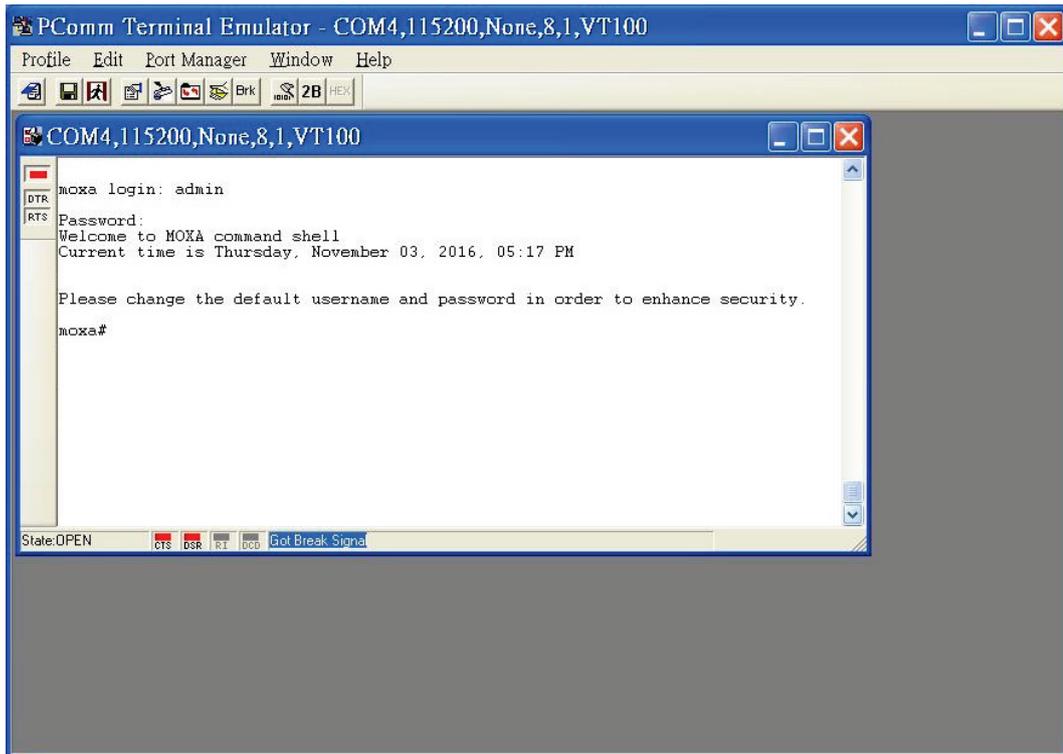

- After successfully connecting to the switch by serial console, you can start configuring the switch's parameters by using command line instructions. Refer to the **Moxa Command Line Interface Manual** for details.



NOTE

By default, the password assigned to the Moxa switch is **moxa**. Be sure to change the default password after you first log in to help keep your system secure.

Log in by Telnet

Opening the Moxa switch's Telnet or web console over a network requires that the PC host and Moxa switch are on the same logical subnet. You might need to adjust your PC host's IP address and subnet mask. By default, the Moxa switch's IP address is 192.168.127.253 and the Moxa switch's subnet mask is 255.255.255.0. Your PC's IP address must be set to 192.168.xxx.xxx if the subnet mask is 255.255.0.0, or to 192.168.127.xxx if the subnet mask is 255.255.255.0.



NOTE

When connecting to the Moxa switch's Telnet or web console, first connect one of the Moxa switch's Ethernet ports to your Ethernet LAN, or directly to your PC's Ethernet port. You can use either a straight-through or cross-over Ethernet cable.




NOTE


The Moxa switch's default IP address is 192.168.127.253.

After making sure that the Moxa switch is connected to the same LAN and logical subnet as your PC, open the Moxa switch's Telnet console as follows:


10. Click **Start** → **Run** from the Windows Start menu and then Telnet to the Moxa switch's IP address from the Windows **Run** window. You can also issue the Telnet command from a DOS prompt.

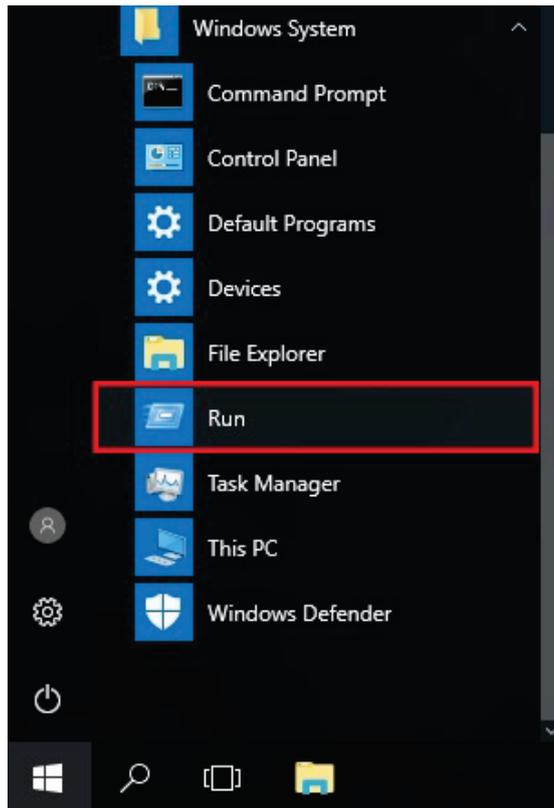

11. Next, use Telnet to connect the Moxa switch's IP address (192.168.127.253) from the Windows **Run** window. You can also issue the Telnet command from a DOS prompt.

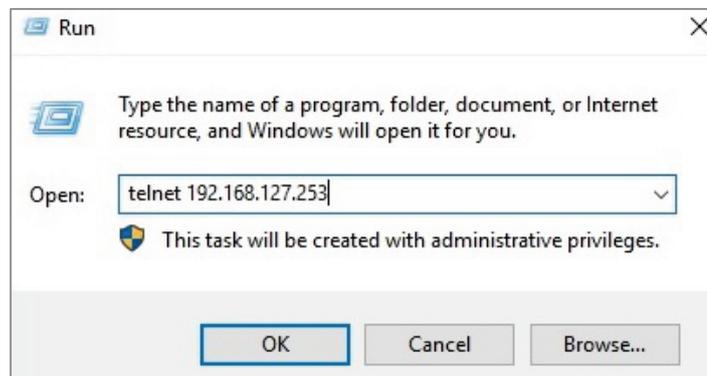

12. The Telnet console will prompt you to log in. The default login name is **admin**, and the password is **moxa**. This password will be required to access any of the consoles (web, serial, Telnet).

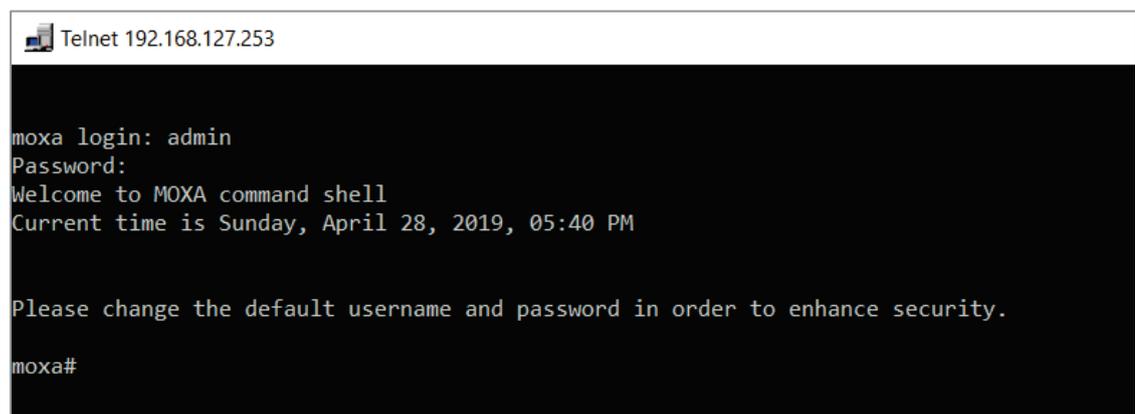

13. After successfully connecting to the switch by Telnet, users can start configuring the switch parameters by using command line instructions. Refer to the **Moxa Command Line Interface Manual**.



NOTE


By default, the password assigned to the Moxa switch is moxa. Be sure to change the default password after you first log in to help keep your system secure.

3. Web Interface Configuration

Moxa’s managed switch offers a user-friendly web interface for easy configurations. Users find it simple to configure various settings over the web interface. All configurations for the Moxa’s managed switch can be easily set up and done via this web interface, essentially reducing system maintenance and configuration effort.

Function Introduction


This section describes the web interface design, providing a basic visual concept for users to understand the main information or configuration menu for the web interface pages.

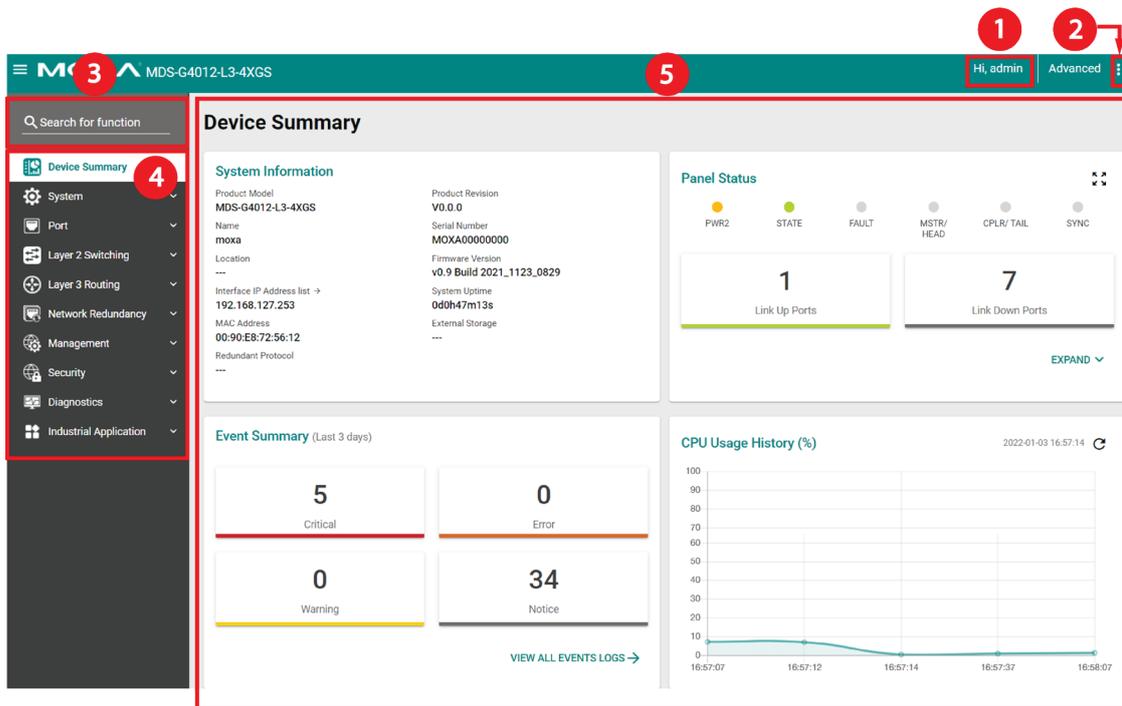

1. **Login Name:** It shows the role of the login name.
2. **Configuration Mode:** Two modes can be shown: **Standard Mode** and **Advanced Mode**.
 - **Standard Mode:** Some of the features and parameters will be hidden to make the configurations simpler (default).
 - **Advanced Mode:** More features and parameters will be shown for users to configure detailed settings.
3. **Search Bar:** Type the items you want to search of the function menu tree.
4. **Function Menu:** All functions of the switch are shown here. Click the function you want to view or configure.
5. **Device Summary:** All important device information of the functions will be shown here.

Device Summary

After successfully connecting to the switch, the **Device Summary** will automatically appear. You can view the whole web interface on the screen. If you are in the middle of performing configurations, simply click **Device Summary** on the Function Menu and you can view the detailed information of the switch.

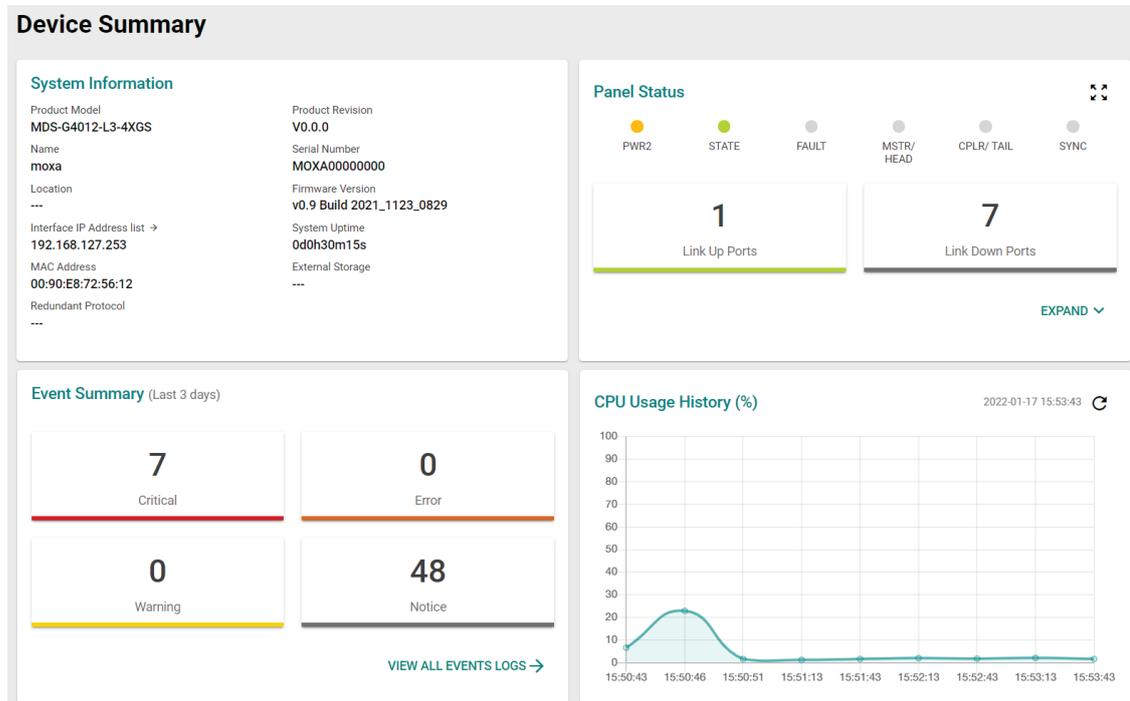

See the following sections for detailed descriptions for the specific items.


Model Information

This shows the model information, including product model name, serial number, firmware version, system uptime, etc.




Panel Status

This section illustrates the panel status. For example, the connecting ports will be shown in green, while the disconnected ports will be shown in gray. Click **Expand** to view more detailed information on the panel status and click **Collapse** to return.

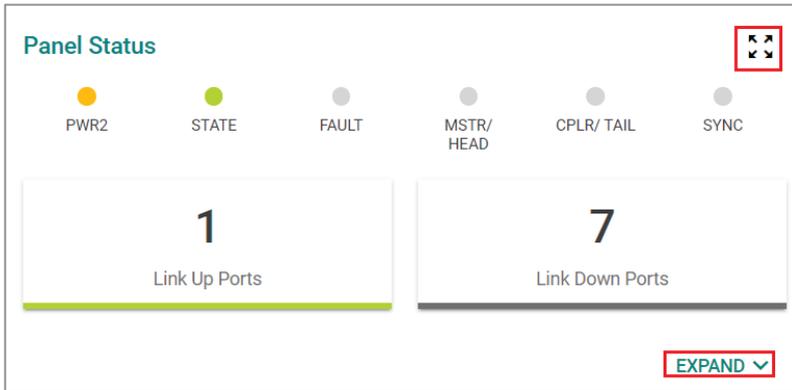


Click **Expand** to view more detailed information on the panel status and click **Collapse** to return.

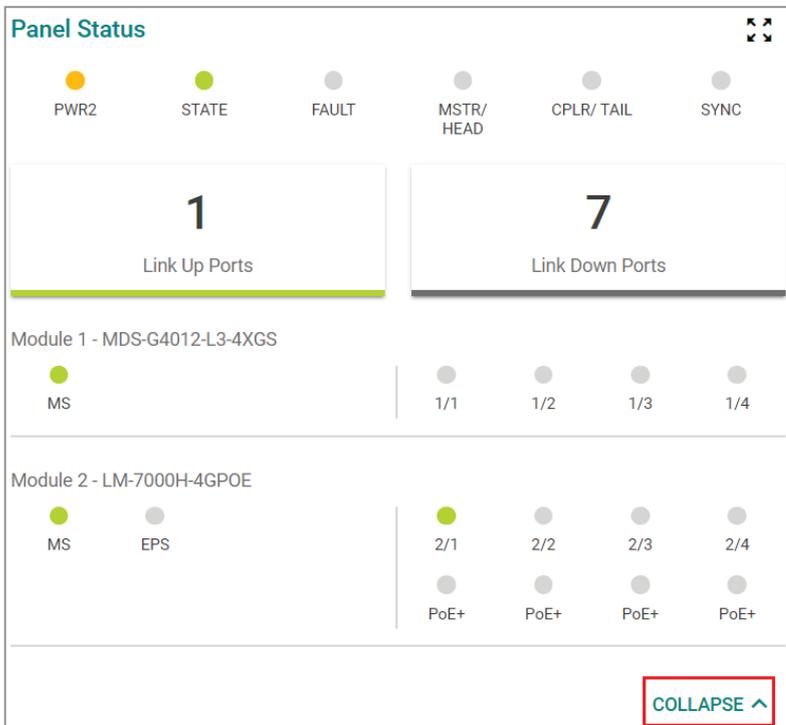

Panel View


By clicking this icon, , users can view the device port status by a graphic figure. Click the  icon on the upper right corner to return to the main page.

This panel view figure might vary, depending on the different modules that you purchase.

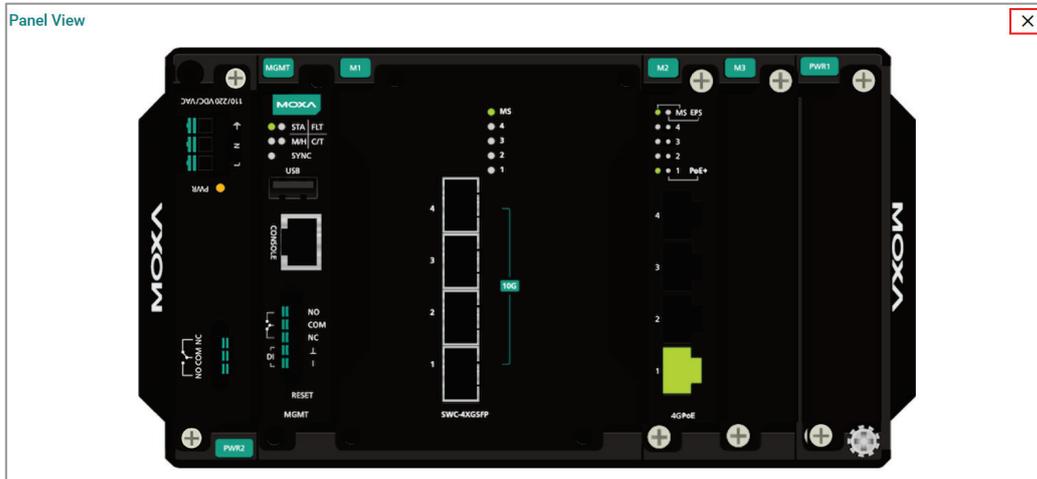

Event Summary (Last 3 Days)

This section shows the event summary for the past three days.

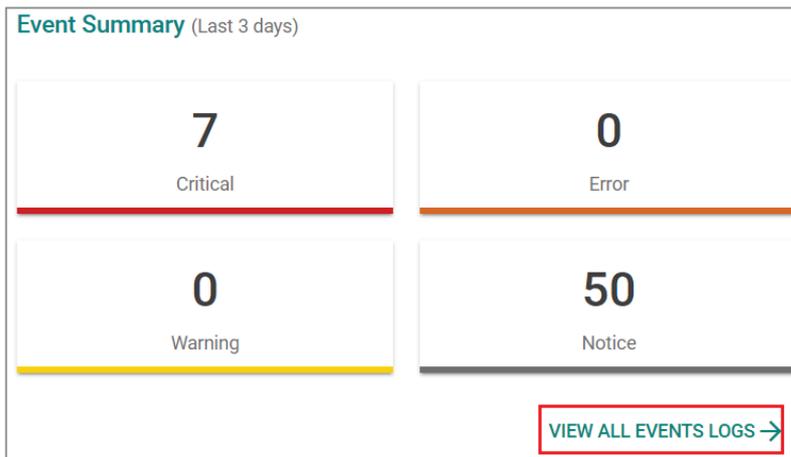

Click **VIEW ALL EVENT LOGS** to go to the Event Log page, where you can view all event logs.

Event Log

Event Log Oversize-Action Backup


🔄 🗑️ 📄 🔍 Search

| Index | Bootup Number | Severity | Timestamp | Uptime | Message |
|-------|---------------|----------|---------------------|------------|---|
| 1 | 12 | Notice | 2018-12-21 19:15:18 | 0d0h21m52s | [Account:admin] successfully logged in via local. |
| 2 | 12 | Notice | 2018-12-21 18:59:25 | 0d0h5m59s | [Account:admin] logged out. |
| 3 | 12 | Notice | 2018-12-21 18:59:06 | 0d0h5m40s | [Account:system] logged out. |
| 4 | 12 | Critical | 2018-12-21 18:54:16 | 0d0h0m50s | System has performed a cold start. |
| 5 | 12 | Notice | 2018-12-21 18:54:14 | 0d0h0m48s | [Account:admin] successfully logged in via local. |
| 6 | 12 | Notice | 2018-12-21 18:53:59 | 0d0h0m33s | Interface vlan1 up. |
| 7 | 12 | Notice | 2018-12-21 18:53:59 | 0d0h0m33s | Port 2/1 link up. |
| 8 | 11 | Notice | 2018-12-21 19:18:52 | 0d0h25m27s | [Account:admin] logged out. |

For Event Log settings, refer to **Event Log** under the **Diagnosis** section.


CPU Utilization History

This section shows the CPU usage. The data will be shown as a percentage over time. Click the 🔄 icon on the page to show the latest information.

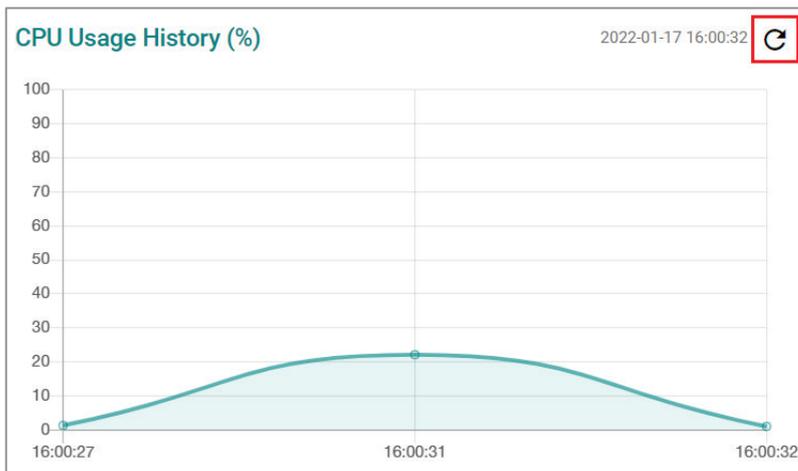


System

Click **System** on the function menu. You can configure the **System Management**, **Account Management**, **Network**, and **Time** configurations.

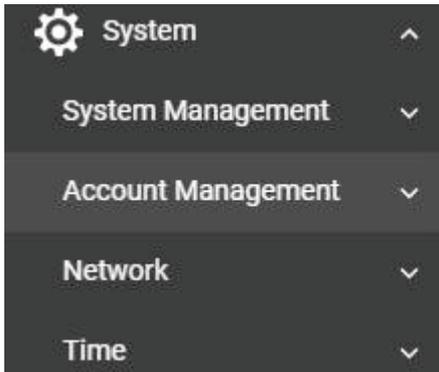

System Management

Click **System Management**, four functions can be configured under this section: **Information Setting**, **Firmware Upgrade**, and **Configure Backup and Restore**.

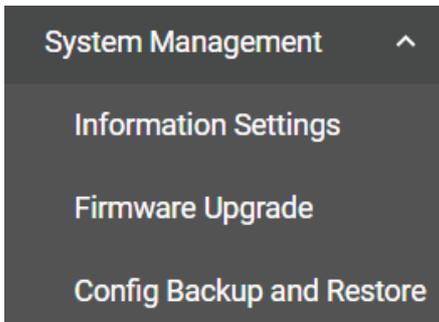

Information Setting

Define **Information Setting** items to make it easier to identify different switches that are connected to your network.

Information Settings

Device Name *
moxa
4 / 64

Location
0 / 255

Description
0 / 255

Contact Information
0 / 255

APPLY

Device Name

| Setting | Description | Factory Default |
|--------------------|--|-----------------|
| 1 to 64 characters | This option is useful for differentiating between the roles or applications of different units. Note that the device name cannot be empty. | moxa |



NOTE

The Device Name field follows the PROFINET I/O naming rule. The name can only include the following characters, **a-z/0-9/-**. The prefix cannot start from port-x where x=0~9.

Location

| Setting | Description | Factory Default |
|---------------------|---|-----------------|
| Max. 255 characters | This option is for differentiating between the locations of different switches. Example: production line 1. | None |

Description

| Setting | Description | Factory Default |
|---------------------|---|-----------------|
| Max. 255 characters | This option is for recording a more detailed description of the unit. | None |

Contact Information

| Setting | Description | Factory Default |
|---------------------|---|-----------------|
| Max. 255 characters | Users can input contact information such as email address, or telephone number when problems occur. | None |


When finished, click **APPLY** to save your changes.

Firmware Upgrade

There are three ways to update your Moxa switch's firmware: from a local *.rom file, by remote SFTP server, and remote TFTP server.

Local

Select **Local** from the drop-down list under **Method**.

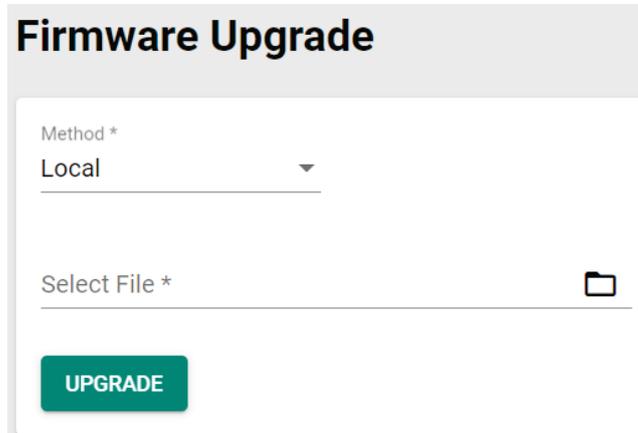

Firmware Upgrade

Method *
Local

Select File *

UPGRADE

Select File


Before performing firmware upgrade, download the updated firmware (*.rom) file first from Moxa's website (www.moxa.com).

| Setting | Description | Factory Default |
|-----------------------------|--|-----------------|
| Select the firmware file | Select the firmware file from the location where the updated firmware is located. | None |
| Browse for the (*.rom) file | This option allows users to select the updated firmware file and perform the firmware upgrade. | None |

When finished, click **UPGRADE** to perform the firmware upgrade.

TFTP Server

Click **TFTP** from the drop-down list under **Method**.

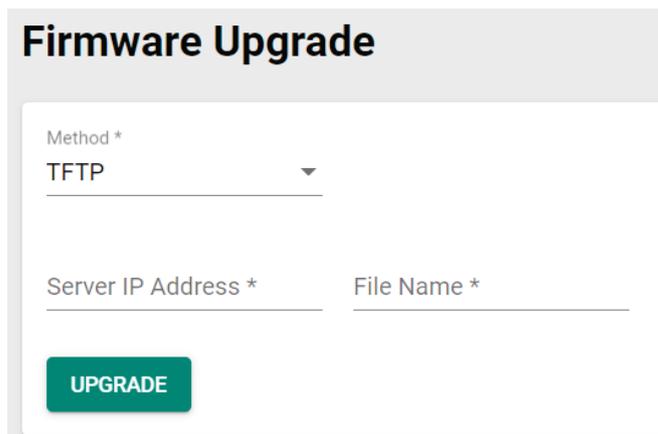

Firmware Upgrade

Method *
TFTP

Server IP Address * File Name *

UPGRADE

Server IP Address

| Setting | Description | Factory Default |
|---|---|-----------------|
| Input the IP address of the TFTP server | Input the IP address of the TFTP server where the new firmware file (*.rom) is located. | None |

File Name

| Setting | Description | Factory Default |
|-------------------------------------|--|-----------------|
| Input the file name of the firmware | Input the file name of the new firmware. | None |

When finished, click **UPGRADE** to perform the firmware upgrade.

SFTP

Select **SFTP** from the drop-down list under **Method**.

Firmware Upgrade

Method *
SFTP

Server IP Address * File Name *

Account * Password * 

UPGRADE

Server IP Address

| Setting | Description | Factory Default |
|--|---|-----------------|
| Input the IP address of the SFTP server. | Input the server IP address of the computer where the new firmware file (*.rom) is located. | None |

File Name

| Setting | Description | Factory Default |
|-------------------------------------|--|-----------------|
| Input the file name of the firmware | Input the file name of the new firmware. | None |

Account

| Setting | Description | Factory Default |
|--------------------------------------|--|-----------------|
| Input the account of the SFTP server | The account must be authorized in order for the SFTP Server to have a secure connection. | None |


Password

| Setting | Description | Factory Default |
|--|--|-----------------|
| Input the password for the SFTP server | The account has to be specified in order to authorize the SFTP Server for secure connection. | None |

When finished, click **UPGRADE** to perform the firmware upgrade. The switch will reboot automatically and perform the firmware upgrade.

USB

You can upgrade the firmware via Moxa's USB-based ABC-02 configuration tool. Connect the ABC-02 to the switch and select **USB** from the drop-down list under **Method**.

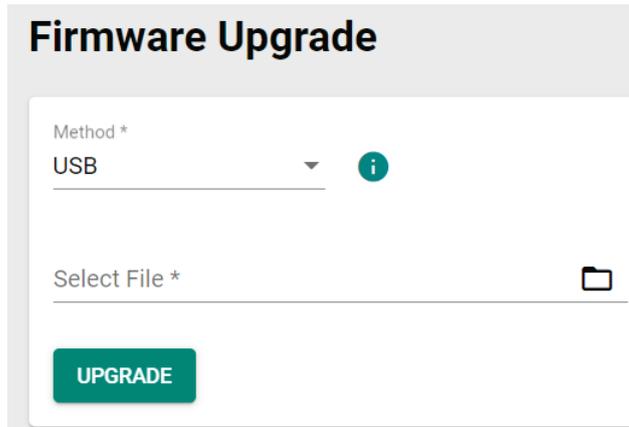

The screenshot shows a web interface for firmware upgrade. At the top, there's a header 'Firmware Upgrade'. Below it, there's a form with a 'Method *' dropdown menu set to 'USB'. To the right of the dropdown is a blue information icon. Below the dropdown is a 'Select File *' field with a folder icon. At the bottom of the form is a green button labeled 'UPGRADE'.

Select File

Before performing the firmware upgrade, download the latest firmware (*.rom) file first from Moxa's website (www.moxa.com).

| Setting | Description | Factory Default |
|-----------------------------|--|-----------------|
| Select the firmware file | Select the firmware file from the location where the updated firmware is located. | None |
| Browse for the (*.rom) file | This option allows users to select the updated firmware file and perform the firmware upgrade. | None |

When finished, click **UPGRADE** to perform the firmware upgrade.



Note

If you have difficulty using the ABC-02 configuration tool, check if the **USB Function** has been enabled in the **Hardware Interface** section.

Configuration Backup and Restore

Backup

Click the **Backup** tab first.

Configuration Backup and Restore

Backup Restore File Encryption File Signature

Method *
Local

Configuration Selection *
Running Configuration

Default Configuration *
Not Included

BACKUP

There are four ways to back up the configurations of your Moxa switch: from a local configuration file, by remote SFTP server, by remote TFTP server, or by a USB tool.

Local

Select **Local** from the drop-down list under **Method**. Configure the following settings.

Configuration Selection

| Setting | Description | Factory Default |
|-----------------------|-------------------------------------|-----------------|
| Running Configuration | Back up the running configuration. | Running |
| Startup Configuration | Back up the start-up configuration. | Configuration |

Default Configuration

| Setting | Description | Factory Default |
|--------------|---|-----------------|
| Not Included | Back up the configuration without default settings. | Not Included |
| Included | Back up the configuration with default settings. | |

TFTP Server

Select **TFTP** from the drop-down list under **Method**.

Configuration Backup and Restore

Backup Restore File Encryption File Signature

Method
TFTP

Server IP Address * File Name *

BACKUP

Server IP Address

| Setting | Description | Factory Default |
|---|--|-----------------|
| Input the IP address of the TFTP server | Users can input the IP address of the TFTP server. | None |

File Name

| Setting | Description | Factory Default |
|---|---|-----------------|
| Input the backup file name (supports up to 54 characters, including the .ini file extension). | Users can input the file name to back up the system configuration file. | None |

When finished, click **BACKUP** to back up the system configuration file.

SFTP Server

Select **SFTP** from the drop-down list under **Method**.

Configuration Backup and Restore

Backup Restore File Encryption File Signature

Method
SFTP

Server IP Address * File Name *

Account * Password * 

BACKUP

Server IP Address

| Setting | Description | Factory Default |
|---|---|-----------------|
| Input the IP address of the SFTP server | Input the IP address of the SFTP server where the new firmware file (*.rom) is located. | None |

File Name

| Setting | Description | Factory Default |
|--|---|-----------------|
| Input the backup file name (support up to 54 characters, including the .ini file extension). | Input the file name of the configuration backup file. | None |

Account

| Setting | Description | Factory Default |
|--------------------------------------|---|-----------------|
| Input the account of the SFTP server | An account must be provided to authorize the SFTP server for secure connection. | None |


Password

| Setting | Description | Factory Default |
|---|---|-----------------|
| Input the passwords for the SFTP server | The password has to be specified in order to authorize the SFTP Server for secure connection. | None |

When finished, click **BACKUP** to back up the system configuration file.

USB

Select **USB** from the drop-down list under **Method**.

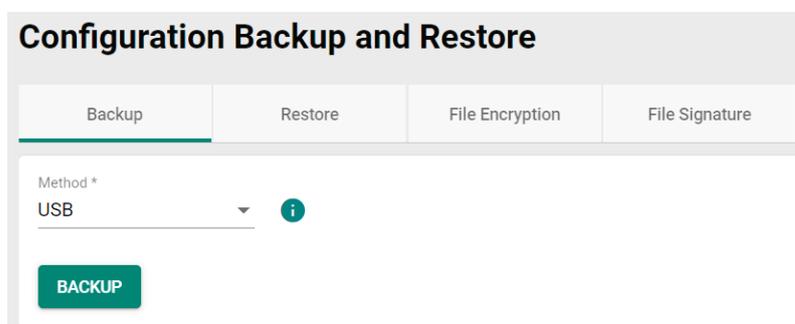

Insert Moxa's ABC-02 USB-based configuration tool into the USB port of the switch, click **BACKUP** to back up the system configuration file.




Note

If you have difficulty using the ABC-02 configuration tool, check if the **USB Function** has been enabled in the **Hardware Interface** section.

Automatic Backup of Configurations

To enable automatic backup, select **Enabled** from the drop-down list. Click **APPLY** to back up the system configuration file automatically.

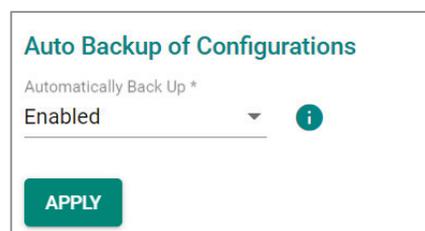

Restore

First, click the **Restore** tab.

Configuration Backup and Restore

Backup **Restore** File Encryption File Signature

Method *
Local

Select File * 

RESTORE

There are four ways to restore the configurations of your Moxa switch: from a local configuration file, by remote SFTP server, by remote TFTP server, or by a USB tool.

Local

Select **Local** from the drop-down list under **Method**.

Select File

| Setting | Description | Factory Default |
|---|---|-----------------|
| Browse for a configuration file on a local disk | Select the configuration file and perform system restoration. | None |

When finished, click **RESTORE** to restore the system configuration file.

TFTP Server

Select **TFTP** from the drop-down list under **Method**.

Configuration Backup and Restore

Backup Restore File Encryption File Signature

Method *
TFTP

Server IP Address * File Name *

RESTORE

Server IP Address

| Setting | Description | Factory Default |
|---|--|-----------------|
| Input the IP address of the TFTP server | Users can input the IP address of the TFTP server. | None |

File Name

| Setting | Description | Factory Default |
|--|---|-----------------|
| Input the restore file name (supports up to 54 characters, including the .ini file extension). | Users can input the file name to restore the system configuration file. | None |

When finished, click **RESTORE** to restore the system configuration file.

SFTP Server

Select **SFTP** from the drop-down list under **Method**.

Configuration Backup and Restore

Backup Restore File Encryption File Signature

Method
SFTP

Server IP Address * File Name *

Account * Password * 

RESTORE

Server IP Address

| Setting | Description | Factory Default |
|---|---|-----------------|
| Input the IP address of the SFTP server | Input the IP address of the SFTP server where the new firmware file (*.rom) is located. | None |

File Name

| Setting | Description | Factory Default |
|--|--|-----------------|
| Input the restore file name (supports up to 54 characters, including the .ini file extension). | Input the file name of the configuration restoration file. | None |

Account

| Setting | Description | Factory Default |
|--------------------------------------|---|-----------------|
| Input the account of the SFTP server | An account must be provided to authorize the SFTP server for secure connection. | None |


Password

| Setting | Description | Factory Default |
|---|---|-----------------|
| Input the passwords for the SFTP server | The password has to be specified in order to authorize the SFTP Server for secure connection. | None |

When finished, click **RESTORE** to restore the system configuration file.

USB

Select **USB** from the drop-down list under **Method**.

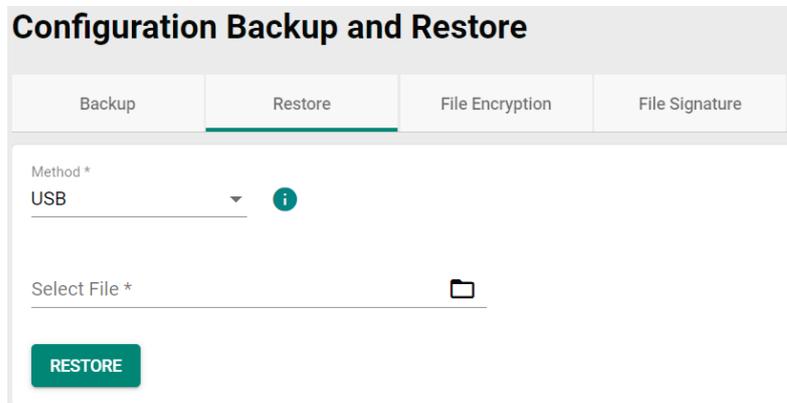

Configuration Backup and Restore

Backup | **Restore** | File Encryption | File Signature

Method *
USB

Select File *

RESTORE

Insert Moxa's ABC-02 USB-based configuration tool into the USB port of the switch, click **RESTORE** to restore the system configuration file.




Note

If you have difficulty using ABC-02 tool, check if **USB Function** has been enabled in **Hardware Interface** section.

Auto Load of Configurations

To enable automatic configuration restore, select **Enabled** from the drop-down list. Click **APPLY** to restore the system configuration file automatically.

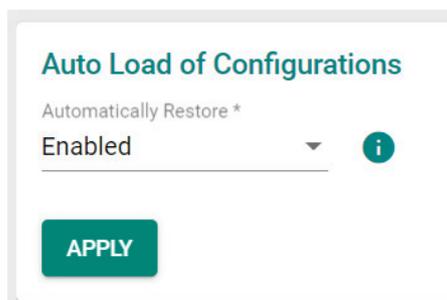

Auto Load of Configurations

Automatically Restore *
Enabled

APPLY

File Encryption

To encrypt the configuration file, click the **File Encryption** tab first.

Configuration Backup and Restore

Backup
Restore
File Encryption
File Signature

Configuration File Encryption *

Disabled ▼

Password 🔒

..... 0 / 60

APPLY

Configuration File Encryption

| Setting | Description | Factory Default |
|----------|---|-----------------|
| Enabled | Enable the configuration file to be encrypted. | Disabled |
| Disabled | Disable the feature that allows the configuration file to be encrypted. | |

Password

| Setting | Description | Factory Default |
|-----------------------------------|---|-----------------|
| 4 to 16 characters, numbers only. | Input the password when users encrypt the configuration file. | None |

When finished, click **APPLY** to save your changes.

File Signature

Click **File Signature** tab to see additional configuration options. Enabling the file signature can ensure file integrity and authenticity.

Configuration Backup and Restore

Backup
Restore
File Encryption
File Signature

Signed config *

Disabled ▼ i

APPLY

+

| Key | Label | Algorithm | Length |
|--------|-------|-----------|--------|
| Max. 1 | | | |

Enable Signed Configuration

| Setting | Description | Factory Default |
|----------|--------------------------------------|-----------------|
| Enabled | Enable configuration file signature. | Disabled |
| Disabled | Disable configuration file signature | |

Click **APPLY** to save your changes.

Click the  icon to add customer key.

Add Custom Key

Label * 0 / 16

Certificate * 

Key * 

CANCEL
CREATE

Label

| Setting | Description | Factory Default |
|--------------------|---|-----------------|
| 0 to 16 characters | Provide the name for the certificate and the key. | None |

Certificate

| Setting | Description | Factory Default |
|--|------------------------------|-----------------|
| Click the  icon to select the file from your computer | Import the certificate file. | None |


Key

| Setting | Description | Factory Default |
|--|----------------------|-----------------|
| Click the  icon to select the file from your computer | Import the key file. | None |

When finished, click **CREATE** to save your changes.


Account Management

The Account Management feature allows users to manage the accounts of the switch. You can enable different accounts with different roles to facilitate convenient management and safe access.

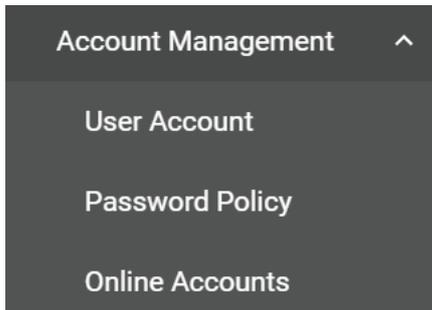

User Account

This section describes how to manage the existing accounts of the switch. Here, you can add, edit, and delete user accounts for the switch. By default, there is only one account: admin. In order to enhance security, we suggest you create a new account with the user authority.

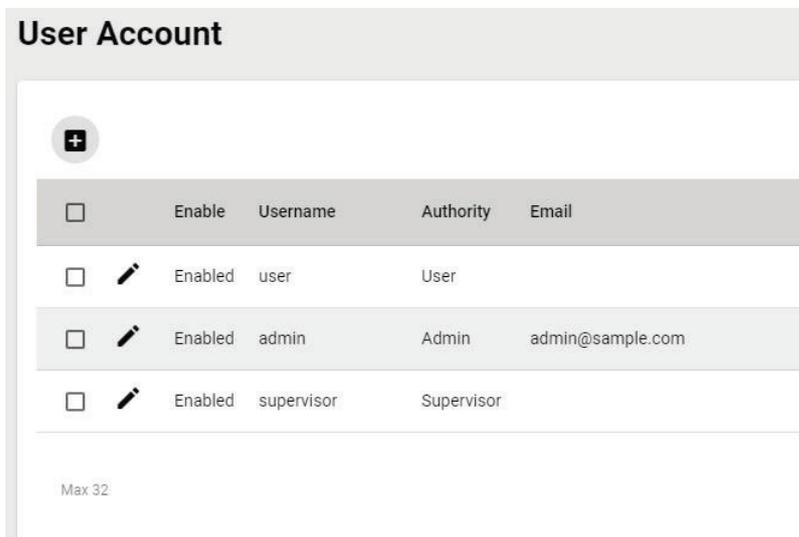

There is a search function on the upper right of the User Account page. Type the username you want to search for.



Editing Existing Accounts

Select the account you want to edit and click the  icon.

User Account



| | Enable | Username | Authority | Email |
|--------------------------|---|----------|------------|---------------------------|
| <input type="checkbox"/> |  | Enabled | user | User |
| <input type="checkbox"/> |  | Enabled | admin | Admin admin@sample.com |
| <input type="checkbox"/> |  | Enabled | supervisor | Supervisor |

Max 32

Configure the following settings.

Edit Account Settings

Enable *
Enabled ▼

Username
test CHANGE PASSWORD

At least 4 characters 4 / 32

Authority *
User ▼

Email
0 / 63

CANCEL
APPLY

Enabled

| Setting | Description | Factory Default |
|----------|---------------------------------|-----------------|
| Enabled | This enables the user account. | Enabled |
| Disabled | This disables the user account. | |

To change the password, click **CHANGE PASSWORD**.

Edit Account Password

Username
test
At least 4 characters 4 / 32

New Password *
At least 4 characters 0 / 63

Confirm Password *
At least 4 characters 0 / 63

BACK
APPLY

New Password

| Setting | Description | Factory Default |
|--------------------|---|-----------------|
| 0 to 63 characters | Enter the password to use for this account. | None |

Confirm Password

| Setting | Description | Factory Default |
|--------------------|-------------------------------------|-----------------|
| 0 to 63 characters | Reenter the password to confirm it. | None |

Click **APPLY** to finish changing the password.

Authority

| Setting | Description | Factory Default |
|------------|--|-----------------|
| admin | This account has read/write access for all configuration parameters. | admin |
| supervisor | This account has read/write access for some specific configuration parameters. | |
| user | This account can only view some specific configuration parameters. | |

Email

| Setting | Description | Factory Default |
|------------------------|---|-----------------|
| Input an email address | Input an email address for the account if required. | None |

When finished, click **APPLY** to save your changes.



NOTE

Refer to Appendix A for detailed descriptions for read/write access privileges for the admin, supervisor, and user authority levels.

Creating a New Account

You can create new account by clicking the  icon on the configuration page.

User Account



| | Enable | Username | Authority | Email |
|--------------------------|---------|------------|------------|------------------|
| <input type="checkbox"/> | Enabled | user | User | |
| <input type="checkbox"/> | Enabled | admin | Admin | admin@sample.com |
| <input type="checkbox"/> | Enabled | supervisor | Supervisor | |

Max 32

Configure the following settings.

Create New Account

Enable *
 Enabled ▼

Username *
At least 4 characters 0 / 32

Authority *
▼

New Password *  Confirm Password * 
At least 4 characters 0 / 63 At least 4 characters 0 / 63

Email
0 / 63

CANCEL
CREATE

Enabled

| Setting | Description | Factory Default |
|----------|----------------------------|-----------------|
| Enabled | This enables the account. | Enabled |
| Disabled | This disables the account. | |

Username

| Setting | Description | Factory Default |
|--------------------------------------|--|-----------------|
| Input a username, 4 to 32 characters | Input a new username for this account. | None |

Authority

| Setting | Description | Factory Default |
|------------|--|-----------------|
| admin | This account has read/write access of all configuration parameters. | None |
| supervisor | This account has read/write access for some specific configuration parameters. | |
| user | This account can only view some specific configuration parameters. | |

In order to enhance security, we suggest you create a new account with the user authority.

New Password

| Setting | Description | Factory Default |
|--------------------|--|-----------------|
| 0 to 63 characters | Input a new password for this account. | None |

Confirm Password

| Setting | Description | Factory Default |
|--------------------|----------------------------------|-----------------|
| 0 to 63 characters | Reenter the password to confirm. | None |

Email

| Setting | Description | Factory Default |
|------------------------|---|-----------------|
| Input an email address | Input an email address for the account if required. | None |

When finished, click **CREATE** to complete.

Delete an Existing Account

To delete the existing account, simply select the account you want to delete, and then click the  icon on the configuration page.

User Account



|  | Enable | Username | Authority | Email |
|---|---|----------|------------|---------------------------|
| <input checked="" type="checkbox"/> |  | Enabled | user | User |
| <input type="checkbox"/> |  | Enabled | admin | Admin admin@sample.com |
| <input type="checkbox"/> |  | Enabled | supervisor | Supervisor |

Click **DELETE** to delete the account.

Delete Account

Are you sure you want to delete the selected account?

[CANCEL](#) [DELETE](#)

Password Policy

In order to prevent hackers from cracking weak passwords, a password policy can be set. The password policy can force users to create passwords with a minimum length and complexity, and can also set a maximum lifetime for the password to ensure it is changed periodically.

Password Policy

Minimum Length *

4 - 63

Password Complexity Strength Check

At least one digit (0-9)

At least one upper case letter (A-Z)

At least one lower case letter (a-z)

At least one special character ({}|~!@#\$%^&*~_.)

Password Max-life-time *

0 - 365 day

APPLY

Minimum Length

| Setting | Description | Factory Default |
|--------------------|---|-----------------|
| Input from 4 to 63 | This sets the minimum length of the password. | 4 |

Password Complexity Strength Check

| Setting | Description | Factory Default |
|---|--|-----------------|
| digit, letter cases, special characters | These determine the required complexity for the password. Multiple options may be checked. | None |

Password Max-life-time (day)

| Setting | Description | Factory Default |
|---------------------|--|-----------------|
| Input from 0 to 365 | This determines how long the password can be used before it must be changed. | 0 |

When finished, click **APPLY** to save your changes.

Online Accounts

The **Online Accounts** function allows users to view who has connected to the device. You may immediately remove the user who is currently online.

| Online Accounts | | | | | |
|---|----------|-----------|-----------------|-----------|------------------|
| | Username | Authority | IP Address | Interface | Idle Time (sec.) |
|  | test | User | 192.168.127.200 | HTTP(S) | 6 |
|  | admin | Admin | 192.168.127.200 | HTTP(S) | 0 |

Select the  icon and select **REMOVE** to disconnect the user.


Remove online account

Are you sure you want to remove this online account?

[CANCEL](#) [REMOVE](#)

Time

This section describes how to configure the **System Time**, **NTP Server**, and **Time Synchronization** settings for the switch. The switch has a time calibration function based on information from an NTP server or a user-specified time and date, allowing functions such as automatic warning emails to include a time and date stamp.

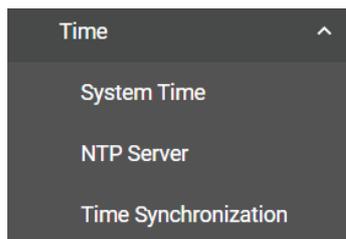

NOTE

The user must update the Current Time and Current Date after the switch has been powered off for an extended period of time (e.g., three days). The user must pay particular attention to this when there is no NTP server or Internet connection available.

System Time

The section describes how to configure the system time.

Time

Click the **Time** tab.

System Time

- Time
- Time Zone
- NTP Authentication

Current Time
2018-12-21 20:45:04 UTC+00:00

Clock Source *
Local

Date *
2018-12-21

Time *
08:45 PM

APPLY SYNC FROM BROWSER

Current Time

| Setting | Description | Factory Default |
|---------|---|-----------------|
| None | This automatically shows the current time according to your default settings. | Local |


Clock Source

| Setting | Description | Factory Default |
|--------------------------------|--|-----------------|
| Select from the drop-down list | Specify whether to set the time manually (Local), from an SNTP server, from an NTP server, or from a PTP master. | Local |

Clock Source is from Local

Date

| Setting | Description | Factory Default |
|-----------------|--------------------------|-----------------|
| Select the date | Select the current date. | Local |

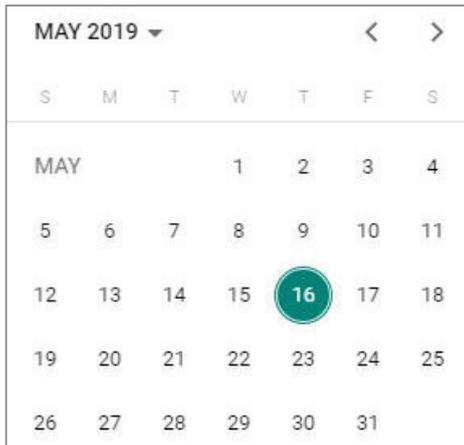

Time

| Setting | Description | Factory Default |
|------------------------|--|-----------------|
| Input the current time | Specify the current time. You can manually input the time, or you can click SYNC FROM BROWSER to set the time based on the time used by your web browser. | None |

Clock Source is from SNTP

Time Server 1

| Setting | Description | Factory Default |
|---|--|-----------------|
| Input the address of the 1st SNTP time server | Specify the IP or domain address of the 1st SNTP server to use (e.g., 192.168.1.1, time.stdtime.gov.tw, or time.nist.gov). | Time.nist.gov |

Time Server 2

| Setting | Description | Factory Default |
|---|---|-----------------|
| Input the address of the 2nd SNTP time server | Specify the IP or domain address of the secondary SNTP server to use if the first SNTP server fails to connect. | None |

Click **APPLY** to complete.

Clock Source is from NTP

If the switch is connecting to an NTP server that requires authentication, refer to the **NTP Authentication** section to configure the NTP key to use.

Time Server 1

| Setting | Description | Factory Default |
|--|---|-----------------|
| Input the address of the 1st NTP time server | Specify the IP or domain address of the 1st NTP server to use (e.g., 192.168.1.1, time.stdtime.gov.tw, or time.nist.gov). | time.nist.gov |

Time Server 2

| Setting | Description | Factory Default |
|--|---|-----------------|
| Input the address of the 2nd time server | Specify the IP or domain address of the secondary NTP server to use if the first NTP server fails to connect. | None |

Click **APPLY** to complete.

Clock Source is from PTP

Select PTP from the drop-down list of **Clock Source**. Click **APPLY** to complete.

Time Zone

Users can configure the time zone for the switch. Click the **Time Zone** tab.

System Time

- Time
- Time Zone**
- NTP Authentication

Time Zone *
UTC+00:00

Daylight Saving
Daylight Saving *
Disabled

Offset
00:00

Start Date * 2000-01-01 Start Time * 12:00 AM

End Date * 2000-12-31 End Time * 11:00 PM

APPLY

Time Zone

| Setting | Description | Factory Default |
|--------------------------------|--|---------------------------|
| Select from the drop-down list | Specify the time zone to use for the switch. | GMT (Greenwich Mean Time) |

Daylight Saving Time

The Daylight Saving Time settings are used to automatically adjust the time according to regional standards.

Daylight Saving Time

| Setting | Description | Factory Default |
|----------|--------------------------------|-----------------|
| Enabled | Enables Daylight Saving Time. | Disabled |
| Disabled | Disables Daylight Saving Time. | |

Start Date

| Setting | Description | Factory Default |
|---------------------|--|-----------------|
| User-specified date | Specify the date that Daylight Saving Time begins. | None |

End Date

| Setting | Description | Factory Default |
|---------------------|--|-----------------|
| User-specified date | Specify the date that Daylight Saving Time ends. | None |


Offset

| Setting | Description | Factory Default |
|---------------------|--|-----------------|
| User-specified hour | Specify the offset (in HH:MM format) to use during Daylight Saving Time. | None |

When finished, click **APPLY** to activate the time zone settings.

NTP Authentication

This section describes how to configure NTP Authentication. Click the **NTP Authentication** tab, and then click the  icon on the page.

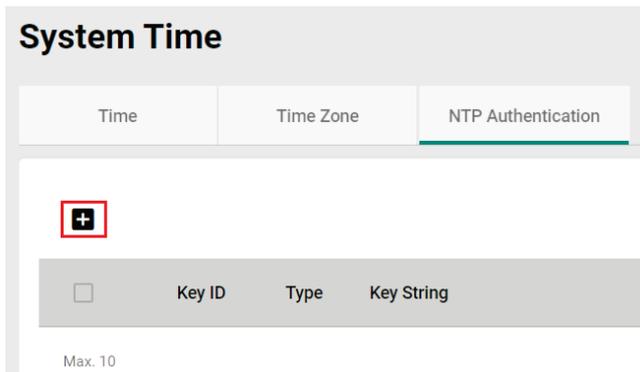


System Time

Time Time Zone **NTP Authentication**



| <input type="checkbox"/> | Key ID | Type | Key String |
|--------------------------|--------|------|------------|
| Max. 10 | | | |

Configure the following settings.

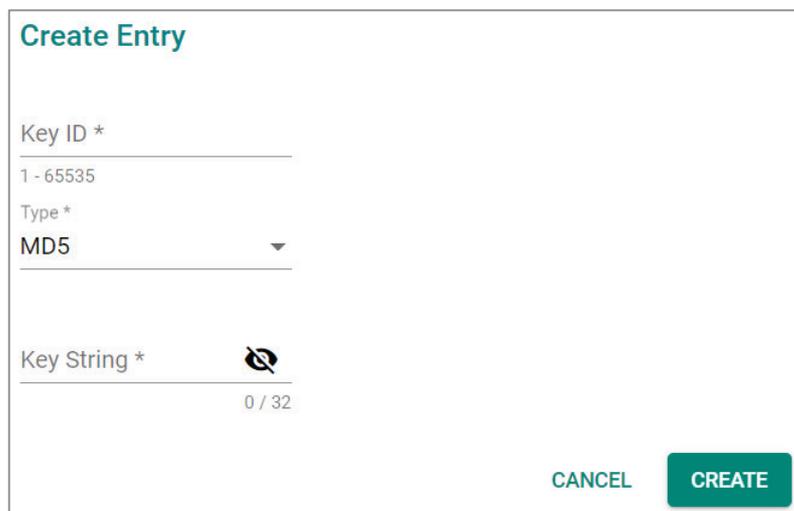

Create Entry

Key ID *
1 - 65535

Type *
MD5

Key String * 
0 / 32

CANCEL CREATE

Key ID

| Setting | Description | Factory Default |
|-------------------------------|---|-----------------|
| Input the Key ID from 1 to 10 | Input the Key ID to use for NTP authentication. | None |

Type

| Setting | Description | Factory Default |
|-------------------------------|--------------------------------|-----------------|
| Input the authentication type | Input the authentication type. | MD5 |

Key String

| Setting | Description | Factory Default |
|---|---|-----------------|
| Input the key string for authentication, from 0 to 32 characters. | Input the password to use for the authentication key. | None |

When finished, click **CREATE**.

NTP Server

Click the **NTP Server** on the function menu to perform further configurations.

NTP Server

| Setting | Description | Factory Default |
|----------|-------------------------|-----------------|
| Enabled | Enable the NTP server. | Disabled |
| Disabled | Disable the NTP server. | |

Client Authentication

| Setting | Description | Factory Default |
|----------|-----------------------------|-----------------|
| Enabled | Enable NTP authentication. | Disabled |
| Disabled | Disable NTP authentication. | |

When finished, click **APPLY** to save your changes.

Time Synchronization

Click **Time Synchronization** on the function menu.

General Settings

Click the **General** tab for the general settings.

Time Synchronization

General
Port Settings
Status
Port Status

Time Synchronization *
Disabled ▼

Profile
IEEE 1588 Default-2008 ▼

Clock Type *
Boundary Clock ▼

Delay Mechanism *
End-to-End ▼

Transport Mode *
802.3 Ethernet ▼

Priority 1 *
128

0 - 255

Priority 2 *
128

0 - 255

Domain Number *
0

0 - 255

Clock Mode *
Two Step ▼

Accuracy Alert *
1000

50 - 250000000 ns

Maximum Steps Removed *
255

0 - 255

APPLY

Time Synchronization

| Setting | Description | Factory Default |
|----------|-------------------------------|-----------------|
| Enabled | Enable time synchronization. | Disabled |
| Disabled | Disable time synchronization. | |

Profile (read-only)

| Setting | Description | Factory Default |
|------------------------|--|------------------------|
| IEEE 1588 Default-2008 | Show the current time synchronization profile. | IEEE 1588 Default-2008 |

Clock Type

| Setting | Description | Factory Default |
|-------------------|--|-----------------|
| Boundary Clock | Set the Boundary Clock as the clock type. | Boundary Clock |
| Transparent Clock | Set the Transparent Clock as the clock type. | |

Delay Mechanism

| Setting | Description | Factory Default |
|--------------|--|-----------------|
| End-to-End | Set End-to-End as the delay mechanism. | End-to-End |
| Peer-to-Peer | Set Peer-to-Peer as the delay mechanism. | |

Transport Mode

| Setting | Description | Factory Default |
|----------------|---|-----------------|
| 802.3 Ethernet | Set 802.3 Ethernet as the transport mode. | 802.3 Ethernet |
| UDP IPv4 | Set UDP IPv4 as the transport mode. | |

Priority 1

| Setting | Description | Factory Default |
|----------|---------------------------|-----------------|
| 0 to 255 | Set the priority 1 value. | 128 |

Priority 2

| Setting | Description | Factory Default |
|----------|---------------------------|-----------------|
| 0 to 255 | Set the priority 2 value. | 128 |

Domain Number

| Setting | Description | Factory Default |
|----------|--------------------------|-----------------|
| 0 to 255 | Set domain number value. | 0 |

Clock Mode

| Setting | Description | Factory Default |
|----------|---------------------------------|-----------------|
| One Step | Set One Step as the clock mode. | 802.3 Ethernet |
| Two Step | Set Two Step as the clock mode. | |

Accuracy Alert

| Setting | Description | Factory Default |
|----------------------|-------------------------------|-----------------|
| 50 to 250000000 (ns) | Set the accuracy alert value. | 1000 |

Maximum Steps Removed

| Setting | Description | Factory Default |
|----------|---|-----------------|
| 0 to 255 | Set the value of the maximum steps removed. | 255 |

When finished, click **APPLY** to activate the general settings.

Port Settings

Click the **Port Settings** tab. Click the edit icon  to configure the settings.

Time Synchronization

General **Port Settings** Status Port Status

IEEE 1588 Default-2008 Profile

| Port | Time Synchronization | Announce Interval | Announce Receipt Timeout (times) |
|---|----------------------|-------------------|----------------------------------|
|  1/1 | Disabled | 1 (2 sec.) | 3 |
|  1/2 | Disabled | 1 (2 sec.) | 3 |
|  1/3 | Disabled | 1 (2 sec.) | 3 |
|  1/4 | Disabled | 1 (2 sec.) | 3 |

Edit Port 1/1 Settings

Time Synchronization *
Disabled ▼

Announce Interval * Announce Receipt Timeout *
1 (2 sec.) ▼ 3 2 - 10 times

Sync Interval *
0 (1 sec.) ▼

Delay-Request Interval *
0 (1 sec.) ▼

Copy Configurations ... ▼ i

CANCEL
APPLY

Time Synchronization

| Setting | Description | Factory Default |
|----------|-------------------------------|-----------------|
| Enabled | Enable time synchronization. | Disabled |
| Disabled | Disable time synchronization. | |

Announce Interval

| Setting | Description | Factory Default |
|--------------------------------|------------------------------|-----------------|
| From 1 (2 sec.) to 4 (16 sec.) | Set announce interval value. | 1 (2 sec.) |

Announce Receipt Timeout

| Setting | Description | Factory Default |
|-----------------|-------------------------------------|-----------------|
| 2 to 10 (times) | Set announce receipt timeout value. | 3 |

Sync Interval

| Setting | Description | Factory Default |
|-------------------------------------|-------------------------------------|-----------------|
| From -3 (0.125 sec.) to 5 (32 sec.) | Set synchronization interval value. | 0 (1 sec.) |

Delay-Request Interval

| Setting | Description | Factory Default |
|-------------------------------------|-----------------------------------|-----------------|
| From -3 (0.125 sec.) to 5 (32 sec.) | Set delay-request interval value. | 0 (1 sec.) |


Copy Configurations to Ports

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Select the port(s) you want to copy the same configurations to. | 0 (1 sec.) |

When finished, click **APPLY** to save your changes.

Status

Click the **Status** tab to view the detailed status of time synchronization.

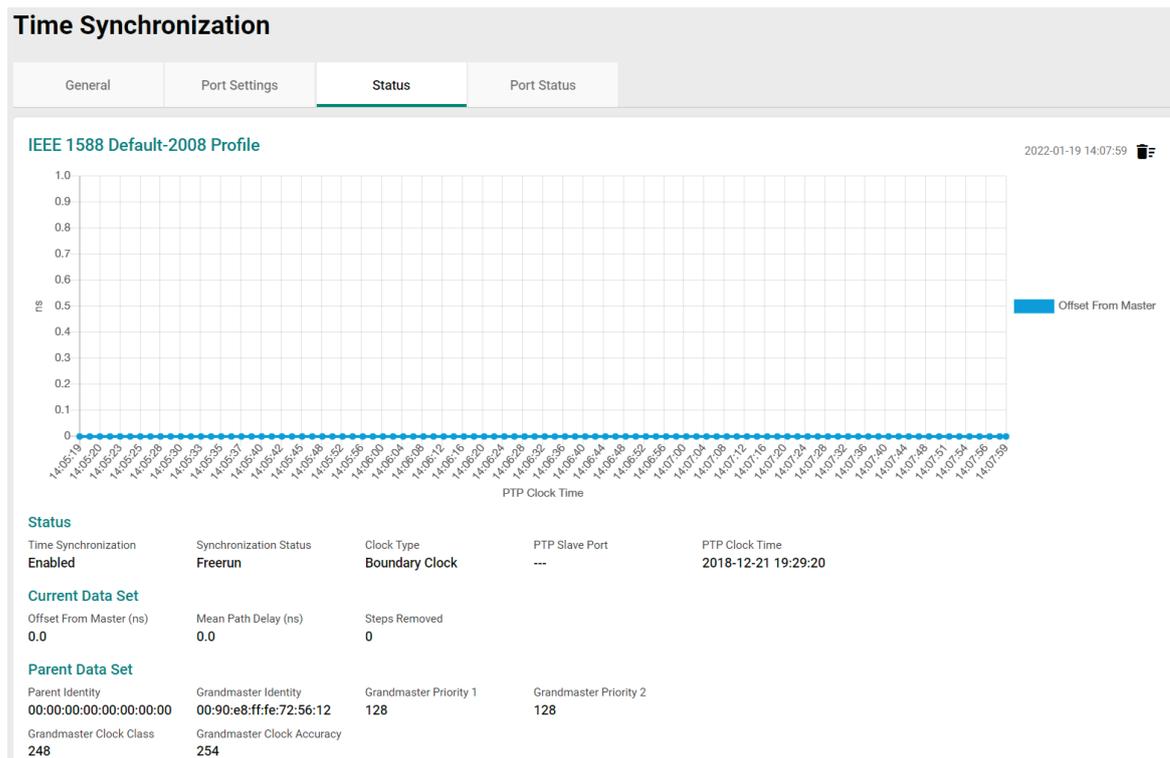

Port Status

Click the **Port Status** tab to view the information of the port status.

Time Synchronization

General | Port Settings | Status | **Port Status**

IEEE 1588 Default-2008 Profile

⌂

| Port | Port State | Path Delay (ns) |
|------|------------|-----------------|
| 1/1 | Disabled | 0.0 |
| 1/2 | Disabled | 0.0 |
| 1/3 | Disabled | 0.0 |
| 1/4 | Disabled | 0.0 |


Port

This section describes how to configure the **Port Interface**, **Link Aggregation**, and **PoE** functions for the switch.




Port Interface

Two functions are included in this section: **Port Settings** and **Linkup Delay**.

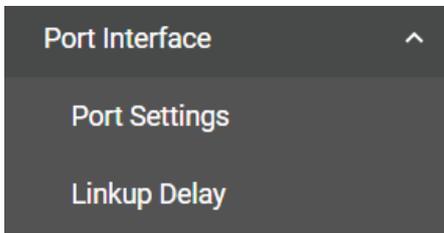

Port Settings

Under **Port Settings**, select the **Settings** tab and then click the  icon on the port you want to configure.

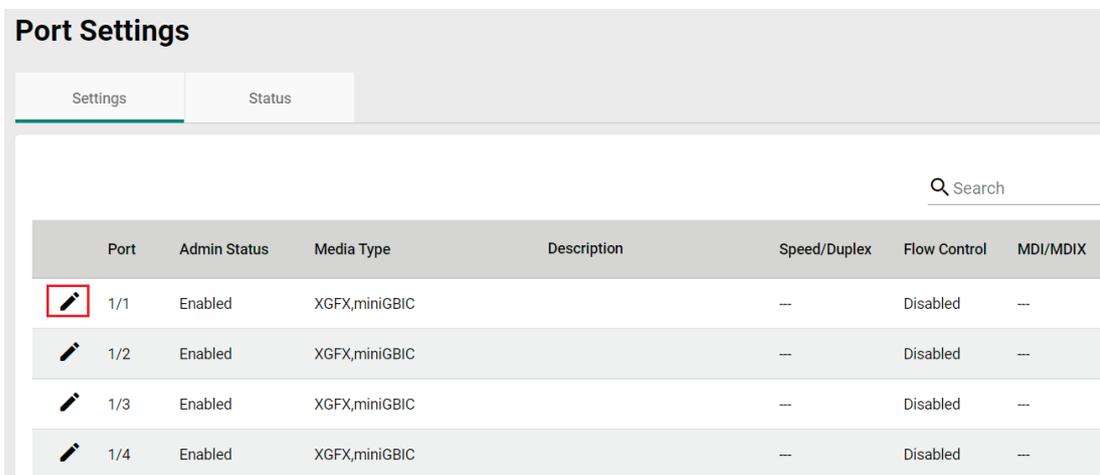

Configure the following parameters.

Edit Port 1/1 Settings

Admin Status *
Enabled ▼

Media Type
XGFX,miniGBIC

Description
0 / 127

Speed/Duplex ▼

Flow Control *
Disabled ▼ ⓘ

MDI/MDIX ▼

Copy Configurations ... ▼

CANCEL
APPLY

Admin Status

| Setting | Description | Factory Default |
|----------|---|-----------------|
| Enable | Allows data transmission through this port. | Enabled |
| Disabled | Disables data transmission through this port. | |

Media Type

| Setting | Description | Factory Default |
|------------|---|-----------------|
| Media type | Displays the media type for each module's port. | 1000TX,RJ45,PTP |

Description

| Setting | Description | Factory Default |
|--------------------|---|-----------------|
| Max. 63 characters | Specify an alias for the port to help differentiate between different ports (e.g., PLC1). | None |

Speed/Duplex

| Setting | Description | Factory Default |
|-----------|--|-----------------|
| Auto | Allows the port to use the IEEE 802.3u protocol to negotiate with connected devices. The port and connected devices will determine the best speed for that connection. | Auto |
| 10M Half | Choose a fixed speed option if the connected Ethernet device has trouble auto-negotiating line speed. | |
| 10M Full | | |
| 100M Half | | |
| 100M Full | | |
| 1G Full | | |
| 10G Half | | |
| 10G Full | | |

Flow Control

This setting enables or disables flow control for the port when the port's speed is set to Auto. The final result will be determined by the Auto process between the switch and connected devices.

| Setting | Description | Factory Default |
|---------|---|-----------------|
| Enable | Enables flow control for this port when the port's speed is set to Auto. | Disabled |
| Disable | Disables flow control for this port when the port's speed is set to Auto. | |

MDI/MDIX

| Setting | Description | Factory Default |
|---------|---|-----------------|
| Auto | Allows the port to auto-detect the port type of the connected Ethernet device, and changes the port type accordingly. | Auto |
| MDI | Choose MDI or MDIX if the connected Ethernet device has trouble auto-detecting the port type. | |
| MDIX | | |

Copy Configurations to Ports

| Setting | Description | Factory Default |
|--|--|-----------------|
| Select the port(s) from the drop-down list | Allows you to copy the configuration to other port(s). | None |

When finished, click **APPLY** to save your changes.

Port Status

To view the status of the ports, click the **Status** tab.

| Port Settings | | | | | | | |
|---------------|--------------|---------------|-------------|-------------|--------------|----------|------------|
| Settings | | Status | | | | | |
| 🔄 📄 | | 🔍 Search | | | | | |
| Port | Admin Status | Media Type | Link Status | Description | Flow Control | MDI/MDIX | Port State |
| 1/1 | Enabled | XGFX,miniGBIC | Link Down | | Disabled | Invalid | Discarding |
| 1/2 | Enabled | XGFX,miniGBIC | Link Down | | Disabled | Invalid | Discarding |
| 1/3 | Enabled | XGFX,miniGBIC | Link Down | | Disabled | Invalid | Discarding |
| 1/4 | Enabled | XGFX,miniGBIC | Link Down | | Disabled | Invalid | Discarding |

Linkup Delay

Linkup Delay Overview

Linkup delay is used to prevent a port alternating between link up and link down. It is also sometimes called link flap prevention. This feature is useful when the link connection is unstable. An unstable connection might be caused by a faulty cable, faulty fiber transceiver, duplex mismatch, etc. This feature helps administrators to mitigate the risk of an unstable network, particularly when the topology changes frequently.

Linkup Delay Settings

This section describes how to configure the linkup delay for the ports. Click the **Linkup Delay** menu. The default value is disabled, which means linkup delay is disabled for all ports.

Linkup Delay

Linkup Delay *

Disabled ▼

APPLY

Enable

| Setting | Description | Factory Default |
|----------|------------------------|-----------------|
| Enable | Enables linkup delay. | Disabled |
| Disabled | Disables linkup delay. | |

When finished, click **APPLY** to save your changes.

To configure linkup delay for a port, click the  icon on the port you want to configure.

| | Port | Enable | Delay Time | Remaining Time |
|--|------|----------|------------|----------------|
|  | 1/1 | Disabled | 2 | 0 |
|  | 1/2 | Disabled | 2 | 0 |
|  | 1/3 | Disabled | 2 | 0 |
|  | 1/4 | Disabled | 2 | 0 |

Some parameters need to be configured.

Edit Port 1/1 Settings

Linkup Delay *

Disabled ▼

Delay Time *

2

1 - 1000 sec.

Copy Configurations ... ▼ 

CANCEL **APPLY**

Linkup Delay

| Setting | Description | Factory Default |
|---------|-------------------------------------|-----------------|
| Enable | Enables linkup delay for the port. | Disabled |
| Disable | Disables linkup delay for the port. | |

Delay Time (sec.)

| Setting | Description | Factory Default |
|-----------|---|-----------------|
| 1 to 1000 | Specify the linkup delay time from 1 to 1000 seconds. | 2 |

Copy Configurations to Ports

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Allows you to copy the configurations to other port(s). | None |

When finished, click **APPLY** to save your changes.

Link Aggregation

Link Aggregation (Port Channel) Overview

Link Aggregation helps balance, optimize, and facilitate the switch's throughput. This method can combine multiple network communications in parallel to maximize data throughput, increasing data communication efficiency for each port. In addition, it also acts as a useful method for network redundancy when a link fails. In general, Link Aggregation supports combining multiple physical switch ports into a single, efficient bandwidth data communication route. This can improve network load sharing and increase network reliability.

Static Trunk

For some networking applications, a situation can arise where traffic from multiple ports is required to be filtered through one port. For example, if there are 30 UHD IP surveillance cameras deployed and connected in a ring, the traffic can reach up to 1 Gbps, causing a surge in traffic that can increase network loading by up to 50%. Hence, the uplink port needs to use the static trunk function to provide more bandwidth and redundancy protection.

LACP

The Link Aggregation Control Protocol (LACP) allows a network device to negotiate an automatic bundling of several ports by sending LACP packets to the peer, a directly connected device that also uses LACP.

Algorithm

In Link Aggregation, three load-sharing hash algorithms can be used: **SMAC**, **DMAC**, and **SMAC + DMAC**.


SMAC: SMAC stands for **Source MAC**, often used as a tool to optimize algorithm parameters. It is also an algorithm to evaluate the most efficient network data communication. SMAC is used for many different client situations.

DMAC: DMAC stands for **Destination MAC**. The packets will be distributed and transmitted to the destination MAC address hash algorithm, and is usually used in many different destination servers situation.

SMAC + DMAC: This can be used for more complex hash algorithm, but where the network just has a few clients and servers.

Link Aggregation Settings

This section describes how to configure link aggregation for each port. Click **Link Aggregation** on the menu and then click the  icon on the configuration page.

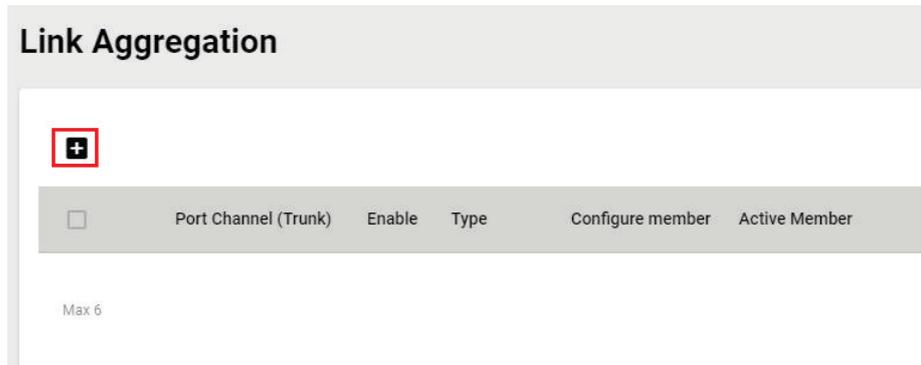

To create a link aggregation group, configure the following parameters.

Create Link Aggregation

LA Group Status *
 Enabled ▼

Type * ▼

Config Member Port * ▼ i

Algorithm *
 SMAC + DMAC ▼

CANCEL
CREATE

LA Group Status

| Setting | Description | Factory Default |
|---------|------------------------------------|-----------------|
| Enable | Enable link aggregation grouping. | Enabled |
| Disable | Disable link aggregation grouping. | |

Type

| Setting | Description | Factory Default |
|---------|---|-----------------|
| Manual | Configure the link aggregation type manually. | None |
| LACP | Configure the link aggregation type by LACP. | |

Config Member Port


| Setting | Description | Factory Default |
|-----------------------|--|-----------------|
| Select from the ports | Select the ports you want to create for link aggregation grouping. | None |

Algorithm (in Advanced Mode only)

| Setting | Description | Factory Default |
|-------------|--|-----------------|
| SMAC | Use SMAC as algorithm configuration. | SMAC + DMAC |
| DMAC | Use DMAC as the algorithm configuration. | |
| SMAC + DMAC | Use both SMAC and DMAC as the algorithm configuration. | |

When finished, click **CREATE** to continue.


You can view the current Link Aggregation or Port Channel (Trunk) status on the configuration page. You can also edit or delete by clicking the  or  icon on the page.

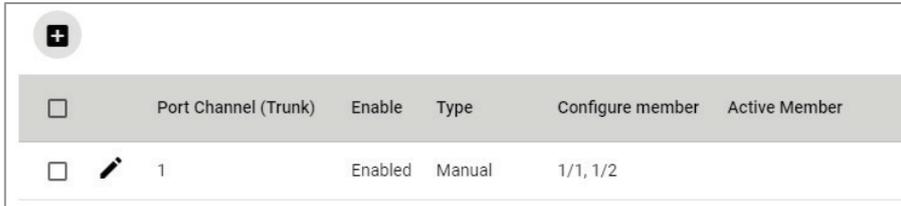

| <input type="checkbox"/> | Port Channel (Trunk) | Enable | Type | Configure member | Active Member |
|--------------------------|----------------------|---------|--------|------------------|---------------|
| <input type="checkbox"/> | 1 | Enabled | Manual | 1/1, 1/2 | |

Editing Port Setting for Link Aggregation

To edit each port's setting for Link Aggregation, click the  icon on the port name. You can also check the port and then click the  icon for editing the port settings for Link Aggregation.

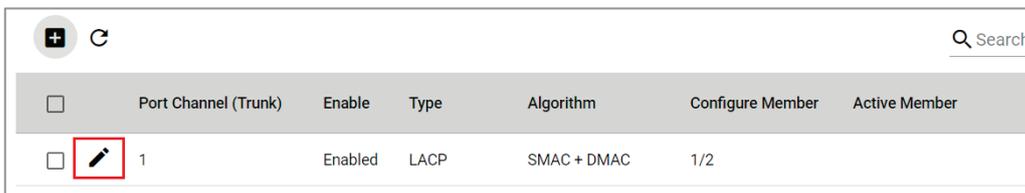

| <input type="checkbox"/> | Port Channel (Trunk) | Enable | Type | Algorithm | Configure Member | Active Member |
|--------------------------|----------------------|---------|------|-------------|------------------|---------------|
| <input type="checkbox"/> | 1 | Enabled | LACP | SMAC + DMAC | 1/2 | |

Edit the following port settings.

Edit Port Channel 1 Settings

LA Group Status *

Enabled ▼

Type *

LACP ▼

Config Member Port *

1/2 ▼ i

Algorithm *

SMAC + DMAC ▼

CANCEL
APPLY

LA Group Status

| Setting | Description | Factory Default |
|---------|------------------------------------|-----------------|
| Enable | Enable link aggregation grouping. | None |
| Disable | Disable link aggregation grouping. | |

Type

| Setting | Description | Factory Default |
|---------|--------------------------------------|-----------------|
| Manual | Configure link aggregation manually. | None |
| LACP | Configure link aggregation by LACP. | |

Config Member Port

| Setting | Description | Factory Default |
|-----------------------|--|-----------------|
| Select from the ports | Select the ports you want to create link aggregation grouping for. | None |


Algorithm (in Advanced Mode only)

| Setting | Description | Factory Default |
|-------------|--|-----------------|
| SMAC | Use SMAC as the algorithm configuration. | SMAC + DMAC |
| DMAC | Use DMAC as the algorithm configuration. | |
| SMAC + DMAC | Use both SMAC and DMAC as the algorithm configuration. | |

When finished, click **APPLY** to continue.

Deleting the Port for Link Aggregation

To delete the port for Link Aggregation, check the port and then click  con.

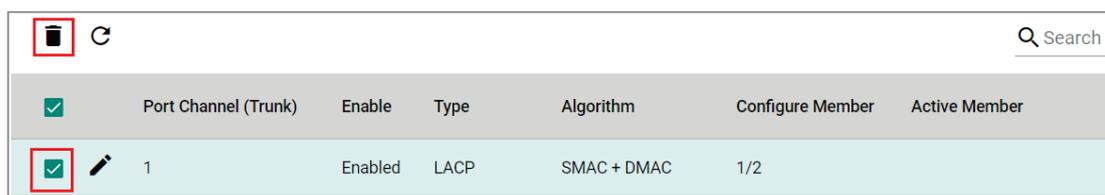

| <input checked="" type="checkbox"/> | Port Channel (Trunk) | Enable | Type | Algorithm | Configure Member | Active Member |
|-------------------------------------|----------------------|---------|------|-------------|------------------|---------------|
| <input checked="" type="checkbox"/> | 1 | Enabled | LACP | SMAC + DMAC | 1/2 | |

Click **DELETE** to finish. Note that some features, such as RSTP and VLAN will be set to default values once you delete the Link Aggregation setting.

Delete Link Aggregation

Warning:
Some features (like RSTP, VLAN...etc.) related to selected Link Aggregation will be set to default values.

Are you sure you want to delete the selected Link Aggregation?

PoE

PoE Overview

Power over Ethernet (PoE) has become increasingly popular, due in large part to the reliability provided by PoE Ethernet switches that supply the power to Powered Devices (PD) when AC power is not available or is too expensive to provide locally.

Power over Ethernet can be used with the following types of devices:

- Surveillance cameras
- Security I/O sensors
- Industrial wireless access points
- Emergency IP phones

Recently, more data, video, voice, service, and control packets are converging on one network. Moxa's PoE switches are equipped with many advanced PoE management functions, providing critical security systems with a convenient and reliable Ethernet network. Moreover, Moxa's advanced PoE switches support the high power PoE+ standard, PD failure check, legacy PD detection, and auto power cutting.

PoE Port Settings

Click **PoE** on the menu, and then select the **General** tab on the configuration page.

PoE

General | PD Failure Check | Scheduling | Status

Power Output *
Enabled

Auto Power Cutting *
Disabled

System Power Budget *
720
30 - 720 Watt

APPLY

Configure the following settings.

Power Output

| Setting | Description | Factory Default |
|---------|--|-----------------|
| Enable | Enable PoE for all ports on the switch. | Enabled |
| Disable | Disable PoE for all ports on the switch. | |

Auto Power Cutting

| Setting | Description | Factory Default |
|---------|--|-----------------|
| Enable | If the total power consumption exceeds the system power budget threshold, low priority for power output of the port will perform auto power cutting. | Disabled |
| Disable | Disable the system power budget criteria design. | |

System Power Budget (watt)

| Setting | Description | Factory Default |
|--------------------------------|--|-----------------|
| Input the value from 30 to 720 | Input a value for the system power budget. | 720 |

When finished, click **APPLY** to save your changes.

Editing PoE Settings for Each Port

In this section, you can also enable the PoE function for specific ports even when the system PoE is disabled under the General tab.

To edit the PoE settings for a port, click the  icon for that port.

| Port | PoE Supported | Power Output | Output Mode | Power Allocation | Legacy PD Detection | Priority |
|---|---------------|--------------|-------------|------------------|---------------------|----------|
|  1/1 | No | Enabled | Auto | 0 | Disabled | Low |
|  1/2 | No | Enabled | Auto | 0 | Disabled | Low |
|  1/3 | No | Enabled | Auto | 0 | Disabled | Low |
|  1/4 | No | Enabled | Auto | 0 | Disabled | Low |

Edit Port 1/1 Settings

Power Output *
Enabled ▼

Output Mode * Legacy PD Detection *
Auto ▼ Disabled ▼

Power Allocation
0
0 - 36 Watt

Priority *
Low ▼

Copy Configurations ... ▼ i

CANCEL
APPLY

Edit the following parameters.

Power Output

| Setting | Description | Factory Default |
|---------|----------------------------|-----------------|
| Enable | Enable PoE for this port. | Enabled |
| Disable | Disable PoE for this port. | |

Output Mode

| Setting | Description | Factory Default |
|------------|--|-----------------|
| Auto | Auto mode follows the 802.3af/at standard, which means the power allocation value cannot be changed manually. | Auto |
| High Power | High Power mode follows the 802.3at standard, but High Power mode allocates 36 watts of power to the PD if it requires more than 30 watts of power. | |
| Force | Provides power output to non-802.3 af/at PDs when the detected PD has higher/lower resistance or higher capacitance and the acceptable PD resistance range exceeds 2.4 kΩ. The system will prompt you to select Force Mode to allocate 0 to 36 watts of power. | |

Legacy PD Detection

The PoE Ethernet Switch includes a Legacy PD Detection function. When the capacitance of the PD is higher than 2.7 μF and less than 10 μF, enabling the Legacy PD Detection will trigger the system to output power to the PD. In this case, it will take a few seconds for PoE power to be output through this port after the switch Legacy PD Detection is enabled.

| Setting | Description | Factory Default |
|---------|------------------------------|-----------------|
| Enable | Enable legacy PD detection. | Disabled |
| Disable | Disable legacy PD detection. | |

Power Allocation (watt)

| Setting | Description | Factory Default |
|---------|---|-----------------|
| 0 | When the output mode is Auto, the value is fixed as 0. | 0 |
| 36 | When the output mode is High Power, the value is fixed as 36. | 36 |
| 0 to 36 | When the output mode is set to Force, input a value from 0 to 36. | 36 |

Priority

Use Power Priority when managing PoE power with measured power mode. You can choose one of the following settings: critical, high, or low. When the PoE measured power exceeds the assigned limit, the switch will disable the PoE port with the lowest priority.

| Setting | Description | Factory Default |
|----------|--|-----------------|
| Critical | Configure the port as critical (highest) priority. | Low |
| High | Configure the port as high priority. | |
| Low | Configure the port as low priority. | |

Copy Configurations to Ports

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Allows you to copy the configurations to other port(s). | None |

When finished, click **APPLY** to save your changes.

PD Failure Check

The PoE Ethernet switch can monitor the status of a PD via its IP address. If the PD fails, the switch will not receive a PD response after the defined period, and the authentication process will be restarted. This function is extremely useful for ensuring your network's reliability and reducing your management burden.

Select the **PD Failure Check** tab, and then click the  icon on the port you want to configure.

PoE

- General
- PD Failure Check**
- Scheduling
- Status

 🔍 Search

| | Port | PoE Supported | Enable | Device IP | Check Frequency (sec.) | No Response Times | Action |
|---|------|---------------|----------|-----------|------------------------|-------------------|-----------|
|  | 1/1 | No | Disabled | 0.0.0.0 | 10 | 3 | No Action |
|  | 1/2 | No | Disabled | 0.0.0.0 | 10 | 3 | No Action |
|  | 1/3 | No | Disabled | 0.0.0.0 | 10 | 3 | No Action |
|  | 1/4 | No | Disabled | 0.0.0.0 | 10 | 3 | No Action |

Configure the following parameters.

Edit Port 1/1 Settings

Enable *
Disabled ▼

Device IP *
0.0.0.0

Check Frequency * No Response Times *
10 3

5 - 300 sec. 1 - 10 times

Action *
No Action ▼

Copy Configurations ... ▼ i

CANCEL
APPLY

Enable

| Setting | Description | Factory Default |
|---------|---|-----------------|
| Enable | Enable PD failure check for this port. | Disabled |
| Disable | Disable PD failure check for this port. | |

Device IP

| Setting | Description | Factory Default |
|-----------------------|------------------------------|-----------------|
| Input the device's IP | Specify the PD's IP address. | 0.0.0.0 |

Check Frequency (sec.)

| Setting | Description | Factory Default |
|----------|--|-----------------|
| 5 to 300 | Specify how often the PD failure check will run. | 10 |

No Response Times

| Setting | Description | Factory Default |
|---------|---|-----------------|
| 1 to 10 | The maximum number of IP checking cycles. | 3 |

Action

| Setting | Description | Factory Default |
|-------------|---|-----------------|
| No Action | No action will run. | No Action |
| Restart PD | Restart the PoE device when settings are triggered. | |
| Shutdown PD | Shut down the PoE device when settings are triggered. | |

Copy Configurations to Ports

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Copy the configurations to other port(s). | None |


When finished, click **APPLY** to save your changes.

PoE Scheduling

Note that this function is only available in **Advanced Mode**.


Powered devices might not need to be running 24 hours a day, 7 days a week. The PoE Ethernet switch includes a PoE scheduling mechanism that allows users to economize the system's power burden by setting a flexible working schedule for each PoE port. Switch to **Advanced Mode**, click the **Scheduling** tab, and

then click the  icon to create the scheduling settings.

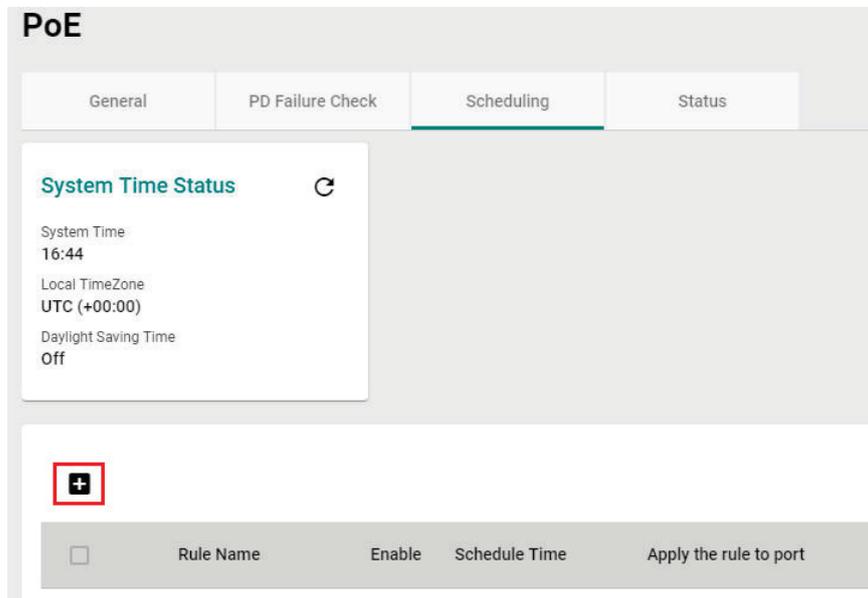

| <input type="checkbox"/> | Rule Name | Enable | Schedule Time | Apply the rule to port |
|--------------------------|-----------|--------|---------------|------------------------|
|--------------------------|-----------|--------|---------------|------------------------|

Edit the following parameters.

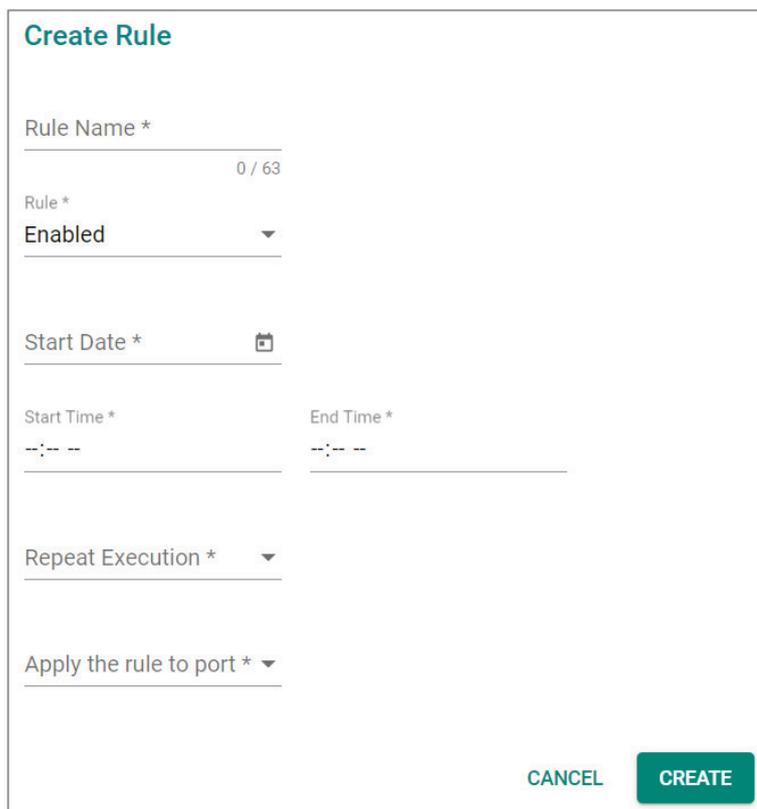

Create Rule

Rule Name * 0 / 63

Rule *
Enabled

Start Date * 

Start Time * End Time *
--:-- --:--

Repeat Execution *

Apply the rule to port *

CANCEL CREATE

Rule Name

| Setting | Description | Factory Default |
|---------------------|---|-----------------|
| Input the rule name | Input the name for the scheduling rule. | None |

Enable

| Setting | Description | Factory Default |
|---------|---------------------------------------|-----------------|
| Enable | Enable PoE Scheduling for this port. | Disabled |
| Disable | Disable PoE Scheduling for this port. | |

Start Date

| Setting | Description | Factory Default |
|---|------------------------------------|-----------------|
| Input start date in the mm/dd/yyyy format | Input the start date for the rule. | None |

Start Time

| Setting | Description | Factory Default |
|---|-------------------------------------|-----------------|
| Select the start time in AM/PM hh/mm format | Select the start time for the rule. | None |

End Time

| Setting | Description | Factory Default |
|---|-----------------------------------|-----------------|
| Select the end time in AM/PM hh/mm format | Select the end time for the rule. | None |

Repeat Execution

| Setting | Description | Factory Default |
|---------|------------------------------|-----------------|
| None | Do not repeat the rule. | None |
| Daily | Execute the rule every day. | |
| Weekly | Execute the rule every week. | |

Apply the rule to port

| Setting | Description | Factory Default |
|--|--|-----------------|
| Select the port(s) from the drop-down list | Copy the settings to the port(s) you want to have the same rule. | None |

When finished, click **CREATE**. You can check the PoE Scheduling settings in the following figure.

| Search | | | | | |
|---|---|-----------|---------|-------------------------|------------------------|
| Edit | Delete | Rule Name | Enable | Schedule Time | Apply the rule to port |
|  |  | one | Enabled | 01:00 - 02:00, Daily | 1/1, 1/2 |

PoE Status

You can view the current PoE setting status by clicking the **Status** tab.

You can view the PoE status for each port. Refer to the following descriptions.

| Name | Description |
|--------------------------|--|
| Port | PoE port on the device. |
| PoE Supported | Check if this port supports PoE. |
| Power Output | Power output status (on/off) for the port. |
| Classification | Check the Classification table below for details. |
| Current (mA) | The current (mA) that the port supplies. |
| Voltage (V) | The voltage (V) that the port supplies. |
| Consumption (W) | The power consumption that the device consumes. |
| Device Type | Check the Device Type table below for details. |
| Configuration Suggestion | Refer to the Configuration Suggestion table below for details. |
| PD Failure Check | Disable/Alive/Not Alive. |

Classification

| Classification | Max Power (watt) by PSE Output |
|--------------------|--------------------------------|
| 0 | 15.4 |
| 1 | 4 |
| 2 | 7 |
| 3 | 15.4 |
| 4 (802.3at Type 2) | 30 |
| 4 (802.3at) | 30 |

Device Type


| Item | Description |
|-------------------|--|
| Not Present | No connection to the port. |
| Legacy PoE Device | A legacy PD is connected to the port, and the PD has detected that the voltage is too low or high, or the PD's detected capacitance is too high. |
| IEEE 802.3af | An IEEE 802.3af PD is connected to the port. |
| IEEE 802.3at | An IEEE 802.3at PD is connected to the port. |
| NIC | A NIC is connected to the port. |
| Unknown | An unknown PD is connected to the port. |
| N/A | The PoE function is disabled. |

Configuration Suggestion

| Item | Description |
|--|--|
| Disable PoE power output | When detecting a NIC or unknown PD, the system suggests disabling PoE power output. |
| Enable "Legacy PD Detection" | When detecting a higher capacitance of PD, the system suggests enabling Legacy PD Detection. |
| Select Force Mode | When detecting higher/lower resistance or higher capacitance, the system suggests selecting Force Mode. |
| Select IEEE 802.3af/at auto mode | When detecting an IEEE 802.3 af/at PD, the system suggests selecting 802.3 af/at Auto mode. |
| Select high power output | When detecting an unknown classification, the system suggests selecting High Power output. |
| Raise the external power supply voltage to greater than 46 VDC | When the external supply voltage is detected at less than 46 V, the system suggests raising the voltage. |
| Enable PoE function for detection | The system suggests enabling the PoE function. |

Layer 2 Switching

This section describes how to configure various parameters, such as **VLAN**, **GARP**, **MAC**, **QoS**, and **Multicast**, for Moxa's switch. Click **Lay 2 Switching** on the function menu.

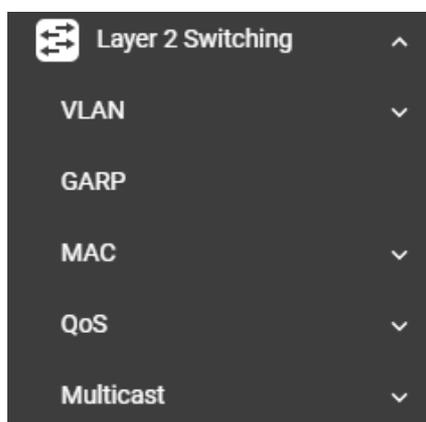

VLAN

VLAN (Virtual Local Area Network) is a network management technology where IEEE 802.11Q is widely applied.

IEEE 802.1Q Overview


The IEEE 802.1Q is a network communication protocol that falls under the IEEE 802.1 standard regulation, allowing various segments to use a physical network at the same time to block broadcast packets by different segmentations. It specifies the VLAN tagging for Ethernet frames on switches that can control the path process.

How A VLAN Works

What is a VLAN?

A VLAN is a group of devices that can be located anywhere on a network, but which communicate as if they are on the same physical segment. With VLANs, you can segment your network without being restricted by physical connections—a limitation of traditional network design. With VLANs you can segment your network into:

- **Departmental groups**—You could have one VLAN for the marketing department, another for the finance department, and another for the product development department.
- **Hierarchical groups**—You could have one VLAN for directors, another for managers, and another for general staff.
- **Usage groups**—You could have one VLAN for email users and another for multimedia users.

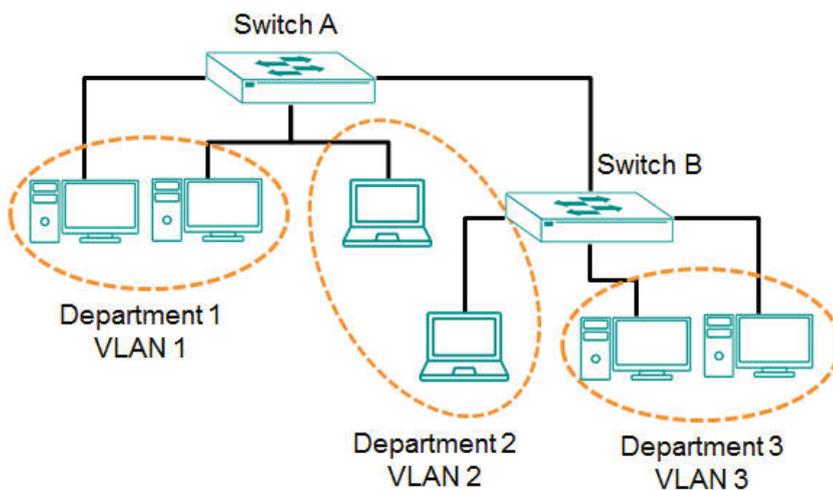

Benefits of VLANs

The main benefit of VLANs is that they provide a network segmentation system that is far more flexible than traditional networks. Using VLANs also provides you with three other benefits:

- **VLANs ease the relocation of devices on networks:** With traditional networks, network administrators spend much of their time dealing with changes. If users move to a different subnetwork, the addresses of each host must be updated manually. With a VLAN setup, if a host originally on the Marketing VLAN is moved to a port on another part of the network, and retains its original subnet membership, you only need to specify that the new port is on the Marketing VLAN. You do not need to do any re-cabling.
- **VLANs provide extra security:** Devices within each VLAN can only communicate with other devices on the same VLAN. If a device on the Marketing VLAN needs to communicate with devices on the Finance VLAN, the traffic must pass through a routing device or Layer 3 switch.
- **VLANs help control traffic:** With traditional networks, congestion can be caused by broadcast traffic that is directed to all network devices, regardless of whether or not they need it. VLANs increase the efficiency of your network because each VLAN can be set up to contain only those devices that need to communicate with each other.

VLANs and the Moxa switch

Your Moxa switch includes support for VLANs using IEEE Std 802.1Q-2005. This standard allows traffic from multiple VLANs to be carried across one physical link. The IEEE Std 802.1Q-2005 standard allows each port on your Moxa switch to be placed as follows:

- On a single VLAN defined in the switch
- On several VLANs simultaneously using 802.1Q tagging

The standard requires that you define the 802.1Q VLAN ID for each VLAN on your Moxa switch before the switch can use it to forward traffic:

Managing a VLAN

A new or initialized Moxa switch contains a single VLAN—the Default VLAN. This VLAN has the following definition:

- Management VLAN ID 1 can be changed
- 802.1Q VLAN default ID 1 cannot be deleted

All the ports are initially placed on this VLAN, and it is the only VLAN that allows you to access the management software of the Moxa switch over the network.

Communication Between VLANs

If devices connected to a VLAN need to communicate with devices on a different VLAN, a router or Layer 3 switching device with connections to both VLANs need to be installed. Communication between VLANs can only take place if they are all connected to a routing or Layer 3 switching device.

VLANs: Tagged and Untagged Membership

Moxa's switch supports 802.1Q VLAN tagging, a system that allows traffic for multiple VLANs to be carried on a single physical link (backbone, trunk). When setting up VLANs you need to understand when to use untagged or tagged membership of VLANs. Simply put, if a port is on a single VLAN it can be an untagged member, but if the port needs to be a member of multiple VLANs, a tagged membership must be defined.

A typical host (e.g., clients) will be an untagged member of one VLAN, defined as an **Access Port** in a Moxa switch, while an inter-switch connection will be a tagged member of all VLANs, defined as a **Trunk Port** in a Moxa switch.


The IEEE Std 802.1Q-2005 defines how VLANs operate within an open packet-switched network. An 802.1Q compliant packet carries additional information that allows a switch to determine which VLAN the port belongs to. If a frame is carrying the additional information, it is known as a tagged frame.

To carry multiple VLANs across a single physical link (backbone, trunk), each packet must be tagged with a VLAN identifier so that the switches can identify which packets belong to which VLAN. To communicate between VLANs, a router must be used.

Moxa's switch supports three types of VLAN port settings:

- **Access Port:** The port connects to a single device that is not tagged. The user must define the default port PVID that assigns which VLAN the device belongs to. Once the ingress packet of this Access Port egresses to another Trunk Port (the port needs all packets to carry tag information), the switch will insert this PVID into this packet so the next 802.1Q VLAN switch can recognize it.
- **Trunk Port:** The port connects to a LAN that consists of untagged devices and tagged devices. In general, the traffic of the Trunk Port must have a Tag. Users can also assign a PVID to a Trunk Port. The untagged packet on the Trunk Port will be assigned the default port PVID as its VID.
- **Hybrid Port:** The port is similar to a Trunk port, except users can explicitly assign tags to be removed from egress packets.

The following section illustrates how to use these ports to set up different applications.

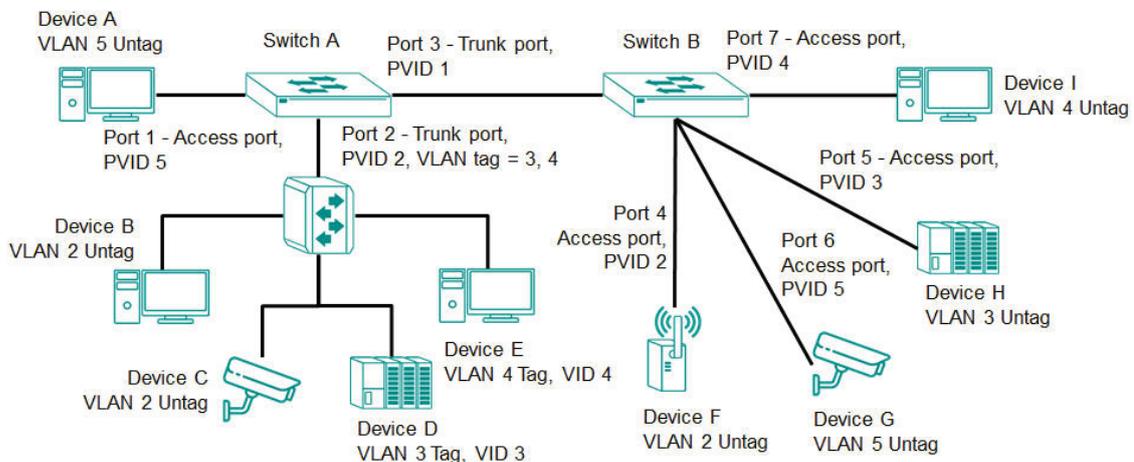

In this application:

- Port 1 connects a single untagged device and assigns it to VLAN 5; it should be configured as an **Access Port** with PVID 5.
- Port 2 connects a LAN with two untagged devices belonging to VLAN 2. One tagged device with VID 3 and one tagged device with VID 4. It should be configured as a **Hybrid Port** with PVID 2 for untagged device and Fixed VLAN (Tagged) with 3 and 4 for tagged device. Since each port can only have one unique PVID, all untagged devices on the same port must belong to the same VLAN.
- Port 3 connects with another switch. It should be configured as a **Trunk Port**. GVRP protocol will be used through the Trunk Port.
- Port 4 connects a single untagged device and assigns it to VLAN 2; it should be configured as an **Access Port** with PVID 2.
- Port 5 connects a single untagged device and assigns it to VLAN 3; it should be configured as an **Access Port** with PVID 3.
- Port 6 connect a single untagged device and assigns it to VLAN 5; it should be configured as an **Access Port** with PVID 5.
- Port 7 connects a single untagged device and assigns it to VLAN 4; it should be configured as an **Access Port** with PVID 4.


After the application is properly configured:

- Packets from Device A will travel through **Trunk Port 3** with tagged VID 5. Switch B will recognize its VLAN, pass it to port 6, and then remove tags received successfully by Device G, and vice versa.
- Packets from Devices B and C will travel through **Hybrid Port 2** with tagged VID 2. Switch B recognizes its VLAN, passes it to port 4, and then removes tags received successfully by Device F, and vice versa.
- Packets from Device D will travel through **Trunk Port 3** with tagged VID 3. Switch B will recognize its VLAN, pass to port 5, and then remove tags received successfully by Device H. Packets from Device H will travel through **Trunk Port 3** with PVID 3. Switch A will recognize its VLAN and pass it to port 2, but will not remove tags received successfully by Device D.
- Packets from Device E will travel through **Trunk Port 3** with tagged VID 4. Switch B will recognize its VLAN, pass it to port 7, and then remove tags received successfully by Device I. Packets from Device I will travel through **Trunk Port 3** with tagged VID 4. Switch A will recognize its VLAN and pass it to port 2, but will not remove tags received successfully by Device E.

VLAN Settings

To configure VLAN, click **VLAN** on the function menu. GVRP (Generic VLAN Registration Protocol) is an IEEE 802.1Q standard protocol that helps specify how to define a method of tagging frames with VLAN configuration data. It essentially facilitates management of VLAN within a larger network data communication.

To edit the GVRP function, click the **Global** tab.

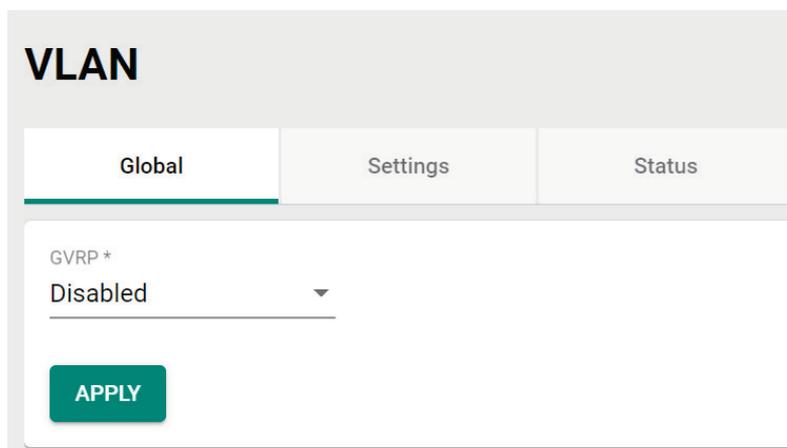

The screenshot shows the 'VLAN' configuration page. At the top, there are three tabs: 'Global', 'Settings', and 'Status'. The 'Global' tab is currently selected and highlighted with a green underline. Below the tabs, there is a dropdown menu labeled 'GVRP *' with the value 'Disabled' selected. A green 'APPLY' button is located below the dropdown menu.

Configure the following setting.


GVRP

| Setting | Description | Factory Default |
|----------|----------------|-----------------|
| Disabled | Disables GVRP. | Disabled |
| Enabled | Enables GVRP. | |

Click **APPLY** to finish.

Detailed VLAN Settings

Click the **Settings** tab, and then click the  icon.

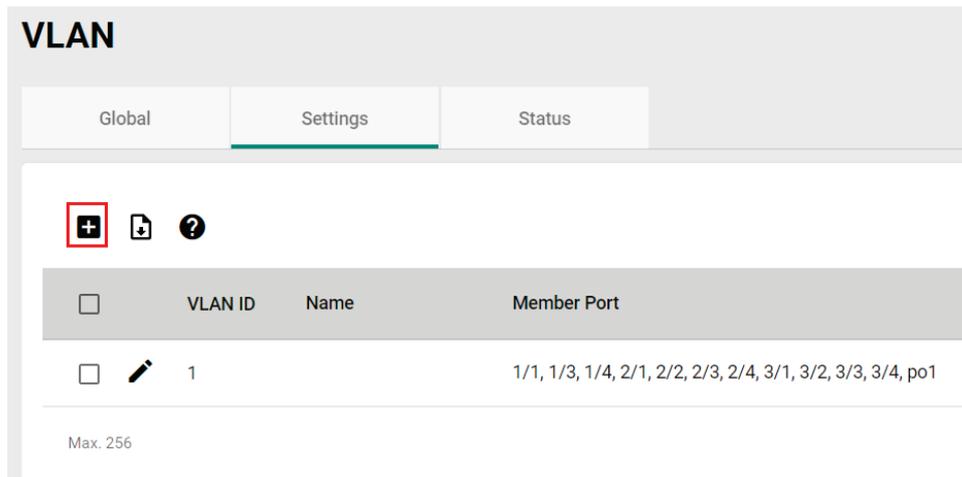

VLAN


Global Settings Status

| <input type="checkbox"/> | VLAN ID | Name | Member Port |
|--------------------------|---------|------|--|
| <input type="checkbox"/> | 1 | | 1/1, 1/3, 1/4, 2/1, 2/2, 2/3, 2/4, 3/1, 3/2, 3/3, 3/4, po1 |

Max. 256

Configure the following parameters.

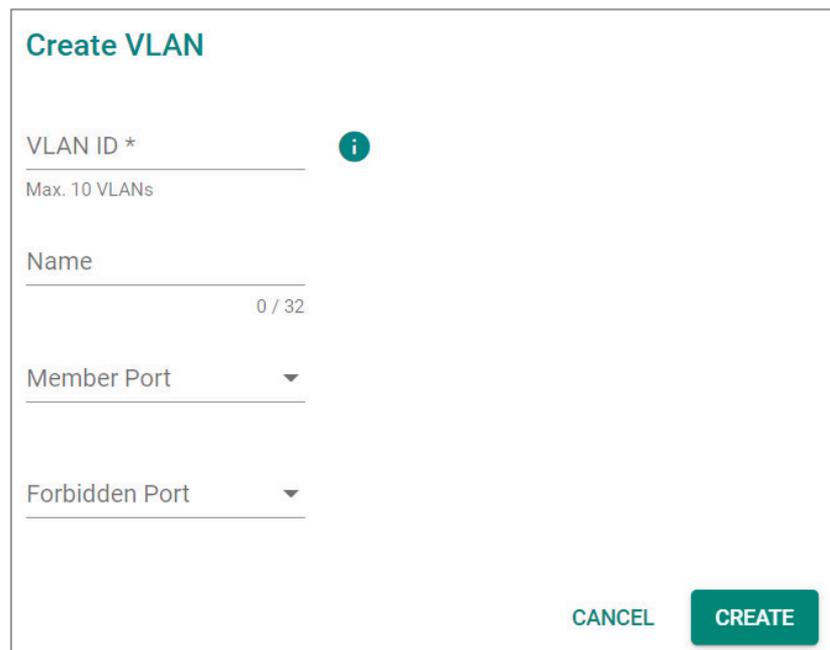

Create VLAN

VLAN ID * 
Max. 10 VLANs

Name
0 / 32

Member Port ▼

Forbidden Port ▼

CANCEL CREATE

VLAN ID

| Setting | Description | Factory Default |
|----------------------------------|------------------|-----------------|
| Input a VLAN ID, (10 VLANs max.) | Input a VLAN ID. | None |

Name

| Setting | Description | Factory Default |
|---|------------------------------|-----------------|
| Input a name for the VLAN, (32 characters max.) | Specify a name for the VLAN. | None |

Member Port

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port from the drop-down list. | Specify the ports that are the member ports for the VLAN. | None |

Forbidden Port (in Advanced Mode only)

| Setting | Description | Factory Default |
|---|--|-----------------|
| Select the port from the drop-down list | Specify the ports that are forbidden for the VLAN. | None |

When finished, click **CREATE**.

Editing the Existing VLAN Settings

To edit the exiting VLAN settings, click the  icon of the VLAN you want to edit.

VLAN

Global Settings Status

+ ↕ ?

| <input type="checkbox"/> | VLAN ID | Name | Member Port |
|--------------------------|---------|------|--|
| <input type="checkbox"/> | 1 | | 1/1, 1/3, 1/4, 2/1, 2/2, 2/3, 2/4, 3/1, 3/2, 3/3, 3/4, po1 |

Max. 256

Configure the following settings.

Edit VLAN 1 Settings

VLAN ID
1
Max. 10 VLANs

Name
0 / 32

Member Port
1/1, 1/3, 1/4, 2/1, 2/2...

Forbidden Port

CANCEL APPLY

VLAN ID

| Setting | Description | Factory Default |
|------------------|----------------------|-----------------|
| Show the VLAN ID | Display the VLAN ID. | None |

Name

| Setting | Description | Factory Default |
|---------------------------|------------------------|-----------------|
| Show the name of the VLAN | Display the VLAN name. | None |

Member Port

| Setting | Description | Factory Default |
|---|---|-----------------|
| Select the port from the drop-down list | Specify the ports that are member ports for the VLAN. | None |

Forbidden Port (in Advanced Mode only)

| Setting | Description | Factory Default |
|---|--|-----------------|
| Select the port from the drop-down list | Specify the ports that are forbidden for the VLAN. | None |

When finished, click **Apply** to save your changes.

Editing the Port Settings

To edit the port settings, in the **VLAN** tab select the  icon on the port you want to configure on the lower part of the page.

| | Port | Mode | PVID | GVRP | Untagged VLAN | Tagged VLAN |
|---|------|--------|------|----------|---------------|-------------|
|  | 1/1 | Access | 1 | Disabled | 1 | |
|  | 1/3 | Access | 1 | Disabled | 1 | |
|  | 1/4 | Access | 1 | Disabled | 1 | |

Configure the following settings.

Edit Port 1/1 Settings

Mode *
Access ▼

PVID *
1 ▼

GVRP
Disabled ▼

Tagged VLAN
 ▼

Untagged VLAN
All Member VLAN IDs ▼

Copy Configurations ... ▼ i

CANCEL
APPLY

Mode

| Setting | Description | Factory Default |
|---------|---|-----------------|
| Access | When this port is connected to a single device, without tags. | Access |
| Trunk | When this port is connected to another 802.1Q VLAN aware switch. | |
| Hybrid | When this port is connected to another Access 802.1Q VLAN aware switch or another LAN that combines tagged and/or untagged devices. | |

PVID

| Setting | Description | Factory Default |
|-----------|--|-----------------|
| 1 to 4094 | Sets the default VLAN ID for untagged devices connected to the port. | None |

GVRP

| Setting | Description | Factory Default |
|----------|----------------|-----------------|
| Enabled | Enables GVRP. | Disabled |
| Disabled | Disables GVRP. | |

Tagged VLAN

| Setting | Description | Factory Default |
|-----------|---|-----------------|
| 1 to 4094 | This field will be active only when selecting the Trunk or Hybrid port type. Set the other VLAN ID for tagged devices that connect to the port. | None |

Untagged VLAN

| Setting | Description | Factory Default |
|--------------------------|--|-----------------|
| VID range from 1 to 4094 | This field is only active when the Hybrid port type is selected. Set the other VLAN ID for tagged devices that connect to the port and tags that need to be removed in egress packets. | 1 |


Copy Configurations to Ports

| Setting | Description | Factory Default |
|--|--|-----------------|
| Select the port(s) from the drop-down list | Copy the configuration to other port(s). | None |

When finished, click **APPLY** to save your changes.

Deleting an Existing VLAN

In Settings tab, check the VLAN you want to delete, and click the delete icon  .

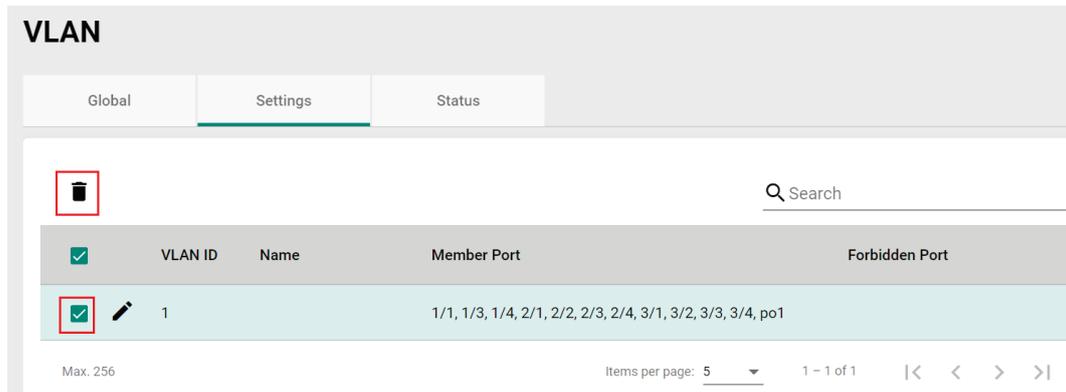

VLAN


Global Settings Status

Max. 256

| <input checked="" type="checkbox"/> | VLAN ID | Name | Member Port | Forbidden Port |
|-------------------------------------|---------|------|--|----------------|
| <input checked="" type="checkbox"/> | 1 | | 1/1, 1/3, 1/4, 2/1, 2/2, 2/3, 2/4, 3/1, 3/2, 3/3, 3/4, po1 | |

Items per page: 5 1 - 1 of 1

Click **DELETE** to delete the VLAN.

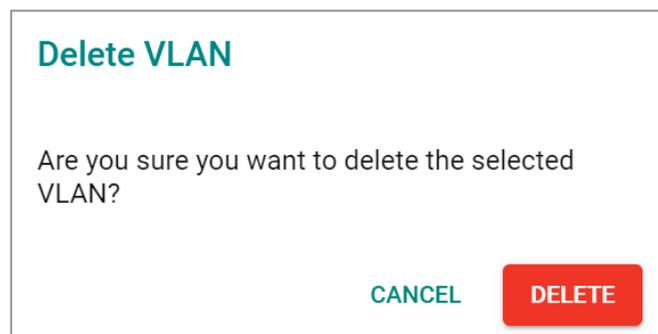

Delete VLAN

Are you sure you want to delete the selected VLAN?

CANCEL **DELETE**

GARP Overview

GARP stands for **Generic Attribute Registration Protocol**, which is a communication protocol defined by IEEE 802.1, offering a generic framework for bridges to register and de-register an attribute value. In a VLAN structure, two applications can be applied: **GARP VLAN Registration Protocol (GVRP)** is used to register VLAN trunking between multilayer switches, and **GARP Multicast Registration Protocol (GMRP)** for providing a constrained multicast flooding facility.

GARP Settings

Select **GARP** on the menu page, and then click the  icon on the port you want to configure.

| | Port | Join Time | Leave Time | Leave All Time |
|---|------|-----------|------------|----------------|
|  | 1/1 | 200 | 600 | 10000 |
|  | 1/3 | 200 | 600 | 10000 |
|  | 1/4 | 200 | 600 | 10000 |

Configure the following settings.

Edit Port 1/1 Settings

Join Time *

200

10 - 1073741810

Leave Time *

600

30 - 2147483630

Leave All Time *

10000

40 - 2147483640

Copy Configurations ... 

CANCEL APPLY

Join Time (sec.)

| Setting | Description | Factory Default |
|-----------------|---|-----------------|
| 10 to 499999980 | Input the join time from 10 to 499999980 seconds. | 200 |

Leave Time (sec.)

| Setting | Description | Factory Default |
|-----------------|--|-----------------|
| 30 to 499999980 | Input the leave time from 30 to 499999980 seconds. | 600 |

Leave All time (sec.)

| Setting | Description | Factory Default |
|-----------------|---------------------------|-----------------|
| 30 to 499999990 | Input the leave all time. | 10000 |


Copy Configurations to Ports

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Copy the configurations to other port(s). | None |

When finished, click **APPLY** to save your changes.

MAC

This section explains Independent VLAN learning and describes how to configure **Static Unicast** and the **MAC Address Table**.

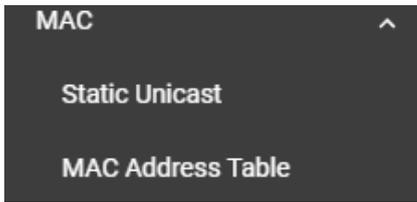

Independent VLAN Learning

Moxa's switch uses the **Independent VLAN Learning (IVL)** mode.

In an **IVL Mode**, a MAC table will be created in each VLAN, which will constitute many MAC tables. However, the same VID record will be selected and put in a table. A MAC table will be stored in the format of MAC + VID, the same MAC will be stored in different tables with different VIDs.

Static Unicast

Click **Static Unicast** on the function menu page and click the **+** icon on the configuration page.



Configure the following settings.

Add Static Unicast Entry

VLAN ID * MAC Address *

Port *

VLAN ID

| Setting | Description | Factory Default |
|-----------------|------------------|-----------------|
| Input a VLAN ID | Input a VLAN ID. | None |

MAC Address

| Setting | Description | Factory Default |
|-------------------------|------------------------------------|-----------------|
| MAC address of the port | Input the MAC address of the port. | None |

Port

| Setting | Description | Factory Default |
|---|---|-----------------|
| Select the port from the drop-down list | Specify the port you want to create a VLAN for. | None |

When finished, click **CREATE**.

MAC Address Table

Select **MAC Address Table** and configure the following settings.

MAC Address Table

MAC Learning Mode
Independent VLAN Learning

Aging Time *
300

10 - 300 sec.

APPLY

MAC Learning Mode

| Information | Description | Factory Default |
|---------------------------|-------------------------------------|---------------------------|
| Independent VLAN learning | Show the current MAC Learning Mode. | Independent VLAN learning |

Aging Time

| Setting | Description | Factory Default |
|-----------|------------------|-----------------|
| 10 to 300 | Input a VLAN ID. | None |

When finished, click **APPLY** to save your changes.

You can view the current MAC Address Table on the bottom part of the configuration page.


🔄 📄

| Index | VLAN | MAC Address | Type | Port |
|-------|------|-------------------|----------------|------|
| 1 | 1 | c8:cb:b8:02:26:5f | Learnt Unicast | 3/4 |

| Item Name | Description |
|-------------|---|
| Index | The number of the MAC address. |
| VLAN | The VLAN number |
| MAC Address | The MAC address on this device. |
| Type | Learnt Unicast, Learnt Multicast, Static Unicast, Static: Multicast |
| Port | The forwarding port of this MAC address. |

QoS

This section describes how QoS works and how to configure the settings.

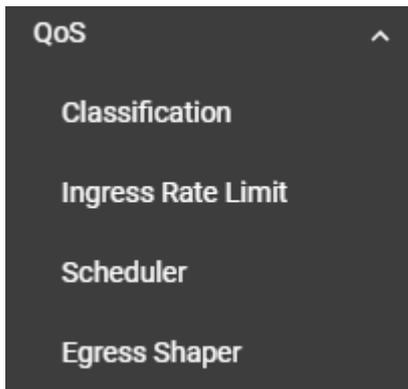

QoS Overview

The switch's traffic prioritization capability provides Quality of Service (QoS) to your network by making data delivery more reliable. You can prioritize traffic on your network to ensure that high priority data is transmitted with minimum delay. Traffic can be controlled by a set of rules to obtain the required Quality of Service for your network. The rules define different types of traffic and specify how each type should be treated as it passes through the switch. The switch can inspect both IEEE 802.1p/1Q layer 2 CoS (Class of Service) tags, and even layer 3 DSCP (Differentiated Services Code Point) information to provide consistent classification of the entire network. The switch's QoS capability improves the performance and determinism of industrial networks for mission-critical applications.

The Traffic Prioritization Concept

Traffic prioritization allows you to prioritize data so that time-sensitive and system-critical data can be transferred smoothly and with minimal delay over a network. The benefits of using traffic prioritization are:

- Improve network performance by controlling a wide variety of traffic and by managing congestion.
- Assign priorities to different categories of traffic. For example, set higher priorities for time-critical or mission-critical applications.
- Provide predictable throughput for multimedia applications, such as video conferencing or voice over IP, and minimize traffic delay and jitter.
- Optimize the network utilization depending on application usage and usage needs. Hence, asset owners do not always need to expand their backbone bandwidth as the amount of traffic increases.

Traffic prioritization uses eight traffic queues to ensure that higher priority traffic can be forwarded separately from lower priority traffic, which guarantees Quality of Service (QoS) to your network.

Moxa switch traffic prioritization is based on two standards:

- **IEEE 802.1p**—a layer 2 QoS marking scheme
- **Differentiated Services (DiffServ)**—a layer 3 QoS marking scheme.

IEEE 802.1p Class of Service

The IEEE Std 802.1D 2005 Edition marking scheme, which is an enhancement to IEEE Std 802.1D, enables Quality of Service on the LAN. Traffic service levels are defined in the IEEE 802.1Q 4-byte tag, which is used to carry VLAN identification as well as IEEE 802.1p priority information. The IEEE 802.1p occupying 3 bits of the tag follows the destination MAC address and Source MAC address.

The IEEE Std 802.1D 2005 Edition priority marking scheme assigns an IEEE 802.1p priority level between 0 and 7 to each frame, which specifies the level of service that the associated packets shall be handled. The table below shows an example of how different traffic types can be mapped to the eight IEEE 802.1p priority levels.

| IEEE 802.1p Priority Level | IEEE 802.1D Traffic Type |
|----------------------------|--|
| 0 | Best Effort |
| 1 | Background (lowest priority) |
| 2 | Reserved |
| 3 | Excellent Effort (business critical) |
| 4 | Controlled Load (streaming multimedia) |
| 5 | Video (interactive media) |
| 6 | Voice (interactive voice) |
| 7 | Network Control Reserved traffic |

Even though the IEEE 802.1p standard is the most widely used prioritization scheme for LAN environments, it still has some restrictions:

- It requires an additional 4-byte tag in the frame, which is normally optional for Ethernet networks. Without this tag, the scheme cannot work.
- The tag is part of the IEEE 802.1Q header, so to implement QoS at layer 2, the entire network must implement IEEE 802.1Q VLAN tagging.
- It is only supported within a LAN and does not cross the WAN boundaries, since the IEEE 802.1Q tags will be removed when the packets pass through a router.

Differentiated Services (DiffServ) Traffic Marking

DiffServ is a Layer 3 marking scheme that uses the DiffServ Code Point (DSCP) field in the IP header to specify the packet priority. DSCP is an advanced intelligent method of traffic marking that allows you to choose how your network prioritizes different types of traffic. The DSCP field can be set from 0 to 63 to map to user-defined service levels, enabling users to regulate and categorize traffic by applications with different service levels.

The advantages of DiffServ over IEEE 802.1Q are as follows:

- You can prioritize and assign different traffic with appropriate latency, throughput, or reliability by each port.
- No extra tags are required.
- The DSCP priority tags are carried in the IP header, which can pass the WAN boundaries and through the Internet.
- DSCP is backwards compatible with IPv4 ToS (Type of Service), which allows operation with legacy devices that use IPv4 layer 3.

Traffic Prioritization

Moxa switches classify traffic based on layer 2 of the OSI 7 layer model, and the switch prioritizes outbound traffic according to the priority information defined in the received packet. Incoming traffic is classified based upon the IEEE 802.1p service level field and is assigned to the appropriate egress priority queue. The traffic flow through the switch is as follows:

- A packet received by the Moxa switch may or may not have an 802.1p tag associated with it. If it does not, then it is given a default CoS value (according to the port settings in the classification section). Alternatively, the packet might be marked with a new 802.1p value, which will result in all knowledge of the previous 802.1p tag being lost.
- Each egress queue has associated 802.1p priority levels, and can be defined by users, the packet will be placed in the appropriate priority queue. When the packet reaches the head of its queue and is about to be transmitted, the device determines whether or not the egress port belongs to the VLAN group. If it is, then the new 802.1p tag is used in the extended 802.1D header.

Traffic Queues

The hardware of Moxa switches has multiple traffic queues that allow packet prioritization to occur. Higher priority traffic can pass through the Moxa switch without being delayed by lower priority traffic. As each packet arrives in the Moxa switch, it undergoes ingress processing (which includes classification, marking/re-marking), and is then sorted into the appropriate queue. The switch then forwards packets from each queue.

Moxa switches support two different queuing mechanisms:


- **Weight Fair:** This method services all the traffic queues, giving priority to the higher priority queues. Under most circumstances, the Weight Fair method gives high priority precedence over low priority, but in the event that high priority traffic does not reach the link capacity, lower priority traffic is not blocked.
- **Strict:** This method services high traffic queues first; low priority queues are delayed until no more high priority data needs to be sent. The Strict method always gives precedence to high priority over low priority.

Classification


There are three parameters in this section: **DSCP Mapping**, **CoS Mapping**, and **Port Setting**. The three parameters are described below in detail.

DSCP to CoS Mapping

In the **Classification** menu, click the **DSCP Mapping** tab, and then click the  icon.

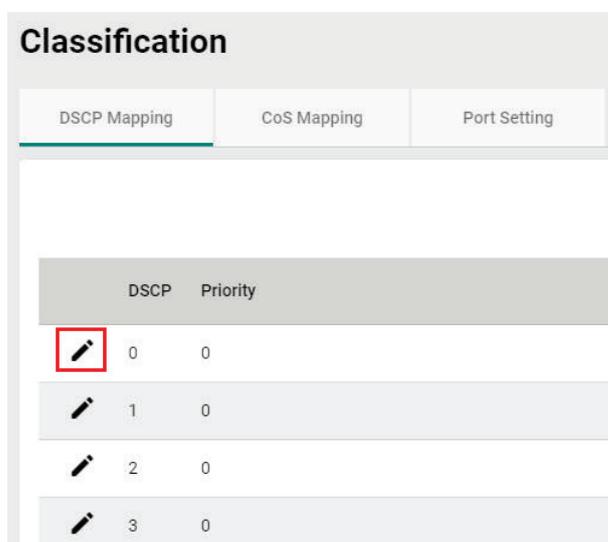

Configure the priority setting from the drop-down list for this port.

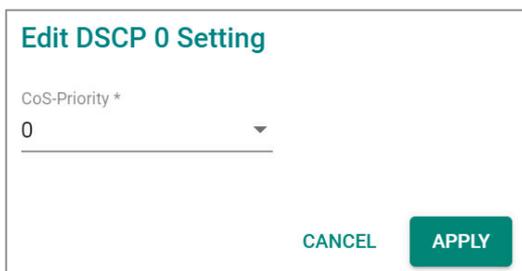

DSCP Value and Priority

| Setting | Description | Factory Default |
|----------|---|-----------------|
| 0 to 7 | Different DSCP values map to one of eight different priorities from 0 to 7. | 0 |
| 8 to 15 | | 1 |
| 16 to 23 | | 2 |
| 24 to 31 | | 3 |
| 32 to 39 | | 4 |
| 40 to 47 | | 5 |
| 48 to 55 | | 6 |
| 56 to 63 | | 7 |

When finished, click **APPLY** to save your changes.

CoS to Queue Mapping

In the **Classification** menu, click the **CoS Mapping** tab, and then click the  icon.

Classification

DSCP Mapping **CoS Mapping** Port Setting

| | CoS | Queue |
|---|-----|-------|
|  | 0 | 1 |
|  | 1 | 2 |
|  | 2 | 3 |
|  | 3 | 4 |

Configure the Queue priority setting for the port.

Edit CoS 0 Setting

Queue *

1

CANCEL APPLY

Queue Priority

| Setting | Description | Factory Default |
|---------|---|-----------------|
| 0 | Different 802.1p values map to one of the eight different queues from 1 (lowest priority) to 8 (highest). | 1 |
| 1 | | 2 |
| 2 | | 3 |
| 3 | | 4 |
| 4 | | 5 |
| 5 | | 6 |
| 6 | | 7 |
| 7 | | 8 |

Port Settings

In the **Classification** menu, click the **Port Setting** tab, and then click the  icon.

Classification

DSCP Mapping
CoS Mapping
Port Setting

| | Port | Trust Type | Priority |
|---|------|------------|----------|
|  | 1/1 | CoS | 3 |
|  | 1/2 | CoS | 3 |
|  | 1/3 | CoS | 3 |
|  | 1/4 | CoS | 3 |

Configure the following settings.

Edit Port 1/1 Settings

Trust Type *

CoS ▼

Untag Default Priority *

3 ▼

Copy Configurations ... ▼ 

CANCEL
APPLY

Trust Type

| Setting | Description | Factory Default |
|---------|--|-----------------|
| CoS | Enables the port with CoS-based traffic classification. | CoS |
| DSCP | Enables the port with DSCP-based traffic classification. | |

Untag Default Priority

| Setting | Description | Factory Default |
|---------|---|-----------------|
| 0 to 7 | 802.1p tag (CoS) can be range from 0 (lowest) to 7 (highest). | 3 |

Copy Config to Ports

| Setting | Description | Factory Default |
|--------------------------------|--|-----------------|
| Select from the drop-down list | Copy the settings to other ports you select. | None |

When finished, click **APPLY** to save your changes.

Ingress Rate Limit


Ingress Rate Limit Overview

The rate limit is composed of the meter and the marker. The meter is the monitoring of the data rates for a particular class of traffic. When the data rate exceeds user-configured values, marking or dropping of packets occurs immediately. The meter does not buffer the traffic; therefore, the transmission delay is not affected. When traffic exceeds the user's specified value, you can instruct the system to either drop the packets or mark QoS fields in them. The meter algorithms include simple token bucket and SrTCM (Single Rate Three Color Marker) (RFC2697). The marker of the rate limit is included and remarked in the 802.1p or the DSCP field of the packet.


Simple Token Bucket

The Token Bucket Concept


Token Bucket is an algorithm used to achieve an efficient network flow control and manage bandwidth. This algorithm is based on a token bucket that allows for a traffic surge for short periods. When a token is unavailable, no burst of packets can be sent. Under this concept, the number of tokens will be refilled in the bucket at specific intervals. Users need to configure these settings so that the tokens in the bucket are always available to ensure packets can be sent when necessary.

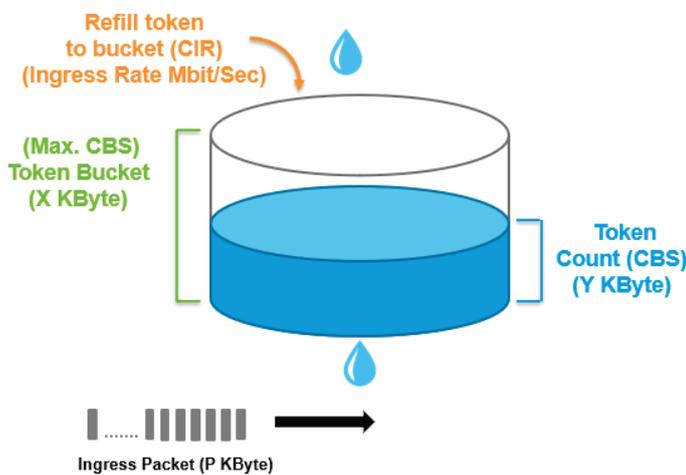

CAR (Committed Access Rate) is a traffic control mechanism used to ensure that packets meet the network rules before they enter the network. CAR can guarantee the traffic flow is under user-defined control; the packets exceeding the rule will be either dropped or remarked and transmitted again. When network traffic is jammed, these packets will be dropped first.

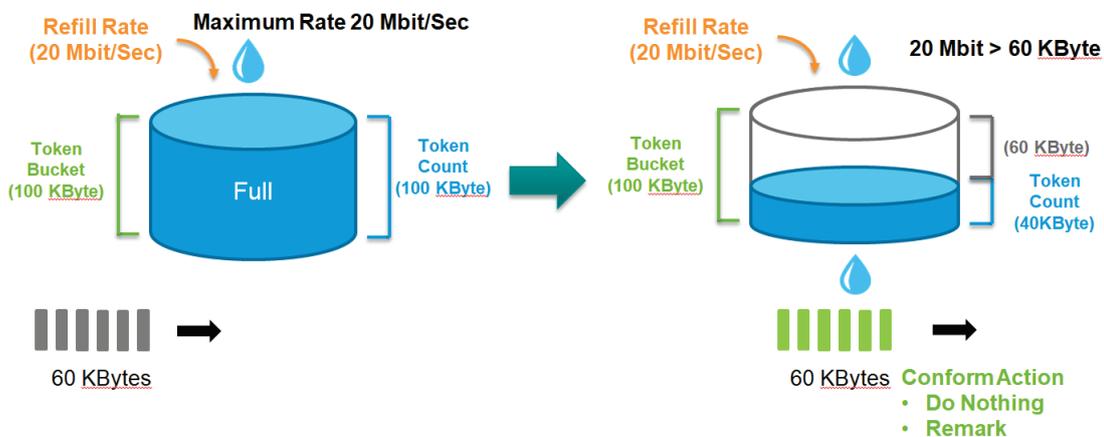

Token Bucket is an algorithm that is demonstrated as a container in the image below. The token can be seen as a marker to mark a packet that is allowed to be transmitted through this switch. When the token is flowing into the bucket, the length of the bucket will be consumed as the volume of the bucket is limited. When the volume of the bucket is insufficient, some packets will be dropped or remarked and transmitted again. This algorithm can control the speed of the traffic flow by consuming the speed of the token in the bucket.

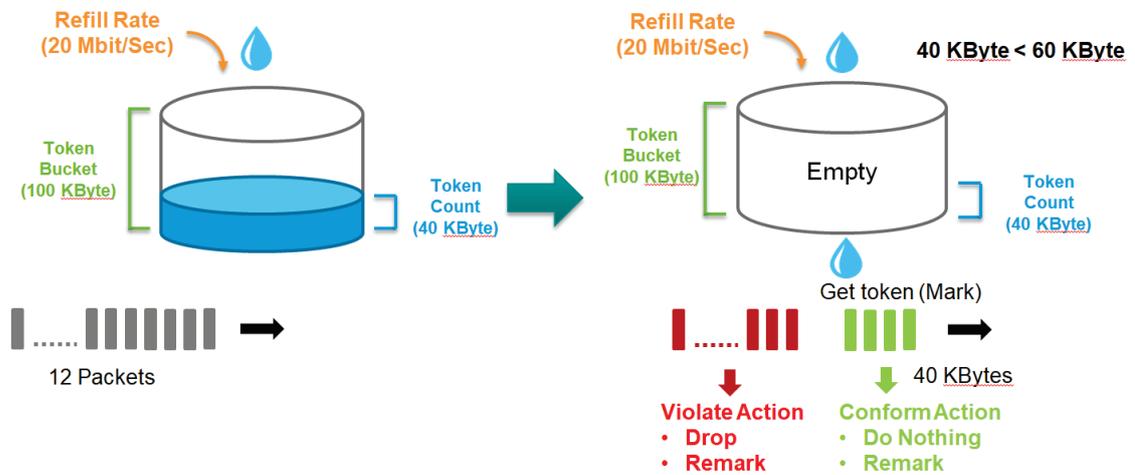


Simple Token Bucket Concept

In the Simple Token Bucket algorithm, two methods will be used:

CIR: Committed Information Rate: Users can pre-configure the CIR. To determine the size of the bucket, they will be sent along with the available tokens. When tokens are unavailable, the packets will not be sent until the tokens are added into the bucket. This guarantees sufficient network bandwidth and efficient flow control.

CBS: Committed Burst Rate: The tokens will be saved in both the CBS bucket and EBS bucket. When both buckets are full of tokens, the exceeding tokens will be dropped. This ensures that the specific amount of tokens are available so that the packet transmission can be stable.

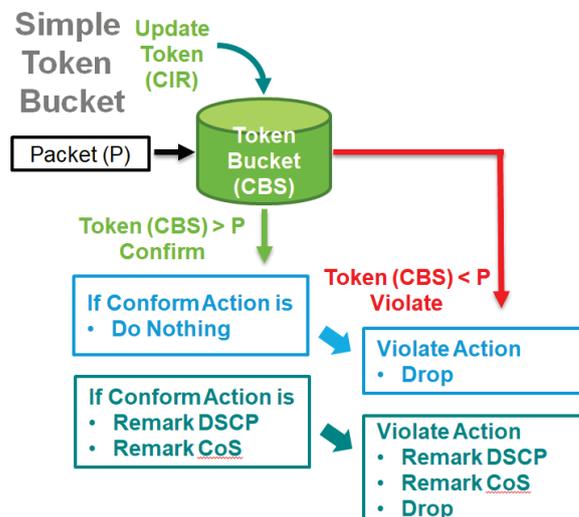

SrTCM (Single Rate Three Color Marker)

SrTCM Overview

SrTCM stands for A Single Rate Three Color Marker, which is another policing scheme for ingress rate limit. Traffic marking is based on a Committed Information Rate (CIR) and two associated burst sizes, a Committed Burst Size (CBS) and an Excess Burst Size (EBS). A packet is marked green if it does not exceed the CBS, yellow if it does exceed the CBS, but not the EBS, and red otherwise.

How SrTCM Works


SrTCM will categorize the ingress packet by its length, and mark it as one of three colors:

Red: performs the "violate" action.

Yellow: performs the "exceed" action. The Token Bucket (EBS) will deduct corresponding tokens.


Green: performs the "conform" action. The Token Bucket (CBS) will deduct corresponding tokens.

The SrTCM is useful for ingress policing of a service, where only the length, not the peak rate, of the burst determines service eligibility.

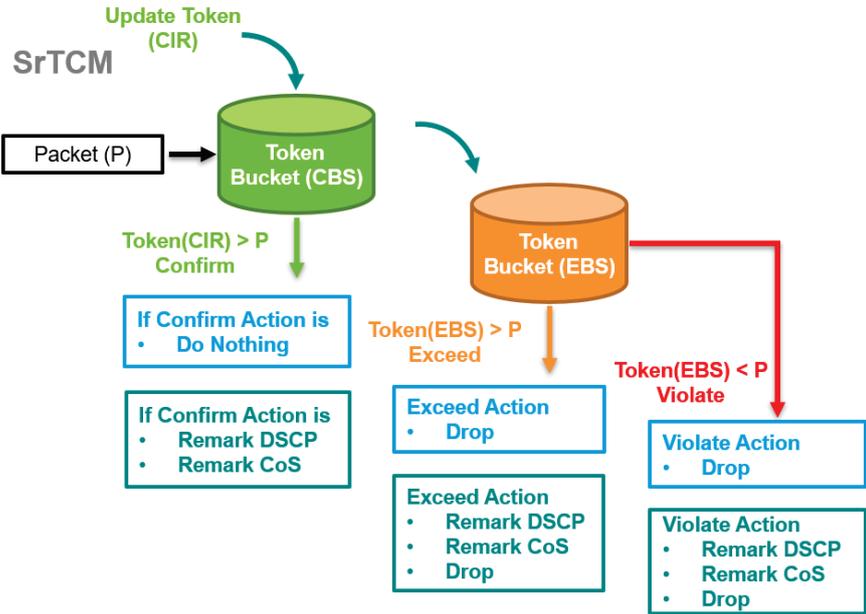

Exceed Rate Limit Threshold Port Shutdown

In general, any user shall not consume unlimited bandwidth and influence others' access. One particular scenario is that a malfunctioning switch or mis-configured network might cause "broadcast storms". Moxa industrial Ethernet switches not only prevent broadcast storms, but can also regulate ingress packet rates, giving administrators full control of their limited bandwidth to prevent undesirable effects caused by unpredictable faults.

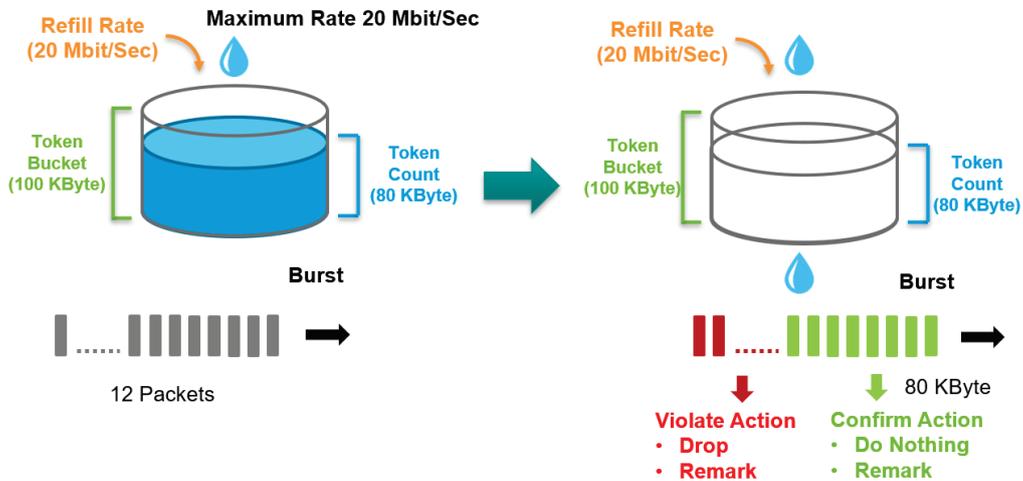

Editing Ingress Rate Limit

Switch to **Advanced Mode** before configuring the settings in this section.

On the **Ingress Rate Limit** menu, click the **General** tab, and then click the  icon.

Ingress Rate Limit

General | Port Shutdown

Search

| Port | Type | Ingress Rate (CIR) | CBS | EBS | Mode | Confirm Action | Exceed Action | Violate Action | |
|---|------|---------------------|------|------|------|----------------|---------------|----------------|------|
|  | 1/1 | Simple Token Bucket | 1000 | 1024 | 1024 | Color-Blind | Do Nothing | Drop | Drop |
|  | 1/2 | Simple Token Bucket | 1000 | 1024 | 1024 | Color-Blind | Do Nothing | Drop | Drop |
|  | 1/3 | Simple Token Bucket | 1000 | 1024 | 1024 | Color-Blind | Do Nothing | Drop | Drop |
|  | 1/4 | Simple Token Bucket | 1000 | 1024 | 1024 | Color-Blind | Do Nothing | Drop | Drop |

Configure the following settings.

Edit Port 1/1 Settings

Type *
Simple Token Bucket ▼

Ingress Rate (CIR) *
10000
1 - 10000 Mbps

CBS *
1024
10 - 10240 KByte

Conform Action *
Do Nothing ▼

Violate Action *
Drop ▼

Copy Configurations ... ▼ i

CANCEL
APPLY

Type

| Setting | Description | Factory Default |
|---------------------|--|---------------------|
| Simple Token Bucket | Specify Simple Token Bucket as Ingress Limit type. | Simple Token Bucket |
| SrTCM | Specify SrTCM as Ingress Limit type. | |

Ingress Rate (CIR) (Mbps)

| Setting | Description | Factory Default |
|-----------|---|-----------------|
| 1 to 1000 | Define the specific incoming data communication speed given to this port. | 1000 |

CBS (Committed Burst Size) (Kbyte)

| Setting | Description | Factory Default |
|------------|---|-----------------|
| 0 to 10240 | Input the specific data communication speed given to this port when the data rate exceeds the CIR rate. The data that exceeded the CIR rate will be saved in temporary storage, and will be sent when bandwidth is available. | 1024 |

EBS (Excess Burst Size) (Kbyte)

| Setting | Description | Factory Default |
|------------|---|-----------------|
| 0 to 10240 | Input the specific data communication speed given to this port when the data rate exceeds the CIR rate. The data that exceeded the CIR rate will be saved in temporary storage, and will be sent when bandwidth is available. | 1024 |

Confirm Action

| Setting | Description | Factory Default |
|-------------|------------------------|-----------------|
| Do Nothing | Do nothing. | Do Nothing |
| Remark CoS | Remark the CoS value. | |
| Remark DSCP | Remark the DSCP value. | |

Violate Action

| Setting | Description | Factory Default |
|-------------|--|-----------------|
| Drop | Drop the packet if the packet violates CIR and CBS. | Drop |
| Remark CoS | Remark the CoS value if the packet is marked as violated. | |
| Remark DSCP | Remark the DSCP value if the packet is marked as violated. | |

Copy Configurations to Ports

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Copy the configurations to other port(s). | None |

When finished, click **APPLY** to save your changes.

Editing Port Shutdown

To edit the port shutdown configurations, click the **Port Shutdown** tab.

Ingress Rate Limit

General | **Port Shutdown**

Port Shutdown *
Disabled

Release Interval *
60
0 - 10080 min.

APPLY

Configure the following settings.

Enable

| Setting | Description | Factory Default |
|---------|---|-----------------|
| Enable | Enable the port to be shut down. | Disabled |
| Disable | Disable the ability for the port to be shut down. | |

Release Interval (min.)

| Setting | Description | Factory Default |
|------------|---|-----------------|
| 0 to 10080 | Specify the release interval for the port to shut down. 0 means this port will be shut down until manually enabled. | 60 |

When finished, click **APPLY** to save your changes.

Editing the Port for Port Shutdown

Edit the specific port that you want to edit the port shutdown configurations for.

| | Port | Enable | Threshold (Mbps) |
|---|------|----------|------------------|
|  | 1/1 | Disabled | 1000 |
|  | 1/2 | Disabled | 1000 |
|  | 1/3 | Disabled | 1000 |
|  | 1/4 | Disabled | 1000 |

Configure the following settings.

Edit Port 1/1 Settings

Port Shutdown *
 Disabled ▼

Threshold *
 10000

1 - 10000 Mbps

Copy Configurations ... ▼ 

CANCEL APPLY

Enable

| Setting | Description | Factory Default |
|---------|--------------------------------------|-----------------|
| Enable | Enable port shutdown for this port. | Disable |
| Disable | Disable port shutdown for this port. | |

Threshold (Mbps)

| Setting | Description | Factory Default |
|-----------|---|-----------------|
| 1 to 1000 | Specify the threshold for port shutdown | 1000 |

Copy Configuration to Ports

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Copy the configurations to other port(s). | None |

When finished, click **APPLY** to save your changes.

Scheduler

Scheduler Overview

Scheduler is an arbiter in switch forwarding path to prioritize traffic flows by users' defined criteria. This essentially enhances data transmission efficiency and guarantees that critical packets can be transmitted earlier. Moxa's switches support two scheduling algorithms: Strict Priority and Weighted Round Robin.

Strict Priority

The Strict Priority type allows users to determine to transmit packets in the highest priority queue first, while packets with lower priority will be transmitted later. This guarantees that traffic with the highest level of priority for data transmission will go first.

Weighted Round Robin

The Weighted Round Robin type allows users to give priority to specific packets in the higher weighted queue to ensure those packets will be sent first. Moxa switches now have 8 queues, and the weights from highest to lowest are 8:8:4:4:2:2:1:1.

Scheduler Settings

Select Scheduler in the menu and then click the  icon on the port you want to configure.

| Scheduler | | |
|---|------|--|
| Port | Type | |
|  1/1 | SP | |
|  1/2 | SP | |
|  1/3 | SP | |
|  1/4 | SP | |

Configure the following settings.

Edit Port 1/1 Settings

Type *
Strict Priority

Copy Configurations ... 

CANCEL APPLY

Type

| Setting | Description | Factory Default |
|----------------------|--|-----------------|
| Strict Priority | Set scheduler algorithm as Strict Priority. | Strict Priority |
| Weighted Round Robin | Set the scheduler algorithm as Weighted Round Robin: The queued packet will be forwarded by its associated weight. | |

Copy Configurations to Ports

| Setting | Description | Factory Default |
|---|--|-----------------|
| Select the port from the drop-down list | Copy the same settings to other ports. | None |

When finished, click **APPLY** to save your changes.

Egress Shaper Overview

A shaper typically delays excess traffic using a buffer or queueing mechanism to hold packets and shape the flow when the data rate of the source is higher than expected. There are two possible metering algorithms: token bucket, or leaky bucket. The leaky bucket algorithm works similarly to the way an actual leaky bucket holds water: The leaky bucket takes data and collects it up to a maximum capacity. Credit in the bucket is only released from the bucket at a set rate. When the bucket consumes all data, the leaking will stop. If incoming data would overflow the bucket, then the packet is considered to be non-conformant and is not added to the bucket. Data will be added back to the bucket as space becomes available for conforming packets.

Egress Shaper Settings and Status

This section describes how to configure Egress Shaper. Switch to **Advanced Mode** first and select **Egress Shaper** in the menu and then click the  icon on the port you want to configure.

Egress Shaper

| | Port | Egress Rate (CIR) | CBS |
|---|------|-------------------|------|
|  | 1/1 | 1000 | 1024 |
|  | 1/2 | 1000 | 1024 |
|  | 1/3 | 1000 | 1024 |
|  | 1/4 | 1000 | 1024 |

Configure the following settings.

Edit Port 1/1 Settings

CIR *

1 - 10000 Mbps

CBS *

10 - 10240 KByte

Copy Configurations ... i

CANCEL APPLY

CIR (Committed Information Rate) (Mbps)

| Setting | Description | Factory Default |
|-----------|---|-----------------|
| 1 to 1000 | The average committed data transmission rate. | 1000 |

CBS (Committed Burst size) (Kbyte)

| Setting | Description | Factory Default |
|-------------|--|-----------------|
| 10 to 10240 | The maximum traffic amount (in Kbyte) that can be transmitted within a very short interval of time or burst. | 1024 |

Copy Configurations to Ports

| Setting | Description | Factory Default |
|---|--|-----------------|
| Select the port from the drop-down list | Copy the same settings to the other ports. | None |

When finished, click **APPLY** to save your changes.


You can view the Egress Shaper status.

Egress Shaper

| | Port | Egress Rate (CIR) | CBS |
|--|------|-------------------|------|
| | 1/1 | 1000 | 1024 |
| | 1/2 | 1000 | 1024 |
| | 1/3 | 1000 | 1024 |
| | 1/4 | 1000 | 1024 |

Multicast

Multicast filtering improves the performance of networks that carry multicast traffic. This section will explain the Layer 2 multicast settings, such as **IGMP Snooping**, **GMRP**, and **Static Multicast**.

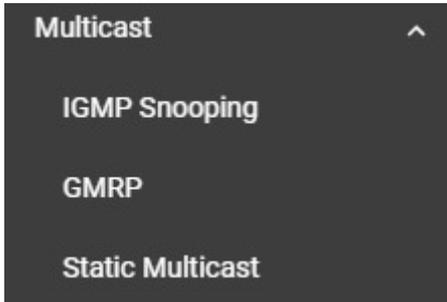

IGMP Snooping

IGMP Snooping Overview


IGMP stands for **Internet Group Management Protocol**, which is a network communication protocol that hosts nearby routers on networks to construct multicast group memberships.

IGMP snooping allows a network switch to listen in on the IGMP conversation between hosts and routers. By listening to these conversations, the switch maintains an association mapping table between port(s) and multicast group.


How IGMP Snooping Works

A switch will, by default, flood multicast traffic to all the other ports, aside ingress, in a broadcast domain (or the VLAN equivalent). Multicast can cause unnecessary loading for host devices by requiring them to process packets they have not solicited. IGMP snooping is designed to prevent hosts on a local network from receiving traffic for a multicast group they have not explicitly joined. It provides switches with a mechanism to forward multicast traffic to specific ports that receive IGMP hosts. Hence, IGMP snooping can utilize the network bandwidth more efficiently.

Without IGMP Snooping

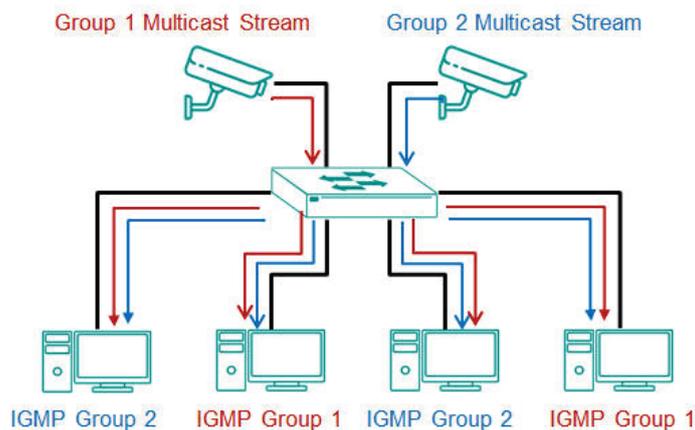

With IGMP Snooping

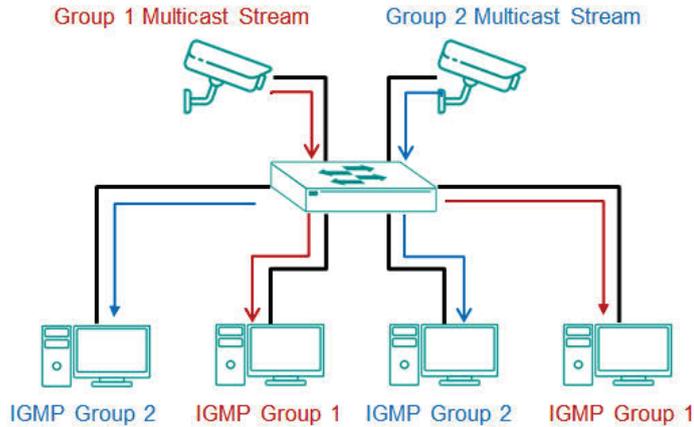

Differences Between IGMP Snooping V1, V2, and V3

IGMP protocols regulate the communication mechanism between querier and listener. IGMP Snooping has three different versions. Refer to the following table for the detailed differences.

| IGMP Version | Main Features | Reference |
|--------------|--|-----------|
| V1 | The IGMPv1 querier will periodically send out a "query". Listeners can solicit a "report" of their interested group. However, IGMPv1 does not have a "leave group" message, and the querier might need to implement a timeout mechanism for each registered group. | RFC-1112 |
| V2 | Compatible with V1 and the following functions: a. Group-specific query b. Leave group messages c. Resends specific queries to verify leave message was the last one in the group d. Querier election if multiple capable queries are present. | RFC-2236 |
| V3 | Compatible with V1, V2, and the following functions: Source filtering enables hosts to specify: - the multicast traffic from a specified source - the multicast traffic from any source except a specified source | RFC-3376 |

IGMP Snooping Settings

First, select **IGMP Snooping** on the menu and then click the **General** tab on the configuration page.

IGMP Snooping

General | VLAN Settings | Group Table | Forwarding Table

IGMP Snooping *
Disabled

APPLY

Enable

| Setting | Description | Factory Default |
|----------|---|-----------------|
| Enabled | Enable IGMP Snooping on a specific VLAN. | Disabled |
| Disabled | Disable IGMP Snooping on a specific VLAN. | |

When finished, click **APPLY** to save your changes.

Configuring VLAN Setting

Click the **VLAN Setting** tab, and then click the  icon to configure the VLAN settings.

IGMP Snooping

General | **VLAN Setting** | Group Table | Forwarding Table

| | VLAN | Enable | Version | Query Interval | Config Role | Active Role | Static Router Port |
|---|------|----------|---------|----------------|-------------|-------------|--------------------|
|  | 1 | Disabled | 2 | 125 | Querier | Non-Querier | |
|  | 2 | Disabled | 2 | 125 | Querier | Non-Querier | |

Edit VLAN 1 Settings

IGMP Snooping *
 Disabled ▼

Version *
 2 ▼

Query Interval *
 125
 20 - 600 sec.

Static Router Port ▼

Config Role *
 Querier ▼

CANCEL APPLY

IGMP Snooping

| Setting | Description | Factory Default |
|----------|------------------------------------|-----------------|
| Enabled | Enable IGMP Snooping on a switch. | Disabled |
| Disabled | Disable IGMP Snooping on a switch. | |

Version

| Setting | Description | Factory Default |
|---------|--|-----------------|
| 1, 2, 3 | Specify the IGMP version of the packets that the switch listens to and send queries for. | 2 |

Query Interval (sec)

| Setting | Description | Factory Default |
|-----------|---|-----------------|
| 20 to 600 | Specify the query interval for the Querier function globally (Querier has to be enabled.) | 125 |

Static Router Port

| Setting | Description | Factory Default |
|--|--|-----------------|
| Check the port from the drop-down list | The router port is the port that connects to the upper level router (or IGMP querier), or to the upper level router of downstream multicast streams. All of the received IGMP signaling packets or multicast streams will be forwarded to those static router ports. | None |

Config Role

| Setting | Description | Factory Default |
|-------------|--|-----------------|
| Querier | The switch will act as the Querier role. | Querier |
| Non-Querier | The switch will not act as the Querier role. | |

When finished, click **APPLY** to save your changes.

Viewing the Group Table

Click the **Group Table** tab, which allows you to view the current Group Table status.

| VLAN | Group Address | Filter Mode | Port | Source Address |
|------|-----------------|-------------|------|----------------|
| 1 | 239.255.255.250 | Exclude | 3/4 | 0.0.0.0 |

Refer to the following table for the detailed description for each item.

| Item | Description |
|----------------|--|
| VLAN | The VLAN ID. |
| Group Address | The registered multicast group. |
| Filter Mode | Only applicable for IGMPv3. (v1 and v2 will display "N/A") Include: source-specific multicast address group Exclude: source-specific exclusive multicast address group |
| Port | The forwarded port. |
| Source Address | Only applicable for IGMPv3. (v1 and v2 will display N/A) |

Viewing the Forwarding Table

Click the **Forwarding Table** tab to view the current forwarding table.

| VLAN | Group Address | Source Address | Port |
|------|-----------------|----------------|------|
| 1 | 239.255.255.250 | 192.168.127.1 | 3/4 |

Refer to the following table for a description of each item.


| Item | Description |
|----------------|---|
| VLAN | The VLAN ID. |
| Group Address | The associated multicast group address of the streaming data. |
| Source Address | The source address of the streaming data. |
| Port | The forwarded port. |

GMRP

GMRP stands for GARP Multicast Registration Protocol, which is a Generic Attribute Registration Protocol (GARP) application that can be used to prevent multicast from data flooding. Both GMRP and GARP are defined by the IEEE 802.1P, and widely used as a standard protocol in various industrial-related applications. GMRP allows bridges and the devices at the edge of the network to perform a dynamic group membership information registration with the MAC bridges connected to the same LAN section. The information can be transmitted among all bridges in the Bridge LAN that is implemented with extended filtering features. To operate GMRP, the GARP service must be established first.

Configuring GMRP Setting

To configure the GMRP settings, click **GMRP** on the menu.

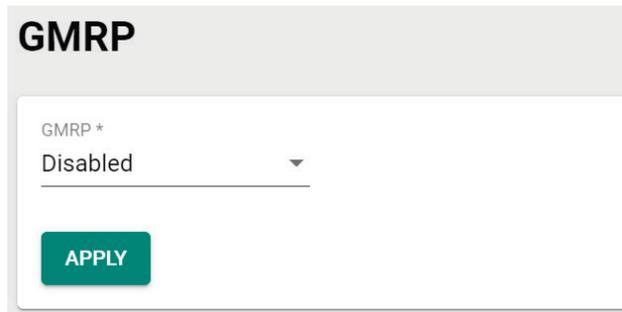

Configure the following settings.

GMRP

| Setting | Description | Factory Default |
|----------|---------------|-----------------|
| Enabled | Enable GMRP. | Disabled |
| Disabled | Disable GMRP. | |

When finished, click **APPLY** to save your changes.

Configuring GMRP Settings for Each Port

Next, click the  icon on the port you want to configure.

| | Port | Enable | Group Restrict |
|---|------|----------|----------------|
|  | 1/1 | Disabled | Disabled |
|  | 1/3 | Disabled | Disabled |
|  | 1/4 | Disabled | Disabled |

Configure the following settings.

GMRP

| Setting | Description | Factory Default |
|----------|-----------------------------|-----------------|
| Enabled | Enable GMRP for this port. | Disabled |
| Disabled | Disable GMRP for this port. | |

Group Restrict

| Setting | Description | Factory Default |
|----------|---|-----------------|
| Enabled | Enable Group Restrict on the port. This specific port will not process any GMRP control packets. | Disabled |
| Disabled | Disable Group Restrict on the port. The specific port will receive and process incoming GMRP control packets. | |

Copy Config to Ports

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Allows you to copy the configurations to other port(s). | None |

When finished, click **APPLY** to save your changes.

Static Multicast

Click **Static Multicast** on the menu to view the current multicast table.

Adding Static Multicast Entry

To add more tables, click the  icon.

Configure the following settings.

Add Static Multicast Entry

VLAN ID * ▼

MAC Address *

Port * ▼

Forbidden Port ▼

CANCEL
CREATE

VLAN ID

| Setting | Description | Factory Default |
|---------------|---|-----------------|
| Input the VID | Specify the multicast group's associated VLAN ID. | None |

MAC Address

| Setting | Description | Factory Default |
|-----------------------|------------------------------------|-----------------|
| Input the MAC address | Specify the multicast MAC address. | None |

Port

| Setting | Description | Factory Default |
|--|---|-----------------|
| Input the port from the drop-down list | Set the port(s) as an egress port(s) so that multicast streams can be forwarded to this port. | None |

Forbidden Port

| Setting | Description | Factory Default |
|--|---|-----------------|
| Input the port from the drop-down list | Set the port as forbidden so that packets cannot be forwarded to this port. | None |

When finished, click **CREATE**.

Network Redundancy

Setting up the Redundancy Protocol on your network helps protect critical links against failure, protects against network loops, and keeps network downtime to a minimum.

The Redundancy Protocol allows you to set up redundant paths on the network to provide a backup data transmission route in the event that a cable or one of the switches is inadvertently disconnected or damaged. This is a particularly important feature for industrial applications, since it can take several minutes to address the link down port or failed switch. For example, if a Moxa switch is used as a key communications device for a production line, several minutes of downtime can cause a big loss in production and revenue. Moxa switches support the following Redundancy Protocol functions:

- **Spanning Tree**
- **Turbo Ring V2**
- **Turbo Chain**
- **Dual Homing**

Layer 2 Redundancy

First select **Network Redundancy** on the menu and then click **Layer 2 Redundancy**.



Spanning Tree

Spanning Tree Overview


Spanning Tree Protocol (STP) was designed to help construct a loop-free logical topology on an Ethernet network and provide an automatic means of avoiding any network loops. This is particularly important for networks that have a complicated architecture, since unintended loops in the network can cause broadcast storms. Moxa switches' STP feature is disabled by default. To be completely effective, you must enable STP/RSTP on every Moxa switch connected to your network.

STP (802.1D) is a bridge-based system that is used to implement parallel paths for network traffic. STP uses a loop-detection process to:


- Locate and then disable less efficient paths (e.g., paths that have lower bandwidth).
- Enable one of the less efficient paths if a more efficient path fails.

How STP Works


The figure below shows a network made up of three LANs separated by three bridges. Each segment uses at most two paths to communicate with the other segments. Since this configuration can give rise to loops, the network will overload if STP is not enabled.

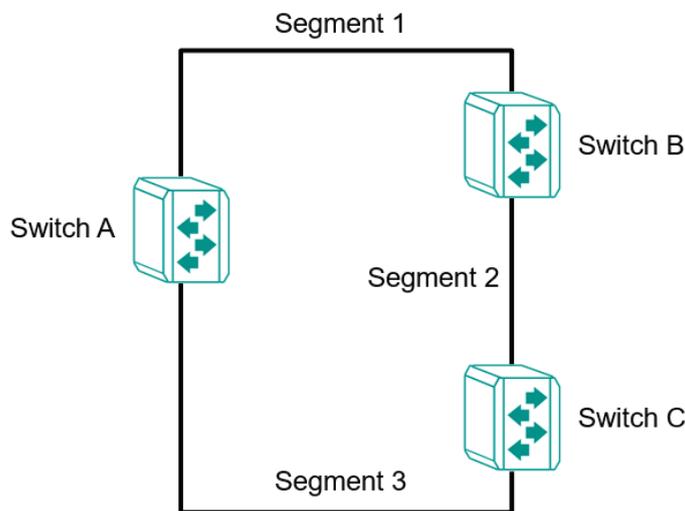

If STP is enabled, it will detect duplicate paths or block one of the paths from forwarding traffic. In the following example, STP determined that traffic from segment 2 to segment 1 flows through switches C and A since this path is in a forwarding state and is processing BPDUs. However, switch B on segment 1 is in a blocking state.

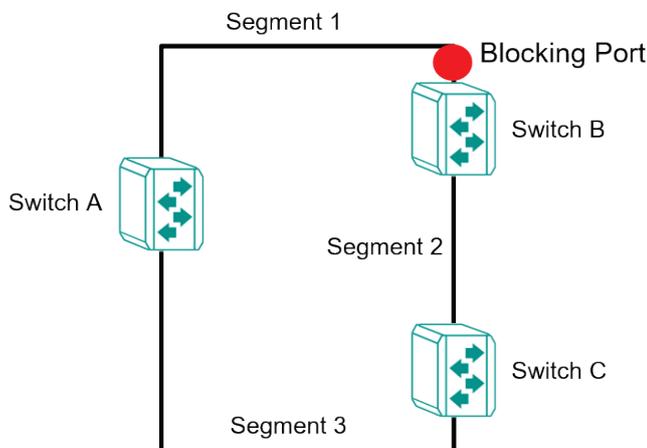

What happens if a link failure is detected? As shown in the figure below, the STP will change the blocking state to a forwarding state so that traffic from segment 2 flows through switch B to segment 1 through a redundant path.

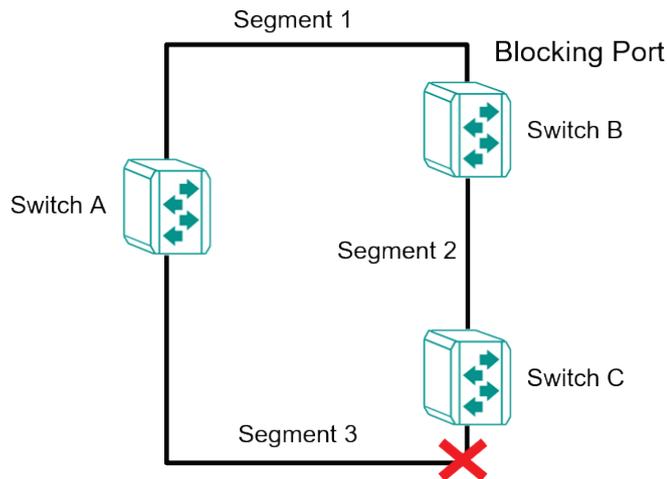

STP will determine which path between each segment is most efficient, and then assign a specific reference point on the network. When the most efficient path has been identified, the other paths are blocked. In the previous three figures, STP first determined that the path through switch C was the most efficient, and as a result, blocked the path through switch B. After the failure of switch C, STP re-evaluated the situation and opened the path through switch B.

Difference Between STP and RSTP

RSTP is similar to STP but includes additional information in the BPDUs that allow each bridge to confirm that it has taken action to prevent loops from forming when it decides to enable a link to a neighboring bridge. Adjacent bridges connected via point-to-point links will be able to enable a link without waiting to ensure that all other bridges in the network have had time to react to the change. The main benefit of RSTP is that the configuration decision is made locally rather than network-wide, allowing RSTP to carry out automatic configuration and restore a link faster than STP.

STP and RSTP spanning tree protocols operate without regard to a network's VLAN configuration and maintain one common spanning tree throughout a bridged network. Thus, these protocols map one loop-free, logical topology on a given physical topology.

STP/RSTP Settings and Status

This section describes how to configure Spanning Tree settings.

General

Click **Spanning Tree** on the menu and then select the **General** tab.

The screenshot shows the 'Spanning Tree' configuration interface with the 'General' tab selected. The 'STP Mode' dropdown menu is set to 'Disabled'. Below the dropdown is a green 'APPLY' button.

Configure the following settings.

STP Mode

| Setting | Description | Factory Default |
|----------|-----------------------------------|-----------------|
| Disabled | Disable Spanning Tree. | Disabled |
| STP/RSTP | Specify STP/RSTP as the STP mode. | |
| MSTP | Specify MSTP as the STP mode. | |

STP/RSTP Mode Settings

If you select **STP/RSTP** as the STP mode, configure the following settings.

The screenshot shows the 'Spanning Tree' configuration interface with the 'General' tab selected. The 'STP Mode' is set to 'STP/RSTP', 'Compatibility' to 'RSTP', and 'Bridge Priority' to '32768'. Below these are fields for 'Forward Delay Time' (15), 'Hello Time' (2), 'Max. Age' (20), and 'Error Recovery Time' (300). A green 'APPLY' button is at the bottom.

STP Mode

| Setting | Description | Factory Default |
|----------|--|-----------------|
| STP/RSTP | Use the STP/RSTP mode as the Spanning Tree protocol. | STP/RSTP |

Compatibility

| Setting | Description | Factory Default |
|---------|--|-----------------|
| STP | To be compatible with STP mode only | RSTP |
| RSTP | To be compatible with RSTP and STP modes | |

Bridge Priority

| Setting | Description | Factory Default |
|------------|---|-----------------|
| 0 to 61440 | Increase this device's bridge priority by selecting a lower number. A device with a higher bridge priority has a greater chance of being established as the root of the Spanning Tree topology. | 32768 |

Forwarding Delay Time (sec.)

| Setting | Description | Factory Default |
|---------|--|-----------------|
| 4 to 30 | The amount of time the device waits before checking to see if it should change to a different state. | 15 |

Hello Time (sec.)

| Setting | Description | Factory Default |
|---------|--|-----------------|
| 1 or 2 | The root of the Spanning Tree topology periodically sends out a "hello" message to other devices on the network to check if the topology is healthy. The "hello time" is the amount of time the root waits between sending hello messages. | 2 |

Max Age (sec.)

| Setting | Description | Factory Default |
|---------|---|-----------------|
| 6 to 40 | If this device is not the root, and it has not received a hello message from the root in the amount of time equal to "Max. Age," then this device will reconfigure itself as a root. Once two or more devices on the network are recognized as a root, the devices will renegotiate a new Spanning Tree topology. | 20 |

Error Recovery Time (sec.)

| Setting | Description | Factory Default |
|-------------|--|-----------------|
| 30 to 65535 | If the BPDU guard is triggered on a port, it will automatically recover to the normal state after the Error Recovery Time. | 300 |

When finished, click **APPLY** to save your changes.

If you select **MSTP** as the STP mode, configure the following settings.

Spanning Tree

General Guard Status

STP Mode * MSTP Compatibility * MSTP

| | | | |
|----------------------|-------------------|-------------|-----------------------|
| Forward Delay Time * | Hello Time * | Max. Age * | Error Recovery Time * |
| 15 | 2 | 20 | 300 |
| 4 - 30 sec. | 1 - 2 sec. | 6 - 40 sec. | 30 - 65535 sec. |
| Region Name | Region Revision * | Max. Hops * | |
| MSTP | 0 | 20 | |
| 4 / 32 | 0 - 65535 | 6 - 40 | |

APPLY

STP Mode

| Setting | Description | Factory Default |
|---------|--|-----------------|
| MSTP | Use the MSTP mode as the Spanning Tree protocol. | MSTP |

Compatibility

| Setting | Description | Factory Default |
|---------|---|-----------------|
| MSTP | To only be compatible with MTP mode. | MSTP |
| STP | To only be compatible with STP mode. | |
| RSTP | To be compatible with RSTP and STP modes. | |

Forwarding Delay Time (sec.)

| Setting | Description | Factory Default |
|---------|--|-----------------|
| 4 to 30 | The amount of time the device waits before checking to see if it should change to a different state. | 15 |

Hello Time (sec.)

| Setting | Description | Factory Default |
|---------|--|-----------------|
| 1 or 2 | The root of the Spanning Tree topology periodically sends out a "hello" message to other devices on the network to check if the topology is healthy. The "hello time" is the amount of time the root waits between sending hello messages. | 2 |

Max Age (sec.)

| Setting | Description | Factory Default |
|---------|---|-----------------|
| 6 to 40 | If this device is not the root, and it has not received a hello message from the root in the amount of time equal to "Max. Age," then this device will reconfigure itself as a root. Once two or more devices on the network are recognized as a root, the devices will renegotiate a new Spanning Tree topology. | 20 |

Error Recovery Time (sec.)

| Setting | Description | Factory Default |
|-------------|--|-----------------|
| 30 to 65535 | If the BPDU guard is triggered on a port, it will automatically recover to the normal state after the Error Recovery Time. | 300 |

Region Name

| Setting | Description | Factory Default |
|--------------------|--------------------------|-----------------|
| 0 to 32 characters | Provide the region name. | MSTP |

Region Revision

| Setting | Description | Factory Default |
|-------------------------|------------------------------|-----------------|
| 0 to 65535 (characters) | Provide the region revision. | 0 |

Max. Hops

| Setting | Description | Factory Default |
|---------|---------------------------------|-----------------|
| 6 to 40 | Provide the maximum hops value. | 20 |

When finished, click **APPLY** to save your changes.

Editing Spanning Tree for a Port

To edit the spanning tree settings for a specific port, click the  icon on the port you want to configure.

| | Port | Enable | Edge | Priority | Path Cost | Link Type |
|---|------|----------|------|----------|-----------|-----------|
|  | 1/1 | Disabled | Auto | 128 | 0 | Auto |
|  | 1/3 | Disabled | Auto | 128 | 0 | Auto |
|  | 1/4 | Disabled | Auto | 128 | 0 | Auto |

Configure the following settings.

Edit Port 1/1 Settings

Enable *
Disabled ▼

Edge *
Auto ▼

Priority *
128
0 - 240, multiples of 16

Path Cost *
0 ⓘ
0 - 200000000

Link Type *
Auto ▼

Copy Configurations ... ⓘ

CANCEL APPLY

Enable

| Setting | Description | Factory Default |
|----------|------------------------|-----------------|
| Enabled | Enable Spanning Tree. | Disabled |
| Disabled | Disable Spanning Tree. | |

Edge

| Setting | Description | Factory Default |
|---------|---|-----------------|
| Auto | Automatically detect to be the edge port. | Auto |
| Yes | Set as an edge port. | |
| No | Do not set as an edge port. | |

Priority

| Setting | Description | Factory Default |
|----------------------------|---|-----------------|
| 0 to 240 (multiples of 16) | Increase the priority of a port by selecting a lower number. A port with a higher priority has a greater chance of being a root port. | 128 |

Path Cost

| Setting | Description | Factory Default |
|---------------|---|-----------------|
| 0 to 20000000 | The path cost value will be automatically assigned according to the different port speed if the value is set to zero. | 0 |

Link Type

| Setting | Description | Factory Default |
|----------------|--|-----------------|
| Point-to-point | Set to Point-to-point when port operating in full-duplex mode, such as a switch. | Auto |
| Shared | Set to Shared when port operating in half-duplex mode, such as a hub. | |
| Auto | Automatically select Point-to-point or Shared mode. | |

Copy Configurations to Ports

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Copy the configurations to other port(s). | None |

Click **APPLY** to finish.

BPDU Overview

BPDUs (Bridge Protocol Data Units) are the network communication frames used in the STP (Spanning Tree Protocol). When two switches exchange messages, BPDUs are used to calculate the STP topology, and determine the network communication route. A BPDU filter is often used to screen sending or receiving BPDUs on a specific port of the switch.

BPDU Guard

BPDU Guard is a protection mechanism that prevents a port from receiving BPDUs. When an RSTP-enabled port receives BPDUs, it will automatically be in the error-disable state, which means the port will in turn switch to Block state. When STP is enabled, all ports are involved in the STP domain, sending and receiving BPDUs. However, when BPDU Guard is enabled, all ports will not receive or send any BPDUs, as all computers and unmanaged switches do not support STP. When BPDU Guard is enabled, all communications will be treated as error-disabled, and the related ports will be blocked, therefore no more data will be sent or received, protecting the network from a loop chain.

Root Guard

Root Guard prevents a designated port role from changing to root port role on reception of superior information.

Loop Guard

Loop Guard prevents temporary loops in a network caused by **non-designated ports** changing to the spanning-tree **forwarding** state due to a link failure in the topology.

BPDU Filter

BPDU Filter prevents a port from sending and processing BPDUs. A BPDU filter enabled port cannot transmit any BPDUs and drop all received BPDU either.

Configuring BPDU Filter, BPDU/Root/Loop Guard Settings

First click **Spanning Tree** on the menu and then select the **Guard** tab. Next, click the  icon on the port you want to configure.

Spanning Tree

| General | | Guard | | Status | |
|---|------------|-----------|------------|-------------|--|
| Port | BPDU Guard | rootGuard | Loop Guard | BPDU Filter | |
|  1/1 | Disabled | Disabled | Disabled | Disabled | |
|  1/3 | Disabled | Disabled | Disabled | Disabled | |
|  1/4 | Disabled | Disabled | Disabled | Disabled | |

Configure the following settings.

Edit Port 1/1 Settings

BPDU Guard *

Root Guard *

Loop Guard *

BPDU Filter *

Copy Configurations ... 

BDPU Guard

| Setting | Description | Factory Default |
|----------|---------------------|-----------------|
| Enabled | Enable BDPU Guard. | Disabled |
| Disabled | Disable BDPU Guard. | |



NOTE

To establish a redundant port e.g. it is highly recommended that you do not enable BPDU filter.

Root Guard

| Setting | Description | Factory Default |
|----------|---------------------|-----------------|
| Enabled | Enable Root Guard. | Disabled |
| Disabled | Disable Root Guard. | |

Loop Guard

| Setting | Description | Factory Default |
|----------|---------------------|-----------------|
| Enabled | Enable Loop Guard. | Disabled |
| Disabled | Disable Loop Guard. | |

BDPU Filter

| Setting | Description | Factory Default |
|----------|----------------------|-----------------|
| Enabled | Enable BDPU Filter. | Disabled |
| Disabled | Disable BDPU Filter. | |

Copy Configurations to Port

| Setting | Description | Factory Default |
|--|--|-----------------|
| Select the port(s) from the drop-down list | Copy the same settings to other port(s). | None |

When finished, click **APPLY** to save your changes.

Viewing Current Spanning Tree Status

Click the **Status** tab to view the current Spanning Tree status.

Spanning Tree

- General
- Guard
- Status**

Root Information

Bridge ID
32768/00:90:e8:72:56:12

Root Path Cost
0

Forward Delay Time
15 (sec.)

Hello Time
2 (sec.)

Max. Age
20 (sec.)

Bridge Information

Bridge ID
32768/00:90:E8:72:56:12

Running Protocol
RSTP

Forward Delay Time
15 (sec.)

Hello Time
2 (sec.)

Max. Age
20 (sec.)

In addition, the status for each port will also be shown below.

| Port | Edge | Port Role | Port State | Root Path Cost | Path Cost | Link Type | BPDU Inconsistency | Root Inconsist |
|------|------|-----------|------------|----------------|-----------|----------------|--------------------|----------------|
| 1/1 | No | Disabled | Discarding | 0 | 2000 | Point-to-Point | No | No |
| 1/3 | No | Disabled | Discarding | 0 | 2000 | Point-to-Point | No | No |
| 1/4 | No | Disabled | Discarding | 0 | 2000 | Point-to-Point | No | No |
| 2/1 | No | Disabled | Forwarding | 0 | 20000 | Point-to-Point | No | No |
| 2/2 | No | Disabled | Discarding | 0 | 20000 | Point-to-Point | No | No |
| 2/3 | No | Disabled | Discarding | 0 | 20000 | Point-to-Point | No | No |
| 2/4 | No | Disabled | Discarding | 0 | 20000 | Point-to-Point | No | No |

Refer to the following table for detailed description of each item.


| Item | Description |
|--------------------|--|
| Port | The port number on this device. |
| Edge | Show if this port is connected to an edge device. |
| Port Rule | Root: The port is connected directly or indirectly to the root device. Designated: The port is designated if it can send the best BPDU on the segment to which it is connected. Alternate: The alternate port receives more useful BPDU from another bridge and is the blocked port. Backup: The backup port receives more useful BPDU from the same bridge and is the blocked port. Disabled: The function is disabled. |
| Port State | Forwarding: The traffic can be forwarded through this port. Blocked: The traffic will be blocked. Disabled: The function is disabled. |
| Root Path Cost | The total path cost to the root bridge. |
| Path Cost | The path cost on this link. |
| Link Type | Edge Port: The port is connected to an edge device. Point-to-Point Non Edge Port: The port is connected to another bridge and is full duplex. Shared Non Edge Port: The port is connected to another bridge and is half duplex. |
| BPDU Inconsistency | BPDU is received on a port enabled by a BPDU guard. |
| Root Inconsistency | A port is changed to a root port when enabled by a loop guard. |
| Loop Inconsistency | A loop is detected on this port by a loop guard. |

Turbo Ring v2

Turbo Ring v2 Overview

Moxa Turbo Ring is a proprietary self-healing technology that enables fast fault recovery of under 20 ms for Fast Ethernet, and 50 ms for Gigabit Ethernet. Turbo Ring supports two topology expansions—ring coupling and dual-ring—to reduce redundant network cabling and network planning costs and to ensure high reliability of your industrial network applications.

The Turbo Ring v2 protocols identify one switch as the **master** of the network, and then automatically block one port beside master on the ring (red line) to avoid network's redundant loops. In the event that one branch of the ring gets disconnected from the rest of the network, the protocol automatically readjusts the ring so that the part of the network that was disconnected can reestablish contact with the rest of the network.

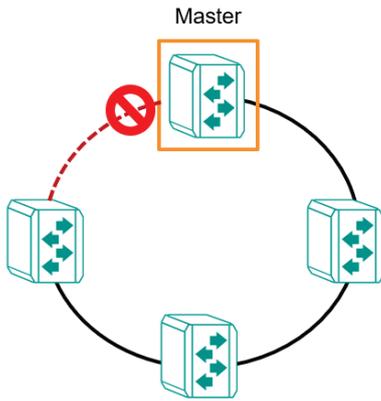


How Turbo Ring v2 Works

Turbo Ring v2 is an advanced technology for network redundancy, which ensures recovery times of less than 20 ms for Fast Ethernet, and 50 ms for Gigabit Ethernet when the network is down. In addition, it allows more switches within the network rings. Users can select different network typologies for Turbo Ring redundancy to allow more network reliability and reduce cabling costs. Below are three examples of how Turbo Ring v2 works.


Ring Coupling

Ring Coupling helps users separate distributed devices into different smaller redundant rings, but in such a way that the smaller rings at different remote sites will be able to communicate with each other. This is useful for applications where some devices are located at remote sites.

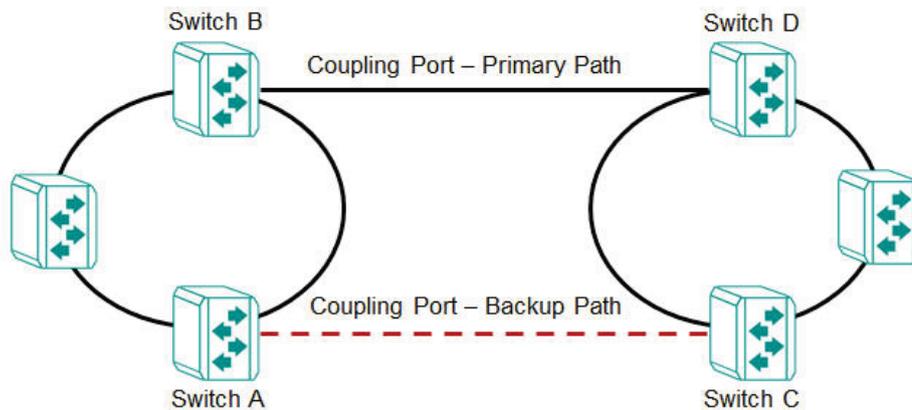

Dual-Ring


Dual-Ring adds reliability by using a single Moxa switch to connect two separate rings for applications that present cabling difficulties. It provides another ring coupling configuration where two adjacent rings can share one switch. This typology is an ideal solution for applications that have inherent cabling difficulties.

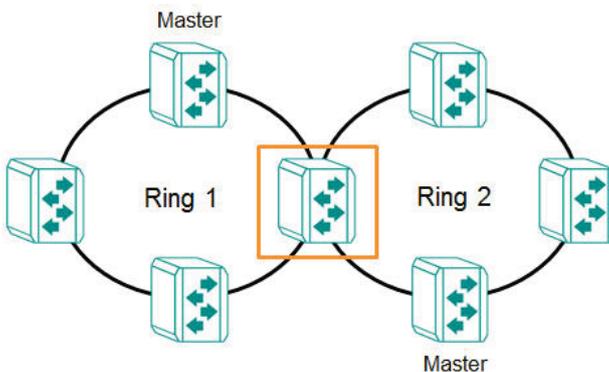


How to Determine the Redundant Path

For Turbo Ring v2, the master is determined by two methods, one is a system MAC address election, the smallest MAC address will play the Master role; the other is user manual configuration to enable Master role on the switch.

The redundant path is determined by "Ring Port 2", which means the port set on "Ring Port 2" will become the blocking port.

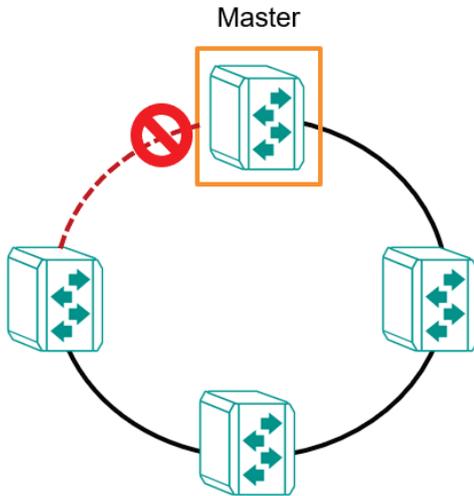

Ring Coupling for a "Turbo Ring V2" Ring

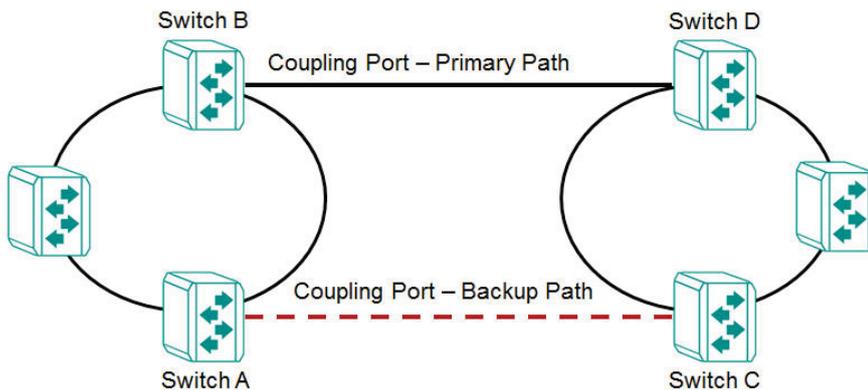

For Turbo Ring V2, Ring Coupling is enabled by configuring the **Coupling Port (Primary)** on Switch B, and the **Coupling Port (Backup)** on Switch A only.

The **Coupling Port (Backup)** on Switch A is used for the backup path, and connects directly to an extra network port on Switch C. The **Coupling Port (Primary)** on Switch B monitors the status of the main path, and connects directly to an extra network port on Switch D. With ring coupling has been established, Switch A can activate the backup path as soon as it detects a problem with the main path.



ATTENTION

Ring Coupling needs to be enabled on one coupling primary switch and one coupling backup switch as the Ring Coupler. The Coupler must designate different ports as the two Turbo Ring ports and the coupling port.




NOTE

You do not need to use the same switch for both Ring Coupling and Ring Master.

Turbo Ring V2 Settings and Status

Click **Turbo Ring V2** on the menu, and then select the **Setting** tab.

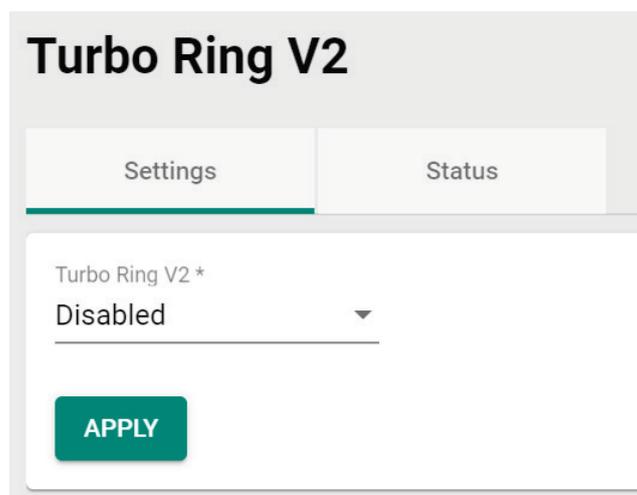

Turbo Ring V2

Settings Status

Turbo Ring V2 *

Disabled

APPLY

Configure the following setting.


Turbo Ring V2

| Setting | Description | Factory Default |
|----------|------------------------|-----------------|
| Enabled | Enable Turbo Ring V2. | Disabled |
| Disabled | Disable Turbo Ring V2. | |

When finished, click **APPLY** to save your changes.

Ring Settings

In **Ring Setting**, click the  icon.

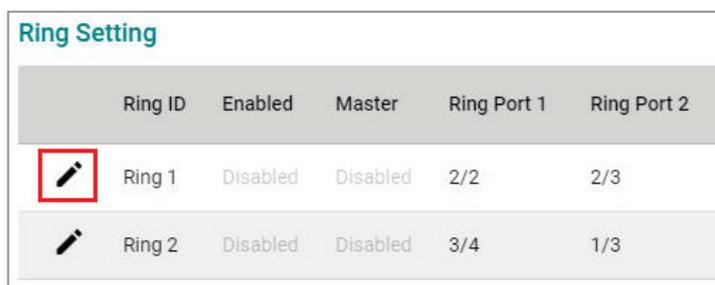

Ring Setting

| | Ring ID | Enabled | Master | Ring Port 1 | Ring Port 2 |
|---|---------|----------|----------|-------------|-------------|
|  | Ring 1 | Disabled | Disabled | 2/2 | 2/3 |
|  | Ring 2 | Disabled | Disabled | 3/4 | 1/3 |

Configure the following settings. When finished, click **Apply** to save your changes.

Ring 1 Settings

Enabled *
Disabled ▼

Master *
Disabled ▼

Ring Port 1 *
1/1 ▼

Ring Port 2 *
2/2 ▼

CANCEL
APPLY

Enable

| Setting | Description | Factory Default |
|----------|-----------------------|-----------------|
| Enabled | Enable Ring Setting. | Disabled |
| Disabled | Disable Ring Setting. | |

Master

| Setting | Description | Factory Default |
|----------|----------------------------------|-----------------|
| Enabled | Enable this Ring as the Master. | Disabled |
| Disabled | Disable this Ring as the Master. | |

Ring Port 1

| Setting | Description | Factory Default |
|-------------------------------|--|-----------------|
| Select the port from the list | Specify this port as the 1st redundant port. | 1/1 |

Ring Port 2

| Setting | Description | Factory Default |
|-------------------------------|--|-----------------|
| Select the port from the list | Specify this port as the 2nd redundant port. | 1/2 |

Ring Coupling Overview

Ring Coupling helps users separate distributed devices into different smaller redundant rings, but in such a way that the smaller rings at different remote sites will be able to communicate with each other. This is useful for the applications where some devices are located at remote sites.

Ring Coupling Settings and Status

In the **Ring Coupling Setting**, click the  icon.

Ring Coupling Setting

| | Coupling Mode | Enabled | Coupling Port |
|--|---------------|----------|---------------|
|  | Primary Path | Disabled | 2/1 |

Configure the following settings.

Ring Coupling Settings

Enabled *
Disabled ▼

Coupling Mode *
Coupling Primary Path ▼

Coupling Port *
2/1 ▼

CANCEL
APPLY

Enable

| Setting | Description | Factory Default |
|----------|------------------------|-----------------|
| Enabled | Enable Ring Coupling. | Disabled |
| Disabled | Disable Ring Coupling. | |

Coupling Mode

| Setting | Description | Factory Default |
|-----------------------|---|-----------------------|
| Coupling Backup Path | Select Coupling Mode to assign the coupling port as the backup path. | Coupling Primary Path |
| Coupling Primary Path | Select Coupling Mode to assign the coupling port as the primary path. | |

Coupling Port

| Setting | Description | Factory Default |
|-------------------------------|---------------------------------------|-----------------|
| Select the port from the list | Select the port as the coupling port. | 2/1 |

When finished, click **APPLY** to save your changes.

Ring Settings and Ring Coupling Setting Status

Click **Status** in the Turbo Ring V2 menu to view the current Ring settings and the Ring Coupling Status.

Turbo Ring V2

Setting
Status

Ring Status

| Ring ID | Master ID | Status | Master | Ring Port 1 | Ring Port 2 |
|---------|-------------------|----------|--------|-------------|-------------|
| Ring 1 | 00:00:00:00:00:00 | Disabled | Slave | Disabled | Disabled |
| Ring 2 | 00:00:00:00:00:00 | Disabled | Slave | Disabled | Disabled |

Ring Coupling Status

| Coupling Mode | Coupling Port |
|---------------|---------------|
| Disabled | Disabled |

Refer to the following table for a detailed description for each item of the Ring status.

| Item | Description |
|-------------|---|
| Ring ID | The ID number of the Ring. |
| Master ID | The MAC address of the Ring Master. |
| Status | Healthy: The Ring and the ports are working properly. Break: One or more Rings have been broken. |
| Master | The device is Master/Slave on this Ring. |
| Ring Port 1 | The port of the first Ring port. |
| Ring Port 2 | The port of the second Ring port. |

Refer to the following table for a detailed description for the status of Coupling Mode and Coupling Port.

| Item | Description |
|---------------|---|
| Coupling Mode | Primary: The main path of Ring Coupling. Backup: The backup path of Ring Coupling. |
| Coupling Port | The port of the Ring Coupling. |

Turbo Chain

Turbo Chain Overview


Moxa's Turbo Chain is an advanced software technology that gives network administrators the flexibility of constructing any type of redundant network topology. In addition, it offers system recovery time under 20 ms for Fast Ethernet, and 50 ms for Gigabit Ethernet for member port link environments. When using the "chain" concept, you first connect the Ethernet switches in a chain and then simply link the two ends of the chain to an Ethernet network.

Turbo Chain can be used on industrial networks that have a complex topology. If the industrial network uses a multi-ring architecture, Turbo Chain can be used to create flexible and scalable topologies with a fast media-recovery time.

How Turbo Chain Works

Moxa's Turbo Chain outperforms traditional ring topologies by providing great flexibility, unrestricted expansion, and cost-effective configurations when connecting separate redundant rings together—in a simplified manner. With Turbo Chain, you can create any complex redundant network that correspond to your needs, while still ensuring great reliability and availability for your industrial Ethernet network applications.

With Moxa's Turbo Chain, network engineers have the flexibility to construct any type of redundant topology with minimum effort—by simply linking Turbo Chain to the Ethernet Network. Turbo Chain allows for unrestricted network expansion. Network engineers no longer need to go through the hassle of reconfiguring the existing network and can simply use Turbo Chain to scale up their redundant networks.

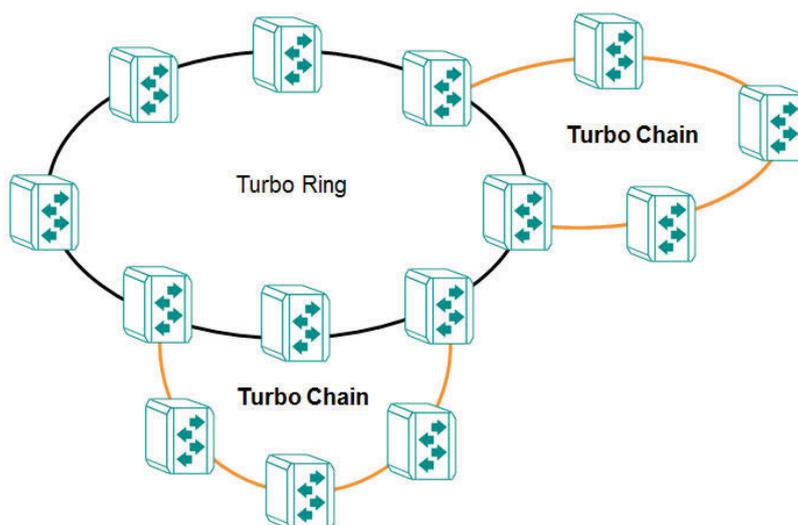


How to Determine the Redundant Path

Here is an example of how to set up Turbo Chain and determine the redundant path.

1. Select the Head switch, Tail switch, and Member switches.
2. Configure one port as the Head port and one port as the Member port in the Head switch, configure one port as the Tail port and one port as the Member port in the Tail switch, and configure two ports as Member ports in each of the Member switches.
3. Connect the Head switch, Tail switch, and Member switches as shown in the diagram below.

The path connecting to the Head port is the main path, and the path connecting to the Tail port is the backup path of Turbo Chain. Under normal conditions, packets are transmitted through the Head Port to the LAN network. If any Turbo Chain path is disconnected, the Tail Port will be activated so that packet transmission can continue.

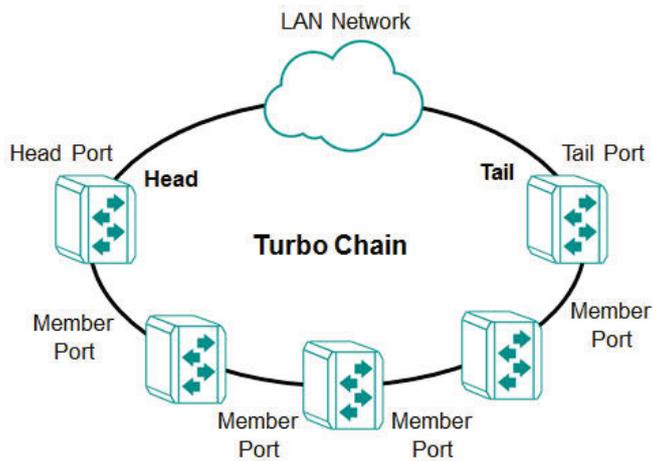

There are two points to note:

1. Two Chain ports must have the same PVID.
2. Chain ports must join the untagged members of PVID VLAN before being assigned to be a Chain port.

Turbo Chain V2 Settings and Status

First select **Turbo Chain** on the menu and then click **Setting**.

Turbo Chain

Settings
Status

Turbo Chain *

Disabled ▼

Chain Role *

Member ▼

Member Port 1 *

1/1 ▼

Member Port 2 *

2/3 ▼

APPLY

Configure the following settings.

Turbo Chain

| Setting | Description | Factory Default |
|----------|----------------------|-----------------|
| Enabled | Enable Turbo Chain. | Disabled |
| Disabled | Disable Turbo Chain. | |

Chain Role

| Setting | Description | Factory Default |
|---------|--------------------------------|-----------------|
| Head | Enable chain role as the Head. | Member |
| Member | Enable chain role as a Member. | |
| Tail | Enable chain role as the Tail. | |

Head/Member/Tail Port


| Setting | Description | Factory Default |
|-------------------------------|--|-----------------|
| Select the port from the list | Specify the port as the Head/Member/Tail port. | 1/1 |

Member Port

| Setting | Description | Factory Default |
|-------------------------------|--------------------------------------|-----------------|
| Select the port from the list | Specify the port as the member port. | 1/2 |

When finished, click **APPLY** to save your changes.

Select **Turbo Chain** on the menu and click **Status** to view the current Turbo Chain status.

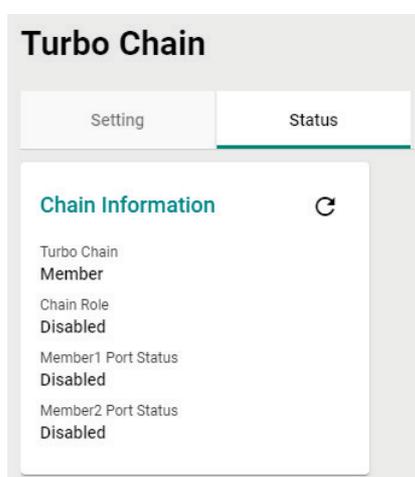

Refer to the following table for a detailed description of each item.

| Item | Description |
|--------------------------------|---|
| Turbo Chain | Head: The device is the head of this chain. Member: The device is a member of this chain. Tail: The device is the tail of this chain. |
| Chain Role | Healthy: The Chain and the ports are working properly. Break: The chain or the ports are broken. |
| Head/Member/Tail 1 Port Status | The status of the first Head/Member/Tail port. |
| Head/Member/Tail 2 Port Status | The status of the second Head/Member/Tail port. |

Dual Homing


Dual Homing Overview

Dual Homing is a layer 2 function, which uses a single Ethernet switch to connect two network topologies, both of which can run any redundancy protocols. It involves coupling two separate devices or even coupling to two separate rings with a single switch connecting to two independent connection points. The secondary path will be activated if the primary path fails.

How Dual Homing Works

Dual Homing is a redundant path technology that allows a single switch to connect to any topology.

The primary and secondary paths require manual configuration: Select a primary port as the primary path and the secondary port as the secondary path. The default path switching mode is "primary path always first", which means when failover occurs, the primary path will switch to the secondary path, but if the primary path recovers, the path will switch back to the primary path again even if the secondary path is healthy.

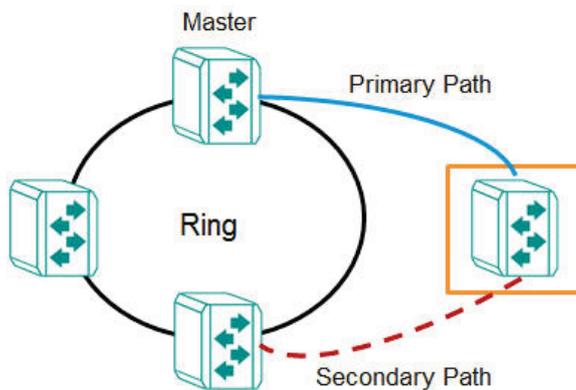

Path Switching Mode

There are two path switch modes that users can configure:

Primary path always first: Always selects the path switching mode as the primary path first. When path switching occurs, the primary path will always be the first path for data communication.

Maintain current path: Select the path switching mode to maintain the current path. When path switching occurs, maintain the current path to keep the network stable and do not change paths for data communication.

Dual Homing Settings and Status

Click **Dual Homing** in the menu and select **Setting**.

Dual Homing

Settings
Status

Dual Homing *

Disabled ▼

Primary Port *

1/1 ▼

Secondary Port *

2/4 ▼ i

Path Switching Mode *

Primary path always first ▼

APPLY

Configure the following settings.

Dual Homing

| Setting | Description | Factory Default |
|----------|----------------------|-----------------|
| Enabled | Enable Dual Homing. | Disabled |
| Disabled | Disable Dual Homing. | |

Primary Port

| Setting | Description | Factory Default |
|-------------------------------|---------------------------------------|-----------------|
| Select the port from the list | Specify the port as the primary port. | 1/1 |

Secondary Port

| Setting | Description | Factory Default |
|-------------------------------|---|-----------------|
| Select the port from the list | Specify the port as the secondary port. | 1/1 |

Path Switching Mode

| Setting | Description | Factory Default |
|---------------------------|--|---------------------------|
| Primary path always first | Always selects path switching mode as the primary path first. | Primary path always first |
| Maintain current path | Always selects the path switching mode to maintain the current path. | |

When finished, click **APPLY** to save your changes.

First, click **Dual Homing** in the menu and then select **Status** to view the current Dual Homing Settings.

Dual Homing


| Setting | Status | | |
|---|--------|-------------|------------|
|  | | | |
| Path | Port | Link Status | Port State |
| Primary | 1/1 | Link up | Disabled |
| Secondary | 2/4 | Link Down | Disabled |

Refer to the following table for a detailed description of each item.

| Item | Description |
|-------------|--|
| Path | Primary: The primary path of dual homing. Secondary: The secondary path of dual homing. |
| Port | The port that is used as the primary/secondary path. |
| Link Status | Link Up: The port is connected. Link Down: The port is disconnected. |
| Port State | Forwarding: The port is forwarding traffic. Blocking: The port is blocking traffic. |

Management

This section describes how to configure **Network Management** including **SNMP**.

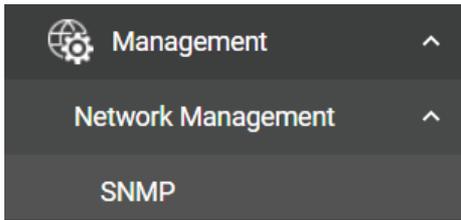

Network Management

This section demonstrates how to configure SNMP settings. For SNMP Trap/Inform settings, refer to **SNMP Trap/Inform** section under **Diagnostics → Log & Event Notifications**.

SNMP

Moxa switches support SNMP V1, V2c, and V3. SNMP V1 and SNMP V2c use a community string match for authentication, which means that SNMP servers access all objects with read-only or read/write permissions using the community strings public and private by default. SNMP V3 requires that you select an authentication level of MD5 or SHA. You can also enable data encryption to enhance data security.

Supported SNMP security modes and levels are shown in the table below. Select the security mode and level that will be used to communicate between the SNMP agent and manager.

| Protocol Version | UI Setting | Authentication | Encryption | Method |
|------------------|------------------------------|------------------------------------|-------------------------------|--|
| SNMP V1, V2c | V1, V2c Read Community | Community string | No | Uses a community string match for authentication. |
| | V1, V2c Write/Read Community | Community string | No | Uses a community string match for authentication. |
| SNMP V3 | None | No | No | Uses an account with admin or user to access objects. |
| | MD5 or SHA | Authentication based on MD5 or SHA | Disabled | Uses authentication based on HMAC-MD5, or HMAC-SHA algorithms. 8-character passwords are the minimum requirement for authentication. |
| | MD5 or SHA | Authentication based on MD5 or SHA | Data encryption key: DES, AES | Uses authentication based on HMAC-MD5 or HMAC-SHA algorithms, and data encryption key. 8-character passwords and a data encryption key are the minimum requirements for authentication and encryption. |



NOTE

SNMPv3 enhances security as it includes authentication and data privacy. If users require a higher level of security, it is recommended to install additional security mechanisms such as a firewall to protect a critical infrastructure.

General Settings

First click **SNMP** on the menu and then click **General**.

SNMP

General SNMP Account

SNMP Version *
V1, V2c

Read Community *
public
At least 4 characters 6 / 32

Read/Write Community *
private
At least 4 characters 7 / 32

APPLY

Configure the following settings.

SNMP Version

| Setting | Description | Factory Default |
|-------------|--|-----------------|
| V1, V2c, V3 | Specify V1, V2c, and V3 as the SNMP version. | V1, V2c |
| V1, V2c | Specify V1 and V2c as the SNMP version. | |
| V3 only | Specify V3 as the SNMP version. | |

Read Community

| Setting | Description | Factory Default |
|--------------------|--|-----------------|
| Max. 30 characters | Specifies the community string to authenticate the SNMP agent for read-only access. The SNMP agent will access all objects with read-only permissions using this community string. | public |


Read/Write Community

| Setting | Description | Factory Default |
|--------------------|---|-----------------|
| Max. 30 characters | Specifies the community string to authenticate the SNMP agent for read/write access. The SNMP server will access all objects with read/write permissions using this community string. | private |

When finished, click **APPLY** to save your changes.


Creating an SNMP Account

Click **SNMP** on the menu and then click the **SNMP Account**. Next click the  icon on the page.

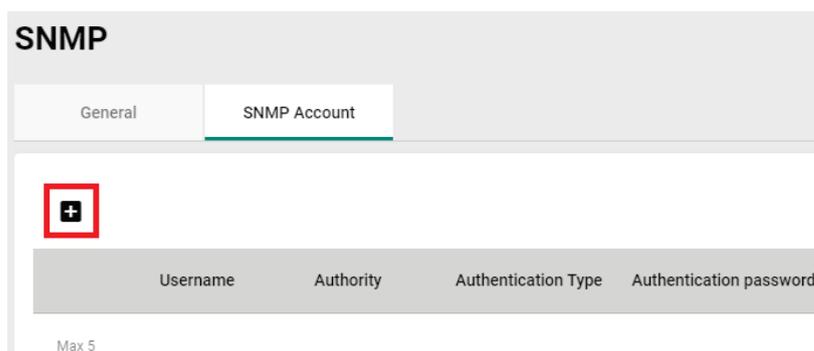

The image shows the 'SNMP' configuration page with the 'SNMP Account' tab selected. A red box highlights a plus icon in the top left corner. Below it, a table lists the fields for creating an account: Username, Authority, Authentication Type, and Authentication password. A 'Max 5' label is visible below the table.

Configure the following settings.

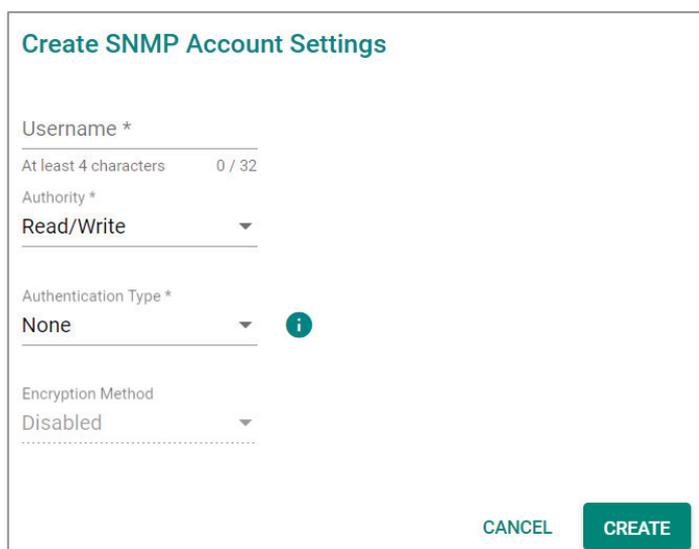

The image shows the 'Create SNMP Account Settings' form. It includes the following fields and options:

- Username ***: Text input field with a note 'At least 4 characters' and a character count '0 / 32'.
- Authority ***: Dropdown menu with 'Read/Write' selected.
- Authentication Type ***: Dropdown menu with 'None' selected and an information icon.
- Encryption Method**: Dropdown menu with 'Disabled' selected.

Buttons for 'CANCEL' and 'CREATE' are located at the bottom right of the form.

Username

| Setting | Description | Factory Default |
|---|-------------------|-----------------|
| At least 4 characters, (max. 32 characters) | Input a username. | None |

Authority

| Setting | Description | Factory Default |
|------------|---------------------------------|-----------------|
| Read Write | The user has read/write access. | None |
| Read Only | The user only has read access. | |

Authentication type

| Setting | Description | Factory Default |
|---------|---------------------------------|-----------------|
| None | No authentication will be used. | None |
| MD5 | MD5 is the authentication type. | |
| SHA | SHA is the authentication type. | |

Authentication password

| Setting | Description | Factory Default |
|--------------------|------------------------------------|-----------------|
| 8 to 64 characters | Input the authentication password. | None |

Encryption Method

| Setting | Description | Factory Default |
|----------|--------------------------------|-----------------|
| Disabled | Disable the encryption method. | None |
| DES | DES is the encryption method. | |
| AES | AES is the encryption method. | |

Encryption Key

| Setting | Description | Factory Default |
|--------------------|-------------------------|-----------------|
| 8 to 30 characters | Enable data encryption. | None |

When finished, click **CREATE**.

Deleting an Existing SNMP Account

To delete an existing SNMP account, select the  icon on the account.

|  | | | |
|---|----------|------------|---------------------|
| | Username | Authority | Authentication Type |
|   | test | Read Write | None |
| Max 5 | | | |

Click **DELETE** to delete the SNMP account.

Delete Account

Are you sure you want to delete the selected account?

CANCEL **DELETE**


Security

This section describes how to configure **Device Security**, **Network Security**, and **Authentication**.



Device Security

This section includes information about the **Management Interface**, **Login Policy**, **Trusted Access**, and **SSH & SSL** configurations.

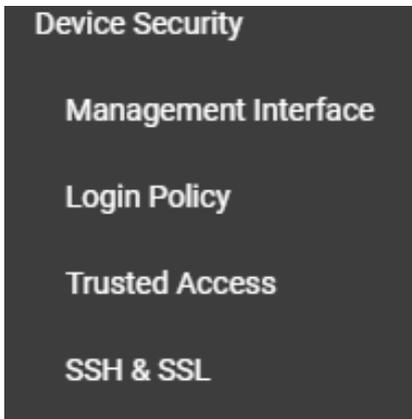

Management Interface

This section describes the settings for **User Interface** and **Hardware Interface**.



User Interface

Click **User Interface** on the menu.

User Interface

| | | |
|---|------------------------------------|------------------------------------|
| HTTP * | HTTP - TCP Port * | |
| Enabled | 80 | |
| | 1 - 65535 | |
| HTTPS * | HTTPS - TCP Port * | |
| Enabled | 443 | |
| | 1 - 65535 | |
| Telnet * | Telnet - TCP Port * | |
| Disabled | 23 | |
| | 1 - 65535 | |
| SSH * | SSH - TCP Port * | |
| Enabled | 22 | |
| | 1 - 65535 | |
| SNMP * | SNMP - UDP Port * | |
| Disabled | 161 | |
| | 1 - 65535 | |
| Moxa Service * | Moxa Service(Encrypted) - TCP Port | Moxa Service(Encrypted) - UDP Port |
| Enabled | 443 | 40404 |
| | 1 - 65535 | 1 - 65535 |
| Maximum number of Login Sessions For HTTP+HTTPS * | | |
| 5 | | |
| 1 - 10 | | |
| Maximum number of Login Sessions For HTTP+HTTPS * | | |
| 5 | | |
| 1 - 10 | | |
| Maximum number of Login Sessions For Telnet+SSH * | | |
| 1 | | |
| 1 - 5 | | |

APPLY

Configure the following settings.

HTTP

| Setting | Description | Factory Default |
|----------|------------------------------|-----------------|
| Enabled | Enable the HTTP connection. | Enabled |
| Disabled | Disable the HTTP connection. | |



NOTE

An HTTP session will be redirected to HTTPS if both HTTP and HTTPS are enabled.

HTTP – TCP Port

| Setting | Description | Factory Default |
|------------|--|-----------------|
| 0 to 47808 | Specify the HTTP connection port number. | 80 |

HTTPS

| Setting | Description | Factory Default |
|----------|-------------------------------|-----------------|
| Enabled | Enable the HTTPS connection. | Enabled |
| Disabled | Disable the HTTPS connection. | |

HTTPS – TCP Port

| Setting | Description | Factory Default |
|------------|--|-----------------|
| 1 to 65535 | Specify the HTTP connection port number. | 443 |

Telnet

| Setting | Description | Factory Default |
|----------|------------------------------|-----------------|
| Enabled | Enable a Telnet connection. | Enabled |
| Disabled | Disable a Telnet connection. | |

Telnet – TCP Port

| Setting | Description | Factory Default |
|------------|--|-----------------|
| 1 to 65535 | Specify the Telnet connection port number. | 23 |

SSH

| Setting | Description | Factory Default |
|----------|-----------------------------|-----------------|
| Enabled | Enable the SSH connection. | Enabled |
| Disabled | Disable the SSH connection. | |

SSH – TCP Port

| Setting | Description | Factory Default |
|------------|---------------------------------------|-----------------|
| 1 to 65535 | Input the SSH connection port number. | 22 |

SNMP

| Setting | Description | Factory Default |
|----------|------------------------------|-----------------|
| Enabled | Enable the SNMP connection. | Disabled |
| Disabled | Disable the SNMP connection. | |

SNMP – UDP Port

| Setting | Description | Factory Default |
|------------|--|-----------------|
| 0 to 47808 | Input the SNMP UDP connection port number. | 161 |



NOTE

Moxa Service is only for Moxa network management software suite.

Moxa Service (Encrypted) – TCP Port

| Setting | Description | Factory Default |
|-----------------|---------------------------------|-----------------|
| 443 (read only) | Enable a Moxa Service TCP port. | 443 |

Moxa Service (Encrypted) – UDP Port

| Setting | Description | Factory Default |
|-------------------|---------------------------------|-----------------|
| 40404 (read only) | Enable a Moxa Service UDP port. | 40404 |

Maximum number of Login Sessions for HTTP+HTTPS

| Setting | Description | Factory Default |
|---------|---|-----------------|
| 1 to 10 | Specify the maximum amount of HTTP login sessions that can happen at the same time. | 5 |


Maximum number of Login Sessions for Telnet+SSH

| Setting | Description | Factory Default |
|---------|---|-----------------|
| 1 to 5 | Specify the maximum amount of Telnet login sessions that can happen at the same time. | 1 |

When finished, click **APPLY** to save your changes.

Hardware Interface

Click **Hardware Interface** on the menu. This enables you to use Moxa's ABC-02 configuration tool.

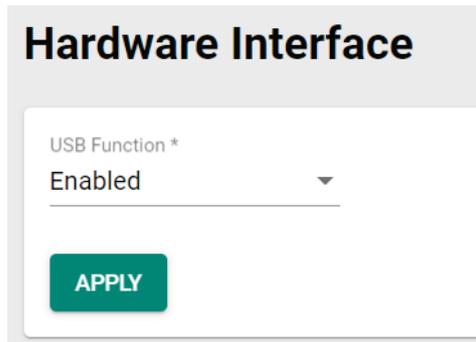

Configure the following settings.

USB Function

| Setting | Description | Factory Default |
|----------|---|-----------------|
| Enabled | Enable the USB function on the switch. | Enabled |
| Disabled | Disable the USB function on the switch. | |

Login Policy

Click **Login Policy** on the menu.

Login Policy

Login Message

0 / 500

Login Authentication Failure Message

0 / 500

Account Login Failure Lockout *

Disabled ▼

Retry Failure Threshold *

5

1 - 10 times

Lockout Time *

5

1 - 10 min.

Auto Logout Setting *

0

0 - 1440 min.

APPLY

Configure the following settings.

Login Message

| Setting | Description | Factory Default |
|---------------------|---|-----------------|
| 0 to 500 characters | Input the message that will be displayed to users when they log in. | None |

Login Authentication Failure Message

| Setting | Description | Factory Default |
|---------------------|---|-----------------|
| 0 to 500 characters | Input the message that will be displayed when users fail to log in. | None |

Account Login Failure Lockout

| Setting | Description | Factory Default |
|----------|---|-----------------|
| Enabled | Enable the lockout function when a user fails to log in. | Disabled |
| Disabled | Disable the lockout function when a user fails to log in. | |

Retry Failure Threshold (times)

| Setting | Description | Factory Default |
|---------|--|-----------------|
| 1 to 10 | Input the maximum number of retry failure times. | 5 |

Lockout Time (min.)

| Setting | Description | Factory Default |
|---------|--|-----------------|
| 1 to 60 | Specify the amount of times log in credentials can be entered incorrectly before the user is logged out. | 5 |

Auto Logout Setting (min.)

| Setting | Description | Factory Default |
|-----------|---|-----------------|
| 0 to 1440 | Specify how long a user has to be inactive before getting logged out. | 5 |

When finished, click **APPLY** to save your changes.


Trusted Access

Trusted Access Overview

Trusted Access is a mechanism that provides a secure connection to Moxa's switch. Users can use this method to allow the connection from the assigned IP address to ensure safe data transmission.

Trusted Access Settings and Status

Click **Trusted Access** on the menu.

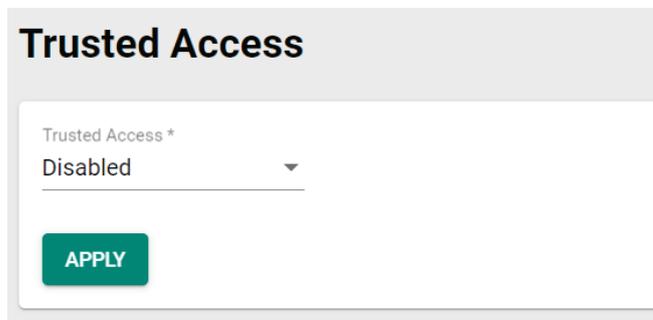

Configure the following settings.

Enable

| Setting | Description | Factory Default |
|----------|-------------------------|-----------------|
| Enabled | Enable Trusted Access. | Disabled |
| Disabled | Disable Trusted Access. | |



NOTE

1. Trusted Access has to be added before it can be enabled.
2. In order to avoid being disconnected after you enable Trusted Access, you must first add the current IP subnet to Trusted Access. In order to use this function, you should use an RS-232 console to log in or set the device to factory default.

When finished, click **APPLY** to save your changes.

Next, click the  icon.

Trusted Access

Trusted Access *
Disabled ▼

APPLY



| | IP Address | Netmask |
|--------------------------|------------|---------|
| <input type="checkbox"/> | | |

Max. 20

Create Entry

IP Address *

Netmask *

CANCEL
CREATE

Configure the following settings.

IP Address

| Setting | Description | Factory Default |
|------------------|---|-----------------|
| Input IP address | Specify the IP address that is allowed to connect to Moxa's switch. | None |

Netmask


| Setting | Description | Factory Default |
|---------------|--|-----------------|
| Input Netmask | Specify the Netmask that is allowed to connect to Moxa's switch. | None |

When finished, click **CREATE**.

You can view the Trusted Access status on the figure below.

| | | IP Address | Netmask |
|--------------------------|---|-----------------|---------------|
| <input type="checkbox"/> |  | 192.168.127.155 | 255.255.255.0 |

To delete the trusted access source, select the item and then click the  icon on the top of the page.

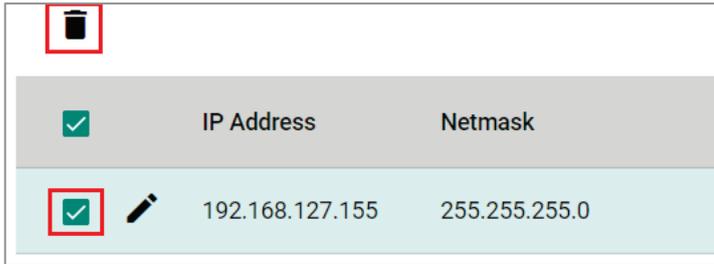

| <input checked="" type="checkbox"/> | IP Address | Netmask |
|---|-----------------|---------------|
| <input checked="" type="checkbox"/>  | 192.168.127.155 | 255.255.255.0 |

Click **DELETE** to delete the item.

Delete Entry

Are you sure you want to delete the selected entry?

[CANCEL](#) [DELETE](#)

SSH & SSL

SSH Key Regeneration

Click **SSH & SSL** on the menu and then select the **SSH** tab.

SSH & SSL

SSH SSL

Regenerate SSH Key

[REGENERATE](#)

Click **Regenerate** to regenerate the key.

SSL Certification Regeneration

Click **SSH & SSL** on the menu and select the **SSL** tab. The Certificate Information is shown on this screen.

The screenshot shows the 'SSH & SSL' configuration page. At the top, there are two tabs: 'SSH' and 'SSL', with 'SSL' selected. Below the tabs is a 'Certificate Information' box containing the following details:

- CA Name: Moxa Networking Co., Ltd.
- Expired Date: 2198-05-26 18:53:58

Below the information box, there are three main sections:

- Export SSL certificate Request:** Includes an 'EXPORT' button.
- Regenerate SSL Certificate:** Includes a 'REGENERATE' button.
- Import Certificate:** Includes a file selection icon and an 'IMPORT' button.

To import a customer certificate, follow the steps below:

1. Import root CA generated by customer's CA server to a PC.
2. 'Export' the CSR file from the switch and use the customer's CA server to generate a certificate.
3. 'Import' the certificate to the switch.

Export SSL Certificate Request

| Setting | Description | Factory Default |
|---------|--|-----------------|
| Export | Export the SSL certificate to your local computer. | None |

Regenerate SSL Certificate


| Setting | Description | Factory Default |
|------------|---------------------------------|-----------------|
| Regenerate | Regenerate the SSL certificate. | None |

Import Certificate

| Setting | Description | Factory Default |
|-----------------|--|-----------------|
| Select the file | Import the SSL certificate from the location where the SSL certificate is located. | None |

Network Security

This section demonstrates how to configure network security settings, including **IEEE802.1X**, **MAC Authentication Bypass**, **Port Security**, **Traffic Storm Control**, **Access Control List**, and **Loop Protection**.

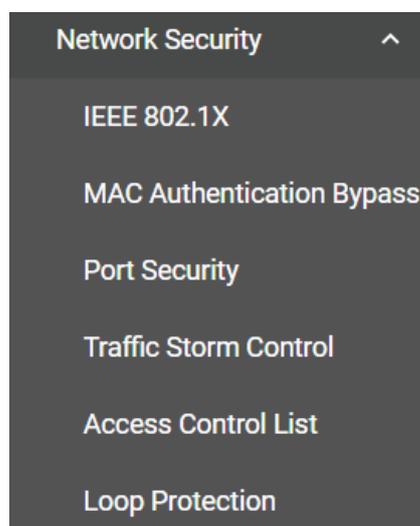

IEEE 802.1X

Port-based IEEE 802.1X Overview

The IEEE 802.1X standard defines a protocol for client/server-based access control and authentication. The protocol restricts unauthorized clients from connecting to a LAN through ports that are open to the Internet, and which otherwise would be readily accessible. The purpose of the authentication server is to check each client that requests access to the port. The client is only allowed access to the port if the client's permission is authenticated.

Three components are used to create an authentication mechanism based on 802.1X standards: Client/Supplicant, Authentication Server, and Authenticator.

Client/Supplicant: The end station that requests access to the LAN and switch services and responds to the requests from the switch.

Authentication Server: The server that performs the actual authentication of the supplicant.


Authenticator: Edge switch or wireless access point that acts as a proxy between the supplicant and the authentication server, requesting identity information from the supplicant, verifying the information with the authentication server, and relaying a response to the supplicant.

The Moxa switch acts as an authenticator in the 802.1X environment. A supplicant and an authenticator exchange EAPOL (Extensible Authentication Protocol over LAN) frames with each other. We can either use an external RADIUS server as the authentication server or implement the authentication server in the Moxa switch by using a Local User Database as the authentication look-up table. When we use an external RADIUS server as the authentication server, the authenticator and the authentication server exchange EAP frames.

Authentication can be initiated either by the supplicant or the authenticator. When the supplicant initiates the authentication process, it sends an **EAPOL-Start** frame to the authenticator. When the authenticator initiates the authentication process or when it receives an **EAPOL Start** frame, it sends an **EAP Request/Identity** frame to ask for the username of the supplicant.

How IEEE 802.1X Works

802.1X authentication requires three parties: a supplicant, an authenticator, and an authentication server. The supplicant is a client device that wishes to connect to the LAN or WLAN. The supplicant can also use the software to run on the client that offers credentials to the authenticator. Network administrators usually use an Ethernet switch or wireless access point as the authenticator, and running software supporting RADIUS and EAP protocols in the authentication server.

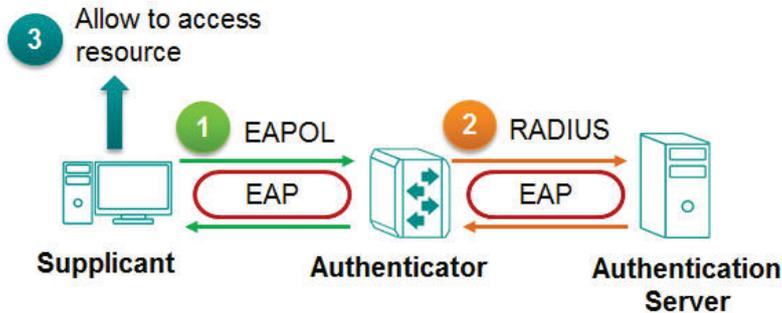

The authenticator serves as a security guard to a protected network. The supplicant is not allowed access through the authenticator to the protected side of the network unless the supplicant's identity has been validated and authorized. With 802.1X port-based authentication, the supplicant provides credentials, such as user name/password or digital certificate, to the authenticator, and the authenticator transmits the credentials to the authentication server for verification. If the authentication server approves the credentials as valid, the supplicant (client device) is allowed to access resources located on the protected side of the network.

IEEE 802.1X Settings

Click **IEEE802.1X** on the menu and then select the **General** tab.

IEEE 802.1X

General

RADIUS

Local Database

IEEE 802.1X *

Authentication Mode *

Configure the following settings.

Enable

| Setting | Description | Factory Default |
|----------|----------------------|-----------------|
| Enabled | Enable IEEE 802.1X. | Disabled |
| Disabled | Disable IEEE 802.1X. | |

Authentication Mode

| Setting | Description | Factory Default |
|----------------|--|-----------------|
| Local Database | Use the local database as the authentication mode. | Local Database |
| RADIUS | Use the RADIUS as the authentication mode. | |

When finished, click **APPLY** to save your changes.

To configure the IEEE 802.1X settings for the specific port, click the  icon on the port.

| | Port | Enable | Port Control | Max. Request | Quiet Period | Reauthentication |
|---|------|----------|--------------|--------------|--------------|------------------|
|   | 1/1 | Disabled | Auto | 2 | 60 | Disabled |
|   | 1/2 | Disabled | Auto | 2 | 60 | Disabled |
|   | 1/3 | Disabled | Auto | 2 | 60 | Disabled |
|   | 1/4 | Disabled | Auto | 2 | 60 | Disabled |

Configure the following settings.

Port 1/1 Settings

Enabled *
Disabled ▼

Port Control *
Auto ▼

| | |
|--|---|
| Max. Request * 2 | Quiet Period * 60 |
| 1 - 10 times | 0 - 65535 sec. |

| | |
|---|--|
| Reauthentication * Disabled ▼ | Reauth Period * 3600 |
| | 1 - 65535 sec. |

Server Timeout *
30

1 - 65535 sec.

Supp Timeout *
30

1 - 65535 sec.

Tx Period *
30

1 - 65535 sec.

Copy Configurations ... ▼ 

CANCEL
APPLY

Enable

| Setting | Description | Factory Default |
|----------|----------------------|-----------------|
| Enabled | Enable IEEE 802.1X. | Disabled |
| Disabled | Disable IEEE 802.1X. | |

Port Control

| Setting | Description | Factory Default |
|--------------------|---|-----------------|
| Force Unauthorized | The controlled port has to be held in the Unauthorized state. | Auto |
| Auto | The controlled port is set to the authorized or unauthorized state in accordance with the outcome of an authentication exchange between the Supplicant and the Authentication Server. | |
| Force Authorized | The controlled port is required to be held in the authorized state. | |

Max Request (times)

| Setting | Description | Factory Default |
|---------|--|-----------------|
| 1 to 10 | Enable re-authentication request time. | 2 |

Quiet Period (sec.)

| Setting | Description | Factory Default |
|------------|---|-----------------|
| 0 to 65535 | Specify the duration of time that the switch remains in the quiet state following a failed authentication exchange with the client. | 60 |

Reauthentication

| Setting | Description | Factory Default |
|----------|----------------------------|-----------------|
| Enabled | Enable re-authentication. | Disabled |
| Disabled | Disable re-authentication. | |

Reauth Period (sec.)

| Setting | Description | Factory Default |
|------------|--|-----------------|
| 1 to 65535 | Input the duration of time between re-authentication attempts. | 3600 |

Server Timeout (sec.)

| Setting | Description | Factory Default |
|------------|---|-----------------|
| 1 to 65535 | Input the duration of time that the switch will re-transmit the packets from the switch to the authentication server. | 30 |

Supp (Supplicant, such as Client PC) Timeout (sec.)

| Setting | Description | Factory Default |
|------------|--|-----------------|
| 1 to 65535 | Input the duration of time that the switch will re-transmit the packets from the switch to the client. | 30 |

Tx Period (sec.)

| Setting | Description | Factory Default |
|------------|---|-----------------|
| 1 to 65535 | Input the duration of time that the switch will re-transmit the data to the client. | 30 |

Copy Config to Ports

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Allows users to copy configurations to other port(s). | None |

When finished, click **APPLY** to save your changes.

IEEE 802.1X Database

RADIUS

RADIUS **Remote Authentication Dial in User Service** is a protocol that involves three services in one network protocol: Authentication, Authorization, and Accounting (AAA). The protocol operates on port 1812, and the AAA management for users connecting to a network service.

RADIUS is based on a client/server protocol that runs in the application layer, and can use either TCP or UDP as the mode of transport. The network access servers that contain the RADIUS protocol can allow the client to communicate with the RADIUS server. Through Authentication, Authorization, and Accounting, RADIUS is used to monitor access to the network.

To configure RADIUS settings, click the **RADIUS** tab.

IEEE 802.1X

General

RADIUS

Local Database

Server Address 1

Share Key 0 / 46

Timeout 1 - 120 sec.

Auth Port 1 - 65535

Retransmit 1 - 254 sec.

Server Address 2

Share Key 0 / 46

Timeout 1 - 120 sec.

Auth Port 1 - 65535

Retransmit 1 - 254 sec.

Configure the following settings.

Server Address 1

| Setting | Description | Factory Default |
|---------------------------|---------------------------------|-----------------|
| To input server address 1 | Specify the 1st server address. | None |

Auth Port

| Setting | Description | Factory Default |
|------------|--|-----------------|
| 1 to 65535 | Specify the authentication port number for the 1st server address. | None |

Share Key

| Setting | Description | Factory Default |
|---|---|-----------------|
| Input the share key for the 1st server, (0 to 46) | Specify the share key for the 1st server. | None |

Timeout (sec.)

| Setting | Description | Factory Default |
|----------|---|-----------------|
| 1 to 120 | Specify the duration of time before a device is logged out. | None |

Retransmit (sec.)

| Setting | Description | Factory Default |
|----------|--|-----------------|
| 1 to 254 | Specify the time for data re-transmission. | None |

Server Address 2

| Setting | Description | Factory Default |
|---------------------------|---------------------------------|-----------------|
| To input server address 2 | Specify the 2nd server address. | None |

Auth Port

| Setting | Description | Factory Default |
|------------|--|-----------------|
| 1 to 65535 | Specify the authentication port number for the 1st server address. | None |

Share Key

| Setting | Description | Factory Default |
|--|---|-----------------|
| Input the share key for the 2nd server (0 to 46) | Specify the share key for the 2nd server. | None |

Timeout

| Setting | Description | Factory Default |
|----------|--|-----------------|
| 1 to 120 | Specify the duration of time before the device is timed out. | None |

Retransmit (sec.)

| Setting | Description | Factory Default |
|----------|--|-----------------|
| 1 to 254 | Specify the time for data re-transmission. | None |

When finished, click **APPLY** to save your changes.




NOTE


The RADIUS service will be operated via the 1st server first; if it fails, it will be run on the 2nd server.

Local Database

First click the **Local Database** tab and then click the  icon.

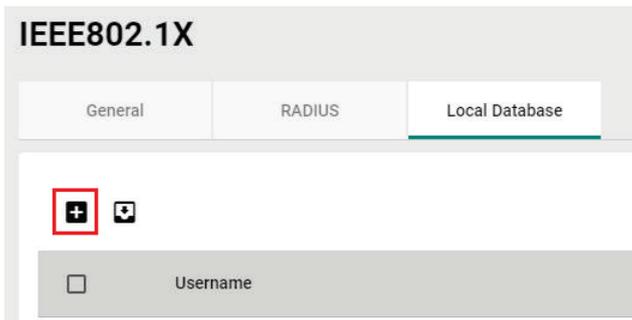

Configure the following settings.

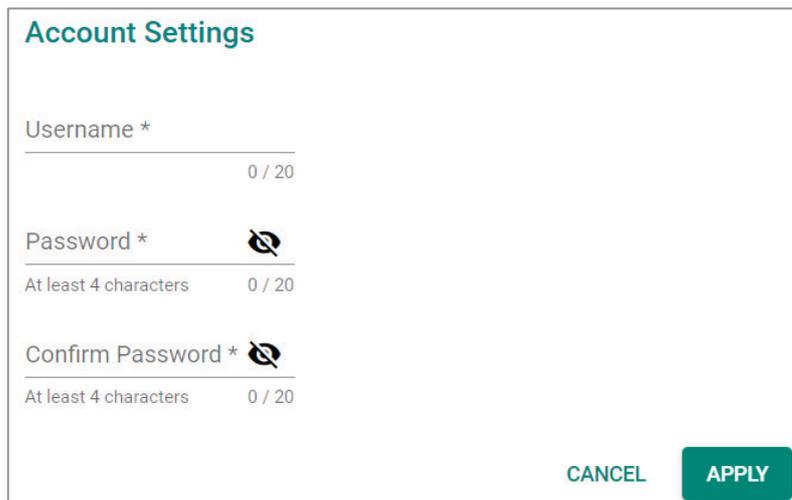

Username

| Setting | Description | Factory Default |
|--------------------|--|-----------------|
| 0 to 20 characters | Specify the username for the local database. | None |

Password

| Setting | Description | Factory Default |
|---|---|-----------------|
| At least 4 characters, (max. 20 characters) | Specify the password for the local database user. | None |

Confirm Password

| Setting | Description | Factory Default |
|---|---|-----------------|
| At least 4 characters, (max. 20 characters) | Confirm the password for the local database user. | None |

When finished, click **APPLY** to save your changes.

MAC Authentication Bypass

Click **MAC Authentication Bypass** on the function menu.

General

Click the **General** tab for general settings.

The screenshot shows the 'MAC Authentication Bypass' configuration interface. At the top, there are three tabs: 'General', 'RADIUS', and 'Local Database'. The 'General' tab is active. Below the tabs, there are two dropdown menus: 'MAC Authentication ...' and 'Authentication Mode *'. At the bottom left of the configuration area, there is a green 'APPLY' button.

MAC Authentication Bypass

| Setting | Description | Factory Default |
|----------|---|-----------------|
| Enabled | Enable MAC authentication bypass function. | None |
| Disabled | Disable MAC authentication bypass function. | |

Authentication Mode

| Setting | Description | Factory Default |
|----------------|---|-----------------|
| RADIUS | Select RADIUS as the authentication mode. | None |
| Local Database | Select local database as the authentication mode. | |

When finished, click **APPLY** to save your changes.

RADIUS

Click the **RADIUS** tab to perform further configurations.

MAC Authentication Bypass

General | **RADIUS** | Local Database

| | |
|----------------------|----------------------|
| Server Address 1 | Auth Port |
| <input type="text"/> | 1 - 65535 |
| Share Key | <input type="text"/> |
| <input type="text"/> | 0 / 46 |
| Timeout | Retransmit |
| 1 - 120 sec. | 1 - 254 sec. |
| Server Address 2 | Auth Port |
| <input type="text"/> | 1 - 65535 |
| Share Key | <input type="text"/> |
| <input type="text"/> | 0 / 46 |
| Timeout | Retransmit |
| 1 - 120 sec. | 1 - 254 sec. |

APPLY

Configure the following settings.

Server Address 1

| Setting | Description | Factory Default |
|---------------------------|---------------------------------|-----------------|
| To input server address 1 | Specify the 1st server address. | None |

Auth Port

| Setting | Description | Factory Default |
|------------|--|-----------------|
| 1 to 65535 | Specify the authentication port number for the 1st server address. | None |

Share Key

| Setting | Description | Factory Default |
|---|---|-----------------|
| Input the share key for the 1st server, (0 to 46) | Specify the share key for the 1st server. | None |

Timeout (sec.)

| Setting | Description | Factory Default |
|----------|---|-----------------|
| 1 to 120 | Specify the duration of time before a device is logged out. | None |

Retransmit (sec.)

| Setting | Description | Factory Default |
|----------|--|-----------------|
| 1 to 254 | Specify the time for data re-transmission. | None |

Server Address 2

| Setting | Description | Factory Default |
|---------------------------|---------------------------------|-----------------|
| To input server address 2 | Specify the 2nd server address. | None |

Auth Port

| Setting | Description | Factory Default |
|------------|--|-----------------|
| 1 to 65535 | Specify the authentication port number for the 1st server address. | None |

Share Key

| Setting | Description | Factory Default |
|--|---|-----------------|
| Input the share key for the 2nd server (0 to 46) | Specify the share key for the 2nd server. | None |

Timeout

| Setting | Description | Factory Default |
|----------|--|-----------------|
| 1 to 120 | Specify the duration of time before the device is timed out. | None |

Retransmit (sec.)

| Setting | Description | Factory Default |
|----------|--|-----------------|
| 1 to 254 | Specify the time for data re-transmission. | None |

When finished, click **APPLY** to save your changes.



NOTE

The RADIUS service will be operated via the 1st server first; if it fails, it will be run on the 2nd server.

Local Database

Click **Local Database** tab, and then click  icon for further configurations.

MAC Authentication Bypass

General RADIUS **Local Database**

MAC Address

Max. 1024

Configure the following setting.

MAC Address

| Setting | Description | Factory Default |
|-------------|---|-----------------|
| MAC Address | Specify the MAC address used for MAC authentication bypass. | None |

When finished, click **CREATE** to complete.

Port Security

MAC Sticky Overview

MAC Sticky is a function that allows users to configure the maximum number of MAC addresses (the Limit) that a port can “learn”. Users can configure what action should be taken (under Secure Action) when a new MAC address tries to access a port after the maximum number of MAC addresses have already been learned. The total number of allowed MAC addresses cannot exceed 1024.

How MAC Sticky Works

In MAC Sticky mode, administrators can set a proper limit number and then configure trust devices manually, or let the system configure trust devices automatically. Except for dropping packets as a response to any violations, administrators can set ‘port shutdown’ on a port and achieve a strict security guarantee. When a violation is registered on a port, the port will shut down and an administrator will receive a notification to perform a check.

MAC Sticky Settings and Status

To configure the MAC Sticky settings, select the **General** tab in **Port Security**.

Configure the following settings.

Enable

| Setting | Description | Factory Default |
|----------|------------------------|-----------------|
| Enabled | Enable port security. | Enabled |
| Disabled | Disable port security. | |

Port Security Mode

| Setting | Description | Factory Default |
|------------------|---|------------------|
| MAC Sticky | Specify MAC Sticky as the port security mode. | Static Port Lock |
| Static Port Lock | Specify Static Port Lock as the port security mode. | |

Select **MAC Sticky** and click **Apply**.



NOTE

When you change the Port Security Mode, the settings in the table will be deleted.

Click the  icon on the port you want to edit.

| | Port | Enable | Address Limit | Secure Action | Current Address |
|---|------|----------|---------------|---------------|-----------------|
|  | 1/1 | Disabled | 1 | Packet Drop | 0 |
|  | 1/2 | Disabled | 1 | Packet Drop | 0 |
|  | 1/3 | Disabled | 1 | Packet Drop | 0 |
|  | 1/4 | Disabled | 1 | Packet Drop | 0 |

Configure the following settings.

Edit Port 1/1 Setting

MAC Sticky
Disabled ▼

Address Limit *
1 i

1 - 1013

Secure Action
Packet Drop ▼

Cancel Apply

MAC Sticky

| Setting | Description | Factory Default |
|----------|---|-----------------|
| Enabled | Enable Static Port Lock for this port. | Disabled |
| Disabled | Disable Static Port Lock for this port. | |

Address Limit


| Setting | Description | Factory Default |
|----------|---|-----------------|
| 1 to 997 | Specify the maximum numbers of the learned MAC address. | 1 |

Secure Action

| Setting | Description | Factory Default |
|---------------|---|-----------------|
| Port Shutdown | Enable port shutdown when a violation occurs. | Packet Drop |
| Packet Drop | Drop the packets when a violation occurs. | |

When finished, click **Apply** to save your changes.

Next, click the **MAC Sticky** tab, and then click the **+** icon to add the MAC Sticky entries.

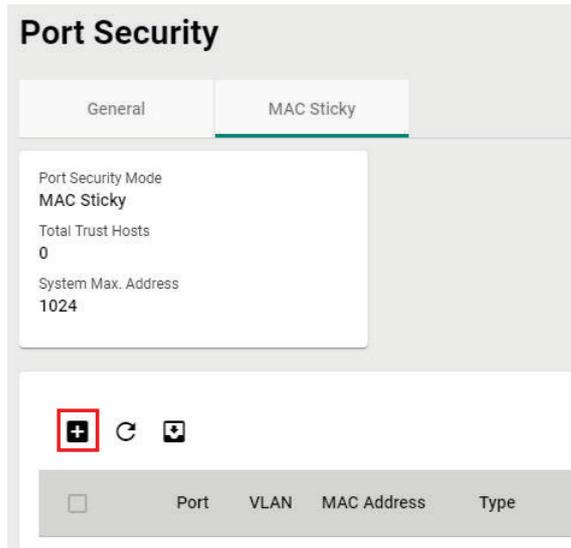

Configure the following settings.

Create Entry

Port ▼

VLAN ID *

MAC Address * i

Cancel
Create

Port

| Setting | Description | Factory Default |
|---|--|-----------------|
| Select the port from the drop-down list | Select the port(s) that will be used with the MAC Sticky function. | None |

VLAN ID


| Setting | Description | Factory Default |
|-------------------|--|-----------------|
| Input the VLAN ID | Specify the VLAN ID that will be used with MAC Sticky. | None |

MAC Address

| Setting | Description | Factory Default |
|---|--|-----------------|
| Input the MAC address that will be used | Specify the MAC Address of the device that will be used as the reliable source for network access. | None |

When finished, click **Create**.

You can view the MAC Sticky settings in the figure below.

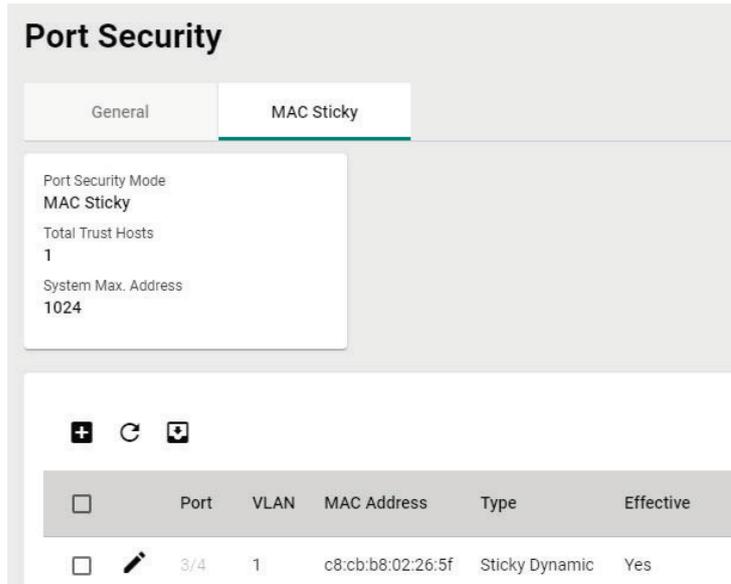


Static Port Lock Overview

To provide a port-based security function, Moxa’s switches have implemented Static Port Lock function; the main idea is to allow configured devices, 128 at most, to access the network through a specific port. Packets sent from unknown devices or from configured devices with mismatching ports will be dropped. In other words, only the packets from the devices pre-configured with the specific MAC addresses can be sent to the specific port to ensure a secured network data transmission scenario.

Static Port Lock Settings and Status

To configure these setting, first click the **Port Security** tab and then click **General**.

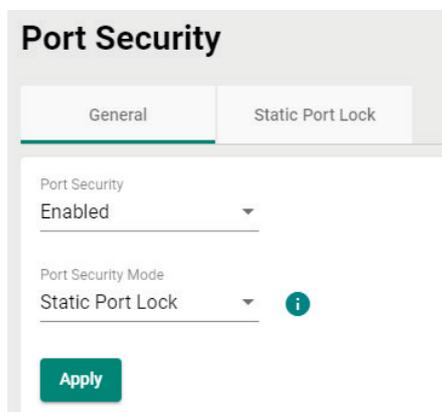

Configure the following settings.

Enable

| Setting | Description | Factory Default |
|----------|------------------------|-----------------|
| Enabled | Enable port security. | Enabled |
| Disabled | Disable port security. | |

Port Security Mode

| Setting | Description | Factory Default |
|------------------|--|------------------|
| MAC Sticky | Select MAC Sticky as the port security mode. | Static Port Lock |
| Static Port Lock | Select Static Port Lock as the port security mode. | |

Select **Static Port Lock** and click **Apply**.

Select the  icon on the port you want to edit.

| | Port | Enable | Manual Configured Address |
|---|------|----------|---------------------------|
|  | 1/1 | Disabled | 0 |
|  | 1/2 | Disabled | 0 |
|  | 1/3 | Disabled | 0 |
|  | 1/4 | Disabled | 0 |

Configure the following settings.

Edit Port 1/1 Setting

Static Port Lock
Disabled ▼

Cancel Apply

Enable

| Setting | Description | Factory Default |
|----------|---------------------------|-----------------|
| Enabled | Enable Static Port Lock. | Disabled |
| Disabled | Disable Static Port Lock. | |

When finished, click **Apply** to save your changes.

Next, click the **Static Port Lock** tab and then the  icon to perform further settings.

Port Security

General

Static Port Lock

Port Security Mode
Static Port Lock

Total Trust Hosts
0

System Max. Address
1024







| <input type="checkbox"/> | Port | VLAN | MAC Address | Type |
|--------------------------|------|------|-------------|------|
| | | | | |

Configure the following settings.

Create Entry

Port ▼

VLAN ID *

MAC Address * i

Cancel
Create

Port

| Setting | Description | Factory Default |
|---|--|-----------------|
| Select the port from the drop-down list | Specify the port(s) that will be used with Static Port Lock. | None |

VLAN ID

| Setting | Description | Factory Default |
|-------------------|---|-----------------|
| Input the VLAN ID | Specify the VLAN ID that will use Static Port Lock. | None |

MAC Address

| Setting | Description | Factory Default |
|---|--|-----------------|
| Input the MAC address that will be used | Specify the MAC Address of the device that will be used as the reliable source for network access. | None |

When finished, click **Create**.

You can view the **Static Port Lock** setting status from the following figure.

+
↻
+

| <input type="checkbox"/> | Port | VLAN | MAC Address | Type | Effective |
|--------------------------|------|------|-------------------|-----------------|-----------|
| <input type="checkbox"/> | 1/1 | 1 | 00:01:02:03:04:05 | Lock Configured | No |

Max 1024

Traffic Storm Control

A traffic storm can happen when packets flood the network; this causes excessive traffic and slows down the network performance. To counter this, Traffic Storm Control provides an efficient design to prevent the network from flooding caused by a broadcast, multicast, or unicast traffic storm on a physical network layer. The feature can handle packets from both ingress and egress data.

First click **Traffic Storm Control** on the menu, and then click the  icon on the specific port you want to configure.

| Traffic Storm Control | | | | | |
|---|-----------|----------|----------|-----------------|--|
| Port | Broadcast | DLF | Priority | Threshold (fps) | |
|  1/1 | Enabled | Disabled | Disabled | 12700 | |
|  1/2 | Enabled | Disabled | Disabled | 12700 | |
|  1/3 | Enabled | Disabled | Disabled | 12700 | |
|  1/4 | Enabled | Disabled | Disabled | 12700 | |

Configure the following settings.

Edit Port 1/1 Settings

Broadcast *
Enabled ▼

Multicast *
Disabled ▼

DLF *
Disabled ▼

Threshold *
12700 i
625 - 14881000 fps

Copy Configurations ... i

CANCEL APPLY

There are three methods that can be used for traffic storm control: Broadcast, Multicast, and Destination Lookup Failure (DLF).

Broadcast

| Setting | Description | Factory Default |
|----------|--|-----------------|
| Enabled | Enable Broadcast when a traffic storm occurs. | Disabled |
| Disabled | Disable Broadcast when a traffic storm occurs. | |

Multicast

| Setting | Description | Factory Default |
|----------|--|-----------------|
| Enabled | Enable multicast when a traffic storm occurs. | Disabled |
| Disabled | Disable multicast when a traffic storm occurs. | |

DLF

| Setting | Description | Factory Default |
|----------|--|-----------------|
| Enabled | Enable DLF when a traffic storm occurs. | Disabled |
| Disabled | Disable DLF when a traffic storm occurs. | |

Threshold (fps)

| Setting | Description | Factory Default |
|-----------------|---|-----------------|
| 625 to 14881000 | Define the threshold for a traffic storm. | 12700 |



Copy Config to Ports

| Setting | Description | Factory Default |
|--|--|-----------------|
| Select the port(s) from the drop-down list | Select the port(s) you want to have the same configurations for. | None |

When finished, click **APPLY** to save your changes.

Access Control List

Click **Access Control List** on the function menu and then click  to perform further configurations.

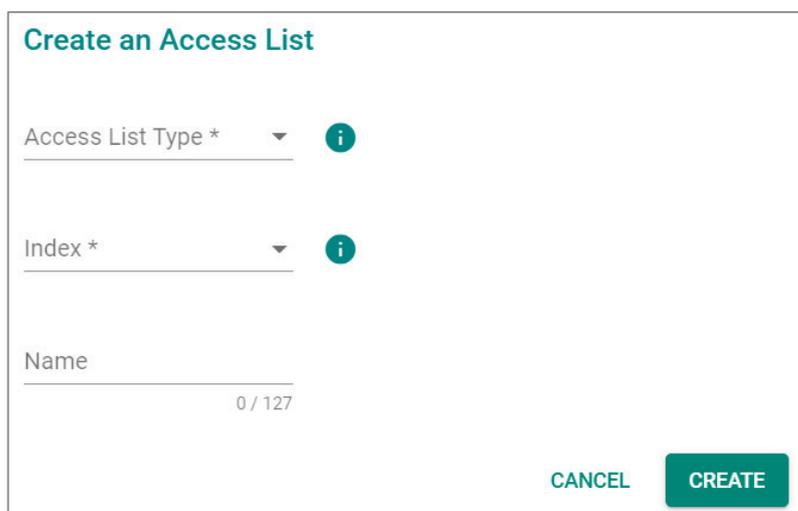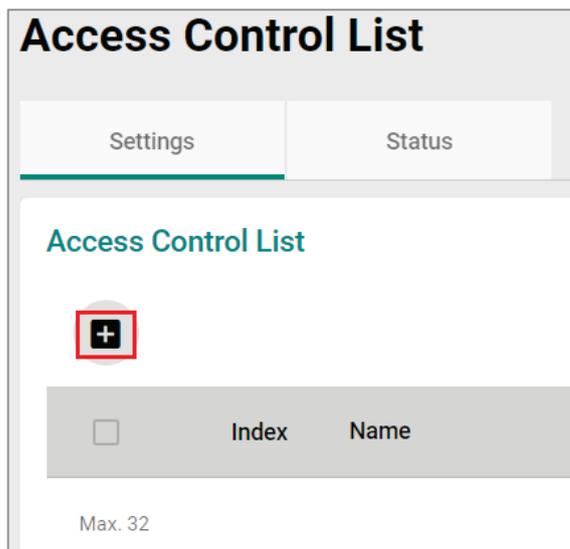

Configure the following settings.

Access List Type

| Setting | Description | Factory Default |
|-----------|--|-----------------|
| IP-based | Specify IP-based as the access list type. | None |
| MAC-based | Specify MAC-based as the access list type. | |

Index (For IP-based type)

| Setting | Description | Factory Default |
|---------------------------|---|-----------------|
| Select from IP-1 to IP-16 | Select from the drop-down list for index. | None |

Index (For MAC-based type)

| Setting | Description | Factory Default |
|-----------------------------|---|-----------------|
| Select from MAC-1 to MAC-16 | Select from the drop-down list for index. | None |

Name

| Setting | Description | Factory Default |
|---------------------|--------------------------------------|-----------------|
| 0 to 127 characters | Provide a name for this access list. | None |

IP-based ACL Table Configurations

Configure the following settings for IP-based access list.

ACL Table of IP-1 ▼

Active Interface Type *

Port-based ▼

Active Ingress Ports ▼ ⓘ

Active Egress Ports ▼ ⓘ

APPLY

Active Interface Type

| Setting | Description | Factory Default |
|------------|--|-----------------|
| Port-based | Specify Port-based as the active interface type. | None |
| VLAN-based | Specify VLAN-based as the active interface type. | |

Active Ingress Ports (For Port-based type)

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Select the port(s) as the active ingress port(s). | None |

Active Egress Ports (For Port-based type)

| Setting | Description | Factory Default |
|--|--|-----------------|
| Select the port(s) from the drop-down list | Select the port(s) as the active egress port(s). | None |

Active Ingress VLAN (For VLAN-based type)

| Setting | Description | Factory Default |
|--|--|-----------------|
| Select the port(s) from the drop-down list | Select the port(s) as the active ingress VLAN. | None |

Active Egress VLAN (For VLAN-based type)

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Select the port(s) as the active egress VLAN. | None |

When finished, click **APPLY** to save your changes.

IP-based Rule Index Settings

Click the **+** icon for Rule Index settings.



Create Rule Index 1 Settings of IP-1

Rule Index 1 *
 Enabled ▼

Rule Type * ▼

Protocol
 Any ▼

Source IP Address Source IP Mask ▼

Any

Destination IP Address Destination IP Mask ▼

Any

DSCP
 Any

0 - 63

CANCEL
CREATE

Configure the following settings.

Rule Index 1

| Setting | Description | Factory Default |
|----------|--------------------------------|-----------------|
| Enabled | Enable Rule Index 1 settings. | Enabled |
| Disabled | Disable Rule Index 1 settings. | |

Rule Type

| Setting | Description | Factory Default |
|---------|-----------------------|-----------------|
| Permit | Permit the rule type. | None |
| Deny | Deny the rule type. | |

Protocol

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Select the protocol used for this rule index. | Any |

ICMP Type (For ICMP protocol only)

| Setting | Description | Factory Default |
|----------|-----------------------------|-----------------|
| 0 to 255 | Select the ICMP type value. | Any |

ICMP Code (For ICMP protocol only)

| Setting | Description | Factory Default |
|---------|-----------------------------|-----------------|
| 0 to 15 | Select the ICMP code value. | Any |

ICMP Type (For IGMP protocol only)

| Setting | Description | Factory Default |
|----------|-----------------------------|-----------------|
| 0 to 255 | Select the IGMP type value. | Any |

Protocol Number (For User defined protocol only)

| Setting | Description | Factory Default |
|----------|-----------------------------|-----------------|
| 0 to 255 | Select the protocol number. | None |

Source IP Address

| Setting | Description | Factory Default |
|------------|--|-----------------|
| IP address | Provide the IP address as the source IP address. | Any |

Source IP Mask

| Setting | Description | Factory Default |
|--|--|-----------------|
| Select the port(s) from the drop-down list | Select the source IP mask from the list. | None |

Source Port

| Setting | Description | Factory Default |
|---|-------------------------|-----------------|
| Select the port(s) by using the up/down arrow | Select the source port. | Any |

Destination IP Address

| Setting | Description | Factory Default |
|------------|---|-----------------|
| IP address | Provide the IP address as the destination IP address. | Any |

Destination IP Mask

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Select the destination IP mask from the list. | None |

Destination Port

| Setting | Description | Factory Default |
|---|------------------------------|-----------------|
| Select the port(s) by using the up/down arrow | Select the destination port. | Any |

DSCP

| Setting | Description | Factory Default |
|---------|-------------------------|-----------------|
| 0 to 63 | Specify the DSCP value. | Any |

Action-Redirect Enable

| Setting | Description | Factory Default |
|----------|------------------------------------|-----------------|
| Enabled | Enable the redirection function. | Disabled |
| Disabled | Disabled the redirection function. | |

DSCP Remark

| Setting | Description | Factory Default |
|---------|--------------------------------|-----------------|
| 0 to 63 | Specify the DSCP remark value. | Disabled |

When finished, click **CREATE** to complete.

Note that the following system packets are not included in the ACL operation.

| Item | Destination/Source Port Number |
|--------------|--------------------------------|
| DHCP Server | 67 |
| DHCP Client | 68 |
| Moxa Service | 40404 |

MAC-based ACL Table Configurations

Configure the following settings for MAC-based access list.

ACL Table of MAC-1 ▼

Active Interface Type *

Port-based ▼

Active Ingress Ports ▼ ⓘ

Active Egress Ports ▼ ⓘ

APPLY

Active Interface Type

| Setting | Description | Factory Default |
|------------|--|-----------------|
| Port-based | Specify Port-based as the active interface type. | None |
| VLAN-based | Specify VLAN-based as the active interface type. | |

Active Ingress Ports (For Port-based type)

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Select the port(s) as the active ingress port(s). | None |

Active Egress Ports (For Port-based type)

| Setting | Description | Factory Default |
|--|--|-----------------|
| Select the port(s) from the drop-down list | Select the port(s) as the active egress port(s). | None |

Active Ingress VLAN (For VLAN-based type)

| Setting | Description | Factory Default |
|--|--|-----------------|
| Select the port(s) from the drop-down list | Select the port(s) as the active ingress VLAN. | None |

Active Egress VLAN (For VLAN-based type)

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Select the port(s) as the active egress VLAN. | None |

When finished, click **APPLY** to save your changes.

MAC-based Rule Index Settings

Click the  icon for Rule Index settings.



Create Rule Index 1 Settings of MAC-1

Rule Index 1 *
Enabled ▼

Rule Type *
▼

EtherType
Any ▼

Source MAC Address
Any Source MAC Mask ▼

Destination MAC Address
Any Destination MAC Ma... ▼

VLAN ID
Any
1 - 4094

CoS
Any
0 - 7

CANCEL
CREATE

Configure the following settings.

Rule Index 1

| Setting | Description | Factory Default |
|----------|--------------------------------|-----------------|
| Enabled | Enable Rule Index 1 settings. | Enabled |
| Disabled | Disable Rule Index 1 settings. | |

Rule Type

| Setting | Description | Factory Default |
|---------|-----------------------|-----------------|
| Permit | Permit the rule type. | None |
| Deny | Deny the rule type. | |

EtherType

| Setting | Description | Factory Default |
|--------------|---|-----------------|
| GOOSE | Select GOOSE as the Ethernet type. | Any |
| SMV | Select SMV as the Ethernet type. | |
| User defined | Select User defined as the Ethernet type. | |

EtherType Value (For User defined type only)

| Setting | Description | Factory Default |
|--------------|--|-----------------|
| In hex digit | Provide the Ethernet type value for the user defined type. | 0x |

Source MAC Address

| Setting | Description | Factory Default |
|-------------|--|-----------------|
| MAC address | Provide the MAC address as the source MAC address. | Any |

Source MAC Mask

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select the port(s) from the drop-down list | Select the source MAC mask from the list. | None |

Destination MAC Address

| Setting | Description | Factory Default |
|-------------|---|-----------------|
| MAC address | Provide the MAC address as the destination MAC address. | Any |

Destination MAC Mask

| Setting | Description | Factory Default |
|--|--|-----------------|
| Select the port(s) from the drop-down list | Select the destination MAC mask from the list. | None |

VLAN ID

| Setting | Description | Factory Default |
|--|---------------------|-----------------|
| Select the VLAN ID by using the up/down arrows | Select the VLAN ID. | Any |

CoS

| Setting | Description | Factory Default |
|--|-------------------------|-----------------|
| Select the Cos value by using the up/down arrows | Specify the DSCP value. | Any |

When finished, click **CREATE** to complete.

Note that the following system packets are not included in the ACL operation.

| Item | MAC Address |
|-------------------------------------|-------------------|
| IEEE reserved Multicast MAC address | 01:80:C2:00:00:XX |

| Item | Ether Type |
|--------------|------------|
| ARP | 0x0806 |
| LACP | 0x8809 |
| Jumbo Frame | 0x8870 |
| EAP over LAN | 0x888E |
| LLDP | 0x88CC |

Access Control List Status

Click **Status** tab to view the Access Control List status.

Access Control List

Settings **Status**

ACL Summary

Number of activate ACL (Max. 16)
1

Access Control List

| Index | Name | Activated | Activate Direction |
|-------|------|-------------|--------------------|
| MAC-1 | test | Inactivated | -- |
| IP-1 | test | Activated | Both |

Loop Protection

Click **Loop Protection** on the function menu.

Settings

Click **Settings** tab for further configurations.

Loop Protection

Settings Status

Loop Protection *
Disabled

Detect Interval *
10
1 - 30 sec.

APPLY

Configure the following settings.

Loop Protection

| Setting | Description | Factory Default |
|----------|-----------------------------------|-----------------|
| Enabled | Enable Loop Protection function. | Disabled |
| Disabled | Disable Loop Protection function. | |

Detect Interval

| Setting | Description | Factory Default |
|---------|------------------------------------|-----------------|
| 1 to 30 | Specify the detect interval value. | 10 |

When finished, click **APPLY** to complete.

Status

Click **Status** tab to view the Loop Protection status.

Loop Protection

Settings **Status**



| | Ports | Loop Status | Port Status | Peer Port |
|---|-------|-------------|-------------|-----------|
|  | 1/1 | Normal | --- | --- |
|  | 1/2 | Normal | --- | --- |
|  | 1/3 | Normal | --- | --- |
|  | 1/4 | Normal | --- | --- |


Authentication

This section describes how to configure system authentication including RADIUS and TACACS+. Moxa switches have three different user login authentications: TACACS+ (Terminal Access Controller Access-Control System Plus), RADIUS (Remote Authentication Dial In User Service), and Local. The TACACS+ and RADIUS mechanisms are centralized "AAA" (Authentication, Authorization, and Accounting) systems for connecting to network services. The fundamental purpose of both TACACS+ and RADIUS is to provide an efficient and secure mechanism for user account management.

There are five combinations available for users to choose from:

1. **TACACS+, Local:** Check the TACACS+ database first. If checking the TACACS+ database fails, then check the Local database.
2. **RADIUS, Local:** Check the RADIUS database first. If checking the RADIUS database fails, then check the Local database.
3. **TACACS+:** Only check TACACS+ database.
4. **RADIUS:** Only check the RADIUS database.
5. **Local:** Only check the Local database.


This section includes the configurations for **Login Authentication**, **RADIUS**, and **TACACS+**.

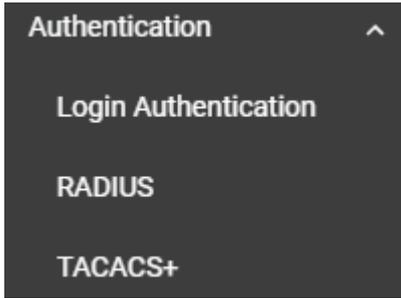

Login Authentication

This section allows users to select the login authentication protocol.

Select **Login Authentication**.

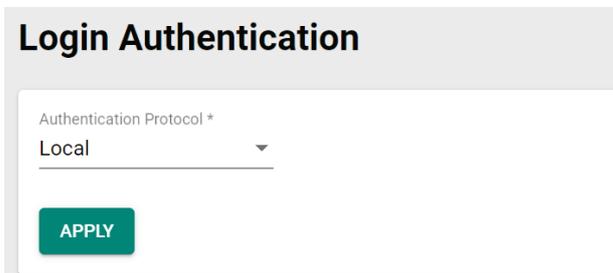A configuration page titled "Login Authentication". It features a dropdown menu labeled "Authentication Protocol *" with "Local" selected. Below the dropdown is a green "APPLY" button.

Configure the following settings.

Authentication Protocol

| Setting | Description | Factory Default |
|----------------|--|-----------------|
| Local | Select Local as the authentication protocol. | Local |
| RADIUS | Select RADIUS as the authentication protocol. | |
| TACACS+ | Select TACACS+ as the authentication protocol. | |
| RADIUS, Local | Select RADIUS and Local as the authentication protocol. | |
| TACACS+, Local | Select TACACS+ and Local as the authentication protocol. | |

When finished, click **APPLY** to save your changes.

RADIUS

Click **RADIUS** on the menu and configure the following settings.

RADIUS Server

Server Address 1 * UDP Port *

0.0.0.0 1812

1 - 65535

Share Key

0 / 64

Auth Type *

CHAP ▼

Timeout *

5

5 - 180 sec.

Retry *

1

0 - 5 times

Server Address 2 * UDP Port *

0.0.0.0 1812

1 - 65535

Share Key

0 / 64

Auth Type *

CHAP ▼

Timeout *

5

5 - 180 sec.

Retry *

1

0 - 5 times

APPLY

Server Address 1

| Setting | Description | Factory Default |
|--------------------------|--|-----------------|
| Input the server address | Specify the 1st server address as the authentication database. | 0.0.0.0 |

UDP Port

| Setting | Description | Factory Default |
|-----------------------|-----------------------|-----------------|
| Input the port number | Specify the UDP port. | 1812 |

Share Key

| Setting | Description | Factory Default |
|---------------|---|-----------------|
| Input the key | Input the share key for 1st server authentication verification. | None |

Authentication Type

| Setting | Description | Factory Default |
|-----------|---------------------------------------|-----------------|
| PAP | PAP is the authentication type. | CHAP |
| CHAP | CHAP is the authentication type. | |
| MS-CHAPv1 | MS-CHAPv1 is the authentication type. | |

Timeout (sec.)

| Setting | Description | Factory Default |
|----------|---|-----------------|
| 5 to 180 | When waiting for a response from the server, set the amount of time before timeout. | 5 |

Retry (sec.)

| Setting | Description | Factory Default |
|---------|---|-----------------|
| 0 to 5 | Define the retry interval when trying to reconnect to a server. | 1 |

Server Address 2

| Setting | Description | Factory Default |
|--------------------------|--|-----------------|
| Input the server address | Specify the 2nd server address as the authentication database. | 0.0.0.0 |

UDP Port

| Setting | Description | Factory Default |
|-----------------------|-----------------------|-----------------|
| Input the port number | Specify the UDP port. | 1812 |

Share Key

| Setting | Description | Factory Default |
|---------------|---|-----------------|
| Input the key | Specify the share key for 2nd server authentication verification. | None |

Authentication Type

| Setting | Description | Factory Default |
|-----------|---------------------------------------|-----------------|
| PAP | PAP is the authentication type. | CHAP |
| CHAP | CHAP is the authentication type. | |
| MS-CHAPv1 | MS-CHAPv1 is the authentication type. | |

Timeout (sec.)

| Setting | Description | Factory Default |
|----------|---|-----------------|
| 5 to 180 | When waiting for a response from the server, set the amount of time before the device is timed out. | 5 |

Retry (sec.)

| Setting | Description | Factory Default |
|---------|--|-----------------|
| 0 to 5 | Set the retry interval when trying to reconnect to a server. | 1 |

When finished, click **APPLY** to save your changes.



NOTE

The RADIUS service will be operated via the 1st server; if it fails, it will run on the 2nd server.

TACACS+

Click **TACACS+** on the menu and then configure the following settings.

TACACS+ Server

| | |
|--------------------|---|
| Server Address 1 * | TCP Port * |
| 0.0.0.0 | 49 |
| | 1 - 65535 |
| Share Key |   |
| | 0 / 64 |
| Auth Type * | |
| CHAP | ▼ |
| Timeout * | |
| 5 | |
| 5 - 180 | sec. |
| Retry * | |
| 1 | |
| 0 - 5 | times |
| Server Address 2 * | TCP Port * |
| 0.0.0.0 | 49 |
| | 1 - 65535 |
| Share Key |   |
| | 0 / 64 |
| Auth Type * | |
| CHAP | ▼ |
| Timeout * | |
| 5 | |
| 5 - 180 | sec. |
| Retry * | |
| 1 | |
| 0 - 5 | times |

APPLY

Server Address 1

| Setting | Description | Factory Default |
|--------------------------|--|-----------------|
| Input the server address | Specify the 1st server address as the authentication database. | 0.0.0.0 |

TCP Port

| Setting | Description | Factory Default |
|-----------------------|-----------------------|-----------------|
| Input the port number | Specify the UDP port. | 49 |

Share Key

| Setting | Description | Factory Default |
|---------------|---|-----------------|
| Input the key | Specify the share key for 1st server authentication verification. | None |

Authentication Type

| Setting | Description | Factory Default |
|---------|-----------------------------------|-----------------|
| ASCII | ASCII is the authentication type. | CHAP |
| PAP | PAP is the authentication type. | |
| CHAP | CHAP is the authentication type. | |

Timeout (sec.)

| Setting | Description | Factory Default |
|-----------------|---|-----------------|
| Input the value | When waiting for a response from the server, set the amount of time before the device is timed out. | 5 |

Retry

| Setting | Description | Factory Default |
|-----------------|--|-----------------|
| Input the value | Set the retry interval when trying to reconnect to a server. | 1 |

Server Address 2

| Setting | Description | Factory Default |
|--------------------------|--|-----------------|
| Input the server address | Specify the 2nd server address as the authentication database. | 0.0.0.0 |

TCP Port

| Setting | Description | Factory Default |
|-----------------------|-----------------------|-----------------|
| Input the port number | Specify the UDP port. | 49 |

Share Key

| Setting | Description | Factory Default |
|---------------|---|-----------------|
| Input the key | Specify the share key for 2nd server authentication verification. | None |

Authentication Type

| Setting | Description | Factory Default |
|---------|-----------------------------------|-----------------|
| ASCII | ASCII is the authentication type. | CHAP |
| PAP | PAP is the authentication type. | |
| CHAP | CHAP is the authentication type. | |

Timeout (sec.)

| Setting | Description | Factory Default |
|-----------------|---|-----------------|
| Input the value | When waiting for a response from the server, set the amount of time before the device is timed out. | 5 |

Retry

| Setting | Description | Factory Default |
|-----------------|--|-----------------|
| Input the value | Set the retry interval when trying to reconnect to a server. | 1 |

When finished, click **APPLY** to save your changes.




NOTE

The TACACS+ service will be operated via the 1st server; if it fails, it will run on the 2nd server. In addition, users that are created with the TACACS+ server come with Admin privilege.


Diagnostics

This section describes the diagnostics functions of Moxa's switch. Click **Diagnostics** on the function menu.

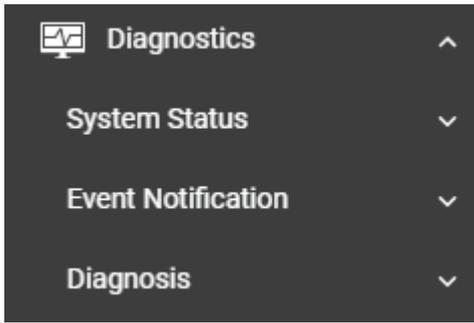


System Status

This section allows users to view the current system status including **Utilization, Statistics, and Module Information**.

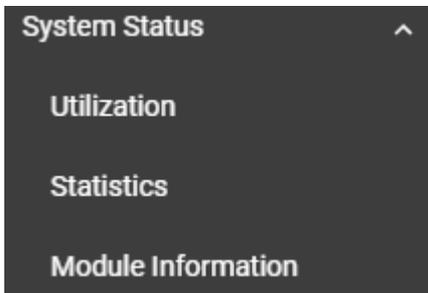

Utilization

Click **Utilization** on the function menu to view the current utilization status including CPU utilization, memory history, power consumption, and power history. All of the information is displayed via graphics, making it easier for users to view the system status. In addition, a  icon is available on the upper right corner of each figure, which allows users to view the latest status for each function.

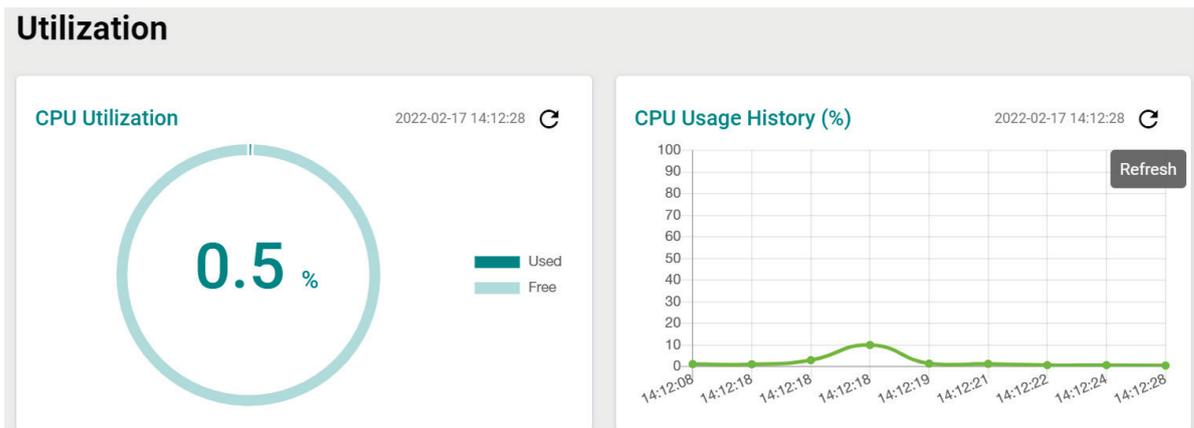


CPU Utilization

| Setting | Description | Factory Default |
|-----------|--|-----------------|
| Read-only | Displays the current utilization of the CPU. | None |

CPU Usage History

| Setting | Description | Factory Default |
|-----------|--|-----------------|
| Read-only | Displays the CPU usage history trend in a chart. | None |

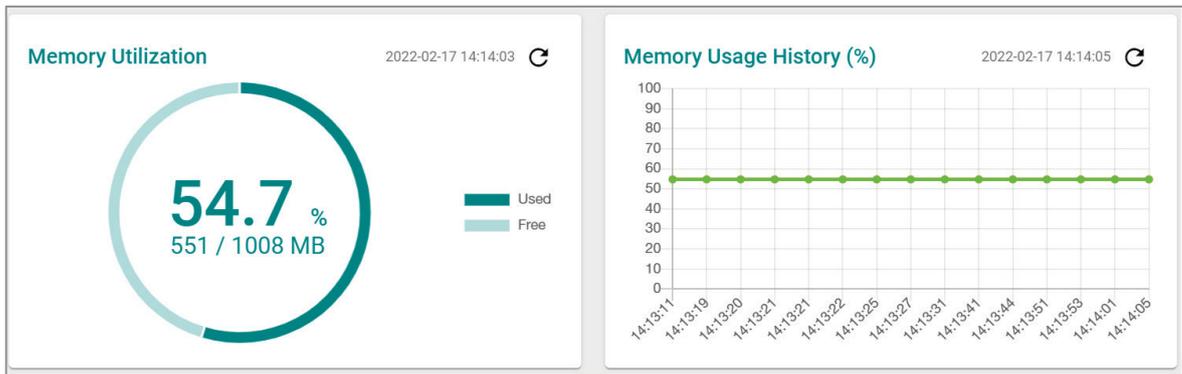


Memory Utilization

| Setting | Description | Factory Default |
|-----------|-----------------------------|-----------------|
| Read-only | Displays the memory status. | None |

Memory Usage History

| Setting | Description | Factory Default |
|-----------|---|-----------------|
| Read-only | Displays the history of the memory usage. | None |

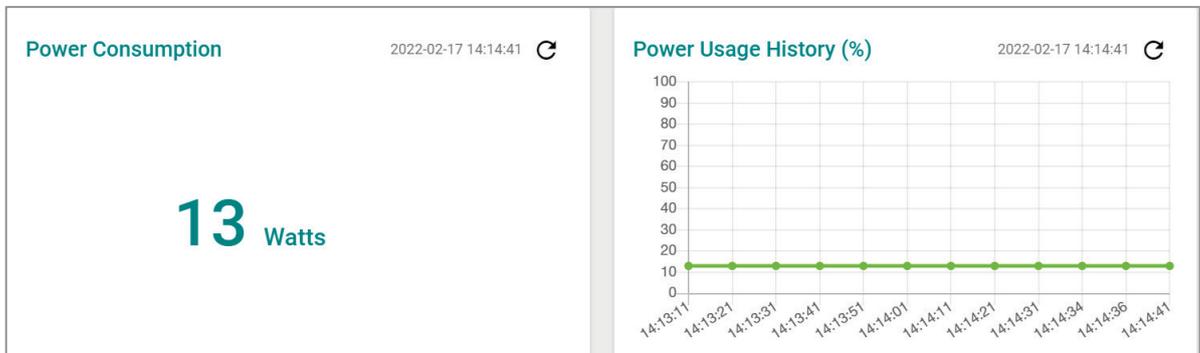

Power Consumption (watt)


| Setting | Description | Factory Default |
|-----------|--|-----------------|
| Read-only | Displays the power consumption status. | None |

Power Usage History

| Setting | Description | Factory Default |
|-----------|--|-----------------|
| Read-only | Displays the history of the power usage. | None |

Statistics

Click **Statistics** on the function menu. The first figure shows the packet counter status.

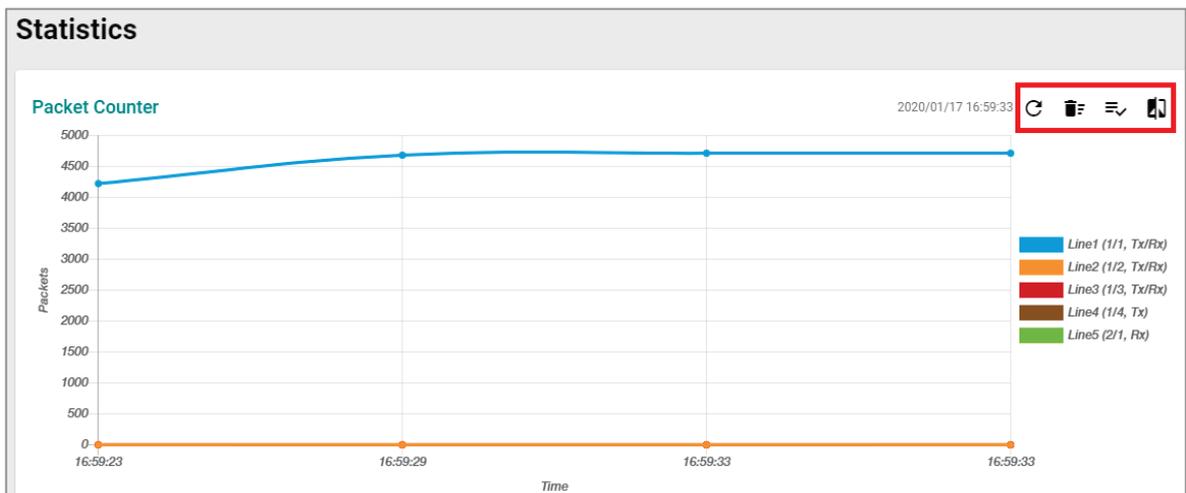

The status of the different ports will be shown in different colors. A maximum of five ports will have their information displayed.

| | |
|---|--------------------|
|  | Line1 (1/1, Tx/Rx) |
|  | Line2 (1/2, Tx/Rx) |
|  | Line3 (1/3, Tx/Rx) |
|  | Line4 (1/4, Tx) |
|  | Line5 (2/1, Rx) |

There are four icons on the right upper corner of the page. The table below provides a description for each one.

| Item | Name | Description |
|---|------------------------|--|
|  | Refresh | All statistical data will be refreshed. |
|  | Reset Statistics Graph | The packet counter will be cleared and the graphs will be reset. |
|  | Display Setting | All selected setting items will be shown here. |
|  | Data Comparison | Select the data you want to compare. |

Refreshing the Statistics

Click the **Refresh** icon and all statistical data will be refreshed immediately.

Resetting Statistics Graph

Click the **Reset** icon and select **CLEAR** to clear the packet counter and reset the graph.

Reset Statistics Graph

Are you sure to clear all graph data?

CANCEL
CLEAR

Display Setting

Click the **Display Setting** icon and all settings will be displayed. You can select the display mode from the drop-down list.

Display Settings

Display Mode *
Packet Counter ▼

Line 1 Monitoring Port *
1/1 ▼

Line 1 Sniffer *
Tx/Rx ▼

Line 2 Monitoring Port *
1/2 ▼

Line 2 Sniffer *
Tx/Rx ▼

Line 3 Monitoring Port *
1/3 ▼

Line 3 Sniffer *
Tx/Rx ▼

Line 4 Monitoring Port *
1/4 ▼

Line 4 Sniffer *
Tx ▼

Line 5 Monitoring Port *
2/1 ▼

Line 5 Sniffer *
Rx ▼

CANCEL APPLY

The Monitoring Port is the port you want to view or monitor. The sniffer port is the port that you can choose to view its receiving or transmission status or both.

Display Mode

| Setting | Description | Factory Default |
|-----------------------|---|-----------------|
| Packet Counter | The packet statistics will be displayed. | Packet Counter |
| Bandwidth Utilization | The bandwidth statistics will be displayed. | |

Click **APPLY** to complete.

Comparing Data

Click the **Data Comparison** icon and then select the items from the relevant fields.

Data Comparison

Benchmark Line * ▼

Benchmark Line - Time * ▼

Comparison Line * ▼

Comparison Line - Time * ▼

CLOSE

Click **CLOSE** to complete.

The data comparison figure will be shown. Click **CLOSE** to finish.

Data Comparison

Benchmark Line * Benchmark Line - Time *

1/1, Tx/Rx 14:15:18

Comparison Line * Comparison Line - Time *

1/2, Tx/Rx 14:15:18

| | | | |
|----------------------|---|--------|---|
| Tx Total Octets | 0 | ↓ ↑ | ▼ |
| Tx Total Packets | 0 | ↓ ↑ | ▼ |
| Tx Unicast Packets | 0 | ↓ ↑ | ▼ |
| Tx Multicast Packets | 0 | ↓ ↑ | ▼ |
| Tx Broadcast Packets | 0 | ↓ ↑ | ▼ |

[CLOSE](#)

The detailed packet transmission activity for each port can be seen in the table below.

🔍 🔍 🗑️ 🔄 🔍 Search

| Port | Tx Total Octets | Tx Total Packets | Tx Unicast Packets | Tx Multicast Packets | Tx Broadcast Packets | Rx Total Octets | Rx Total Packets | Rx Unicast Packets | Rx Multicast Packets |
|------|-----------------|------------------|--------------------|----------------------|----------------------|-----------------|------------------|--------------------|----------------------|
| 1/1 | 10877827 | 7891 | 7826 | 64 | 1 | 649940 | 5501 | 3706 | 1482 |
| 1/2 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 1/3 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 1/4 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

| Collision Packets | Late Collision Packets | Excessive Collision Packets | CRC Align Error Packets | Drop Packets | Undersize | Oversize Packets | Fragment Packets | Jabber Packets |
|-------------------|------------------------|-----------------------------|-------------------------|--------------|-----------|------------------|------------------|----------------|
| 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

Port: port number

Tx Total Octets: Number of octets transmitted including bad packets and FCS octets. Framing bits are not included.

Tx Total Packets: Number of packets transmitted.

Tx Unicast Packets: Number of Unicast packets transmitted.

Tx Broadcast Packets: Number of good Broadcast packets transmitted. Multicast packets are not included.

Rx Total Octets: Number of octets received, including bad packets and FCS octets. Framing bits are not included.

Rx Unicast Packets: Number of Unicast packets received.

Rx Multicast Packets: Number of Multicast packets received.

Rx Broadcast Packets: Number of good Broadcast packets received. Multicast packets are not included.

Rx Pause Packets: Number of pause packets received.

Collision Packets: Number of collisions received. If Jumbo Frames are enabled, the threshold of Jabber Frames is raised to the maximum size of Jumbo Frames.

Late Collision Packets: Number of late collision packets.

Excessive Collision Packets: Number of excessive collision packets.

CRC Align Error Packets: Number of CRC and Align errors that have occurred.

Drop Packets: Number of packets that were dropped.

Undersize: Number of undersized packets (less than 64 octets) received.


Oversize Packets: Number of oversized packets (over 1518 octets) received.

Fragment Packets: Number of fragments (packets with less than 64 octets, excluding framing bits, but including FCS octets) received.

Jabber Packets: Number of received packets that were longer than 1632 octets. This number excludes frame bits, but includes FCS octets that had either a bad FCS (Frame Check Sequence) with an integral number of octets (FCS Error) or a bad FCS with a non-integral octet (Alignment Error) number.

Module Information

Click **Module Information** on the function menu to view the current module information of the switch.

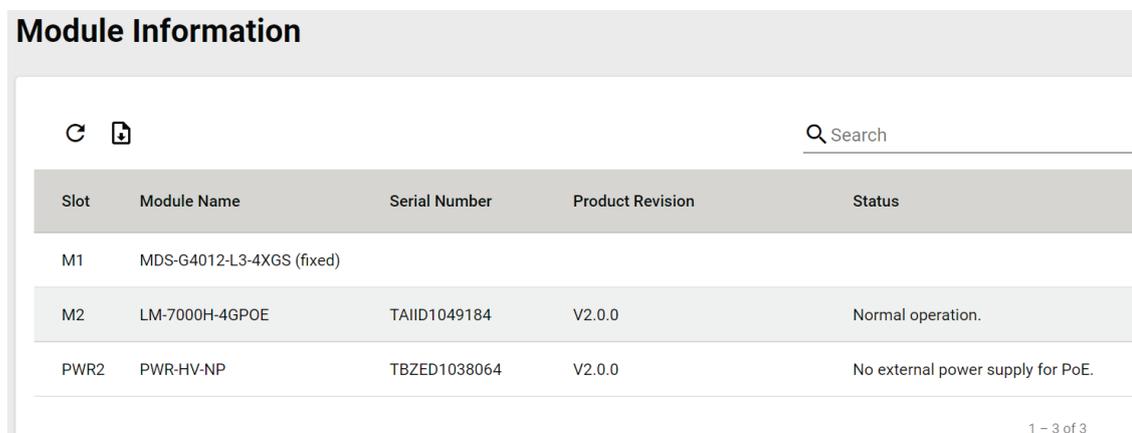

The screenshot shows a web interface titled "Module Information". At the top left, there are icons for refresh and download. At the top right, there is a search bar labeled "Search". Below these is a table with the following columns: Slot, Module Name, Serial Number, Product Revision, and Status. The table contains three rows of data. At the bottom right of the table area, it says "1 - 3 of 3".

| Slot | Module Name | Serial Number | Product Revision | Status |
|------|---------------------------|---------------|------------------|-----------------------------------|
| M1 | MDS-G4012-L3-4XGS (fixed) | | | |
| M2 | LM-7000H-4GPOE | TAIID1049184 | V2.0.0 | Normal operation. |
| PWR2 | PWR-HV-NP | TBZED1038064 | V2.0.0 | No external power supply for PoE. |

For example, in the figure above, the MDS-G4012-L3 switch is installed in Slot M1 and there is an LM-7000H-4GPOE module installed in Slot M2. In addition, a power module has been installed in Slot PWR2.




ATTENTION

When a different type of module has been inserted into the switch, we suggest you re-configure the settings, or use reset to default settings. When the same module is inserted into the slot, users do not need to re-configure the settings or use reset to default settings.

Log & Event Notification

This section includes the information for **Event Log**, **Event Notification**, **Syslog**, **SNMP Trap/Inform**, **Email Settings**, and **Relay Alarm Cut-off**.

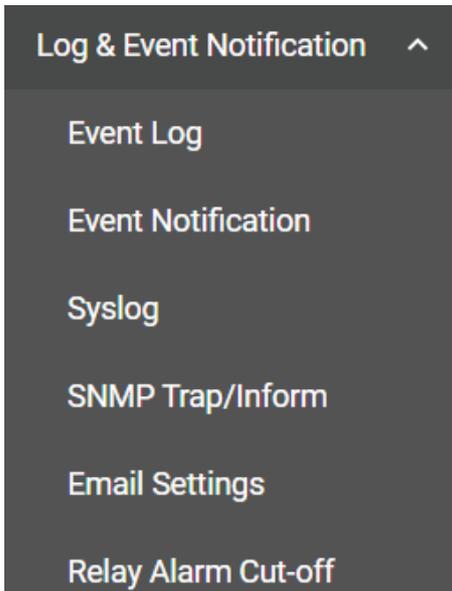

Event Log

To check event logs, click the **Event Log** tab.

The screenshot shows the "Event Log" interface. At the top, there are three tabs: "Event Log" (selected), "Oversize-Action", and "Backup". Below the tabs are three icons: a refresh icon, a trash icon, and a download icon. On the right side, there is a search bar with a magnifying glass icon and the text "Search". Below these elements is a table with the following data:

| Index | Bootup Number | Severity | Timestamp | Uptime | Message |
|-------|---------------|----------|---------------------|------------|---|
| 1 | 21 | Notice | 2018-12-21 19:15:28 | 0d0h22m2s | Configuration [Web] changed by admin. |
| 2 | 21 | Notice | 2018-12-21 19:15:13 | 0d0h21m47s | Configuration [Web] changed by admin. |
| 3 | 21 | Notice | 2018-12-21 18:55:50 | 0d0h2m24s | [Account:admin] successfully logged in via local. |
| 4 | 21 | Critical | 2018-12-21 18:54:18 | 0d0h0m52s | System has performed a cold start. |
| 5 | 21 | Notice | 2018-12-21 18:54:01 | 0d0h0m35s | Interface vlan1 up. |
| 6 | 21 | Notice | 2018-12-21 18:54:01 | 0d0h0m35s | Port 2/1 link up. |
| 7 | 21 | Warning | 2018-12-21 18:53:57 | 0d0h0m31s | The PTP sync status has changed from DISABLED to FREERUN. |
| 8 | 20 | Notice | 2018-12-21 21:23:34 | 0d2h30m8s | Interface vlan1 down. |

Editing Oversize Action

To edit the event log oversize-action, click the **Oversize-Action** tab.

Configure the following settings when the event log file is full.

Oversize-Action

| Setting | Description | Factory Default |
|--------------------------------|------------------------------------|--------------------------------|
| Overwrite the oldest event log | Overwrite the oldest event log. | Overwrite the oldest event log |
| Stop recording event log | Disable Port Mirror for this port. | |

Capacity Warning

| Setting | Description | Factory Default |
|----------|-------------------------------------|-----------------|
| Enabled | Enable capacity warning event log. | Disabled |
| Disabled | Disable capacity warning event log. | |

Warning Threshold (%)

| Setting | Description | Factory Default |
|-----------|--|-----------------|
| 50 to 100 | Set the warning threshold as a percentage. | 80 |

Click **APPLY** to save your changes.

Backing Up Event Logs

Click the **Backup** tab first.

There are four ways to back up your event log files: from a local location of your computer, by remote SFTP server, by remote TFTP server, or by a USB tool.

Local

Select **Local** from the drop-down list under **Method**. Click **BACKUP**, which will save the event log files to your local computer.

TFTP Server

Select **TFTP** from the drop-down list under **Method**.

Server IP Address

| Setting | Description | Factory Default |
|---|--|-----------------|
| Input the IP address of the TFTP server | Users can input the IP address of the TFTP server. | None |

File Name

| Setting | Description | Factory Default |
|---|---|-----------------|
| Input the backup file name (supports up to 54 characters, including the .ini file extension). | Users can input the file name to back up the event log files. | None |

When finished, click **BACKUP** to back up the event log files.

SFTP Server

Select **SFTP** from the drop-down list of **Method**.

Server IP Address

| Setting | Description | Factory Default |
|---|--|-----------------|
| Input the IP address of the SFTP server | Input the IP address of the SFTP server where the event log files will be saved. | None |

File Name

| Setting | Description | Factory Default |
|--|--|-----------------|
| Input the backup file name (support up to 54 characters, including the .ini file extension). | Input the file name of the event log files | None |

Account

| Setting | Description | Factory Default |
|--------------------------------------|---|-----------------|
| Input the account of the SFTP server | An account must be provided to authorize the SFTP server for secure connection. | None |


Password

| Setting | Description | Factory Default |
|---|---|-----------------|
| Input the passwords for the SFTP server | The password has to be specified in order to authorize the SFTP Server for secure connection. | None |

When finished, click **BACKUP** to back up the event log files.

USB

Select **USB** from the drop-down list under **Method**.

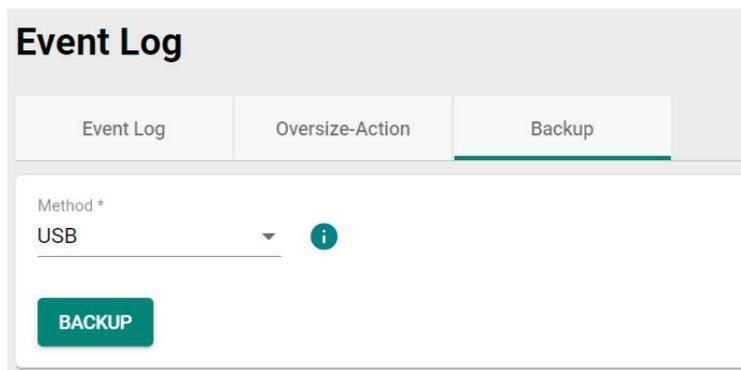

The screenshot shows a web interface for configuring event logs. At the top, there are three tabs: 'Event Log', 'Oversize-Action', and 'Backup'. The 'Event Log' tab is active. Below the tabs, there is a 'Method *' dropdown menu with 'USB' selected. To the right of the dropdown is an information icon (i). Below the dropdown is a green 'BACKUP' button.

Insert a Moxa's ABC-02 USB-based configuration tool onto the USB port of the switch, click **BACKUP** to back up the event log files.



Note

If you have difficulty using the ABC-02 configuration tool, check if **USB Function** has been enabled in **Hardware Interface** section.

Auto Backup of Event Logs

To enable automatic backup, select **Enabled** from the drop-down list. Click **APPLY** to back up the event log files automatically.

Auto Backup of Event Logs

Automatically Back Up *

Enabled 

APPLY

Event Notification

There are two functions within Event Notification: **System and Function**, and **Port**.

In the **Event Notification** menu, click the **System and Function** tab, and then click the  icon on the specific event you want to configure. For example, select the  icon for warm start when the switch reboots.

| Event Notification | | | | | |
|---|------------|------------------------|----------|-------------------|-------------|
| System and Function | | Port | | | |
| Group | Event Name | Enabled | Severity | Registered Action | |
|  | General | Warm start | Enabled | Notice | Trap, Email |
|  | General | Password changed | Enabled | Notice | Trap, Email |
|  | General | Login success | Enabled | Notice | Trap, Email |
|  | General | Configuration changed | Enabled | Notice | Trap, Email |
|  | General | Configuration imported | Enabled | Notice | Trap, Email |

Configure the following settings.

Edit Event Notification

Event Name
Cold start
.....

Enabled *
Enabled ▼

Registered Action
Trap, Email ▼

CANCEL
APPLY

Enable

| Setting | Description | Factory Default |
|----------|--|-----------------|
| Enabled | Enable Event Notification for this event. | Enabled |
| Disabled | Disable Event Notification for this event. | |

Registered Action

| Setting | Description | Factory Default |
|------------|---|-----------------|
| Trap | Send SNMP Trap for event notifications. | Trap/Email |
| Email | Send an email for event notifications. | |
| MGMT Relay | Trigger MGMT Relay for event notifications. | |
| PWR1 Relay | Trigger PWR1 Relay for event notifications. | |
| PWR2 Relay | Trigger PWR2 Relay for event notifications. | |

When finished, click **APPLY** to save your changes.

In addition, use the same method to edit other events, such as login lockout, warm start, password changed, etc.

Next, in the **Event Notification** menu, click the **Port** tab, and then click the  icon on the specific port status on Event Name. For example, select the  icon for event notifications when the port status is on.

Event Notification

System and Function

Port

| | Event Name | Enable | Severity | Registered Action |
|--|--------------------------------|---------|----------|-------------------|
|  | Port On | Enabled | Notice | Trap, Email |
|  | Port Off | Enabled | Notice | Trap, Email |
|  | Port shutdown by Port Security | Enabled | Warning | Trap, Email |
|  | Port shutdown by Rate Limit | Enabled | Warning | Trap, Email |
|  | Port recovery by Rate Limit | Enabled | Warning | Trap, Email |

Configure the following settings.

Edit Event Notification

Event Name
Port On
.....

Enabled *
Enabled ▼

Registered Action
Trap, Email ▼

Registered Port
All Ports ▼

CANCEL
APPLY

Event Name

| Setting | Description | Factory Default |
|------------|--|-------------------------|
| Event name | Show the event name of the port. (read only) | Event name of each port |

Enable

| Setting | Description | Factory Default |
|----------|--|-----------------|
| Enabled | Enable Event Notification for this event. | Enabled |
| Disabled | Disable Event Notification for this event. | |

Registered Action

| Setting | Description | Factory Default |
|------------|---|-----------------|
| Trap | Send SNMP Trap for event notifications. | Trap/Email |
| Email | Send an email for event notifications. | |
| MGMT Relay | Trigger MGMT Relay for event notifications. | |
| PWR1 Relay | Trigger PWR1 Relay for event notifications. | |
| PWR2 Relay | Trigger PWR2 Relay for event notifications. | |

Registered Port

| Setting | Description | Factory Default |
|--|---|-----------------|
| Select port(s) from the drop-down list | Specify the port(s) that use the registered action. | All Ports |

When finished, click **APPLY** to save your changes.

In addition, use the same method to edit other events such as, port status is off, port shutdown by port security, and port recovery by rate limit, etc.

Check the following table for the severity degree of each event.

| Event Name | Severity |
|--|----------|
| 802.1X Auth Failed | Warning |
| ABC-02 is inserted or unplugged | Notice |
| ABC-03 is inserted or unplugged | Notice |
| Account log out | Notice |
| Account removed | Notice |
| Account settings changed | Notice |
| Announce message with different interval | Warning |
| Announce timeout | Warning |
| Check if hardware revision is valid | Notice |
| Check if it is a known power module | Warning |
| Cold start | Critical |

| Event Name | Severity |
|--|----------|
| Configuration changed | Notice |
| Configuration exported | Notice |
| Configuration imported | Notice |
| Coupling changed | Warning |
| dhcpsnp untrust mac discards | Warning |
| dhcpsnp untrust server discards | Warning |
| DI off | Notice |
| DI on | Notice |
| Dual homing path changed | Warning |
| Event log export | Notice |
| Firmware upgrade failed | Warning |
| Firmware upgrade successful | Notice |
| Grand Master changed | Warning |
| Hardware revision is not allowed | Error |
| Interface link down | Notice |
| Interface link up | Notice |
| LLDP table changed | Info |
| Log capacity threshold | Warning |
| Log Turbo Chain Port Restart | Notice |
| Login failed | Warning |
| Login lockout | Warning |
| Login successful | Notice |
| Low input voltage | Warning |
| Master changed | Warning |
| Master mismatch | Warning |
| module change | Notice |
| Module Initialized Fail | Error |
| Module inserted | Notice |
| Module removed | Notice |
| MSTP new port role | Warning |
| MSTP root changed | Warning |
| MSTP topology changed | Warning |
| OSPF DR router adjacency changed | Notice |
| OSPF interface DR changed | Notice |
| OSPF interface ISM became DR | Notice |
| Over power budget limit | Warning |
| Packet dropped by Port Security | Warning |
| Password changed | Notice |
| PD no response | Error |
| PD over-current | Error |
| PD power off | Notice |
| PD power on | Notice |
| Port Link Down | Notice |
| Port Link Up | Notice |
| Port recovery by Rate Limit | Warning |
| Port shutdown by Loop | Critical |
| Port shutdown by Port Security | Warning |
| Port shutdown by Rate Limit | Warning |
| Port state change | Info |
| Power detection failure | Warning |
| Power module inserted | Notice |
| Power module removed | Notice |
| Power Off->On | Notice |
| Power On->Off | Notice |
| PTP message with the wrong domain number | Warning |
| Redundant port health check failed | Error |
| Relay Override message | Notice |
| Relay Triggered message | Notice |

| Event Name | Severity |
|--|----------|
| RMON failing alarm | Warning |
| RMON raising alarm | Warning |
| RSTP invalid BPDU | Warning |
| RSTP migration | Warning |
| RSTP new port role | Warning |
| RSTP root changed | Warning |
| RSTP topology changed | Warning |
| Send message failed | Warning |
| SSH Key generated | Notice |
| SSL certification changed | Notice |
| Sync status changed | Warning |
| Topology changed (RSTP) | Warning |
| Topology changed (Turbo Chain) | Warning |
| Topology changed (Turbo Ring) | Warning |
| Topology changed (MSTP) | Warning |
| Unknown module | Warning |
| VRRP Master changed | Warning |
| Warm start | Notice |
| When the trust host moves, it will send a log to Moxa log handler. | Warning |

Syslog

General Settings

Click **Syslog** on the function menu and configure the following settings.

Syslog

- General
- Authentication

Syslog *
Disabled

Syslog Server 1 * Authentication *
Disabled Disabled

Address 1 UDP Port
514
1 - 65535

Syslog Server 2 * Authentication *
Disabled Disabled

Address 2 UDP Port
514
1 - 65535

Syslog Server 3 * Authentication *
Disabled Disabled

Address 3 UDP Port
514
1 - 65535

APPLY

Logging Enable

| Setting | Description | Factory Default |
|----------|------------------|-----------------|
| Enabled | Enable logging. | Disabled |
| Disabled | Disable logging. | |

Syslog Server 1

| Setting | Description | Factory Default |
|----------|-----------------------------|-----------------|
| Enabled | Enable the 1st log server. | Disabled |
| Disabled | Disable the 1st log server. | |

Address 1

| Setting | Description | Factory Default |
|------------|---|-----------------|
| IP Address | Input the IP address of the Syslog 1st server that is used by your network. | None |

UDP Port

| Setting | Description | Factory Default |
|------------|----------------------------|-----------------|
| 1 to 65535 | Input the UDP port number. | 514 |

Syslog Server 2

| Setting | Description | Factory Default |
|----------|--------------------------------|-----------------|
| Enabled | Enable the 2nd syslog server. | Disabled |
| Disabled | Disable the 2nd syslog server. | |

Address 2

| Setting | Description | Factory Default |
|------------|---|-----------------|
| IP Address | Input the IP address of Syslog 2nd server that is used by your network. | None |

UDP Port

| Setting | Description | Factory Default |
|------------|----------------------------|-----------------|
| 1 to 65535 | Input the UDP port number. | 514 |

Syslog Server 3

| Setting | Description | Factory Default |
|----------|--------------------------------|-----------------|
| Enabled | Enable the 3rd syslog server. | Disabled |
| Disabled | Disable the 3rd syslog server. | |

Address 3

| Setting | Description | Factory Default |
|------------|---|-----------------|
| IP Address | Input the IP address of the Syslog 3rd server that is used by your network. | None |

UDP Port

| Setting | Description | Factory Default |
|------------|----------------------------|-----------------|
| 1 to 65535 | Input the UDP port number. | 514 |


When finished, click **APPLY** to save your changes.



NOTE

If the syslog server cannot receive the previous logs, it is possible that the receiving port of the syslog server is not ready. We suggest you enable the Linkup Delay function to delay the log delivery time.

Click **Authentication** tab and the  icon the function menu.

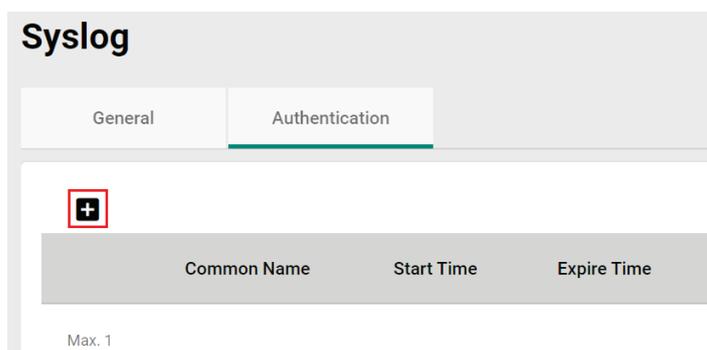

Configure the following settings.

Add Certificate and Key

Client Certificate * 

Client Key * 

CA Key * 

Client Certificate

| Setting | Description | Factory Default |
|--|-------------------------------------|-----------------|
| Click the  icon and select the file from your computer. | Import the client certificate file. | None |

Client Key

| Setting | Description | Factory Default |
|--|-----------------------------|-----------------|
| Click the  icon and select the file from your computer. | Import the client key file. | None |

CA Key


| Setting | Description | Factory Default |
|--|-------------------------|-----------------|
| Click the  icon and select the file from your computer. | Import the CA key file. | None |

When finished, click **CREATE** to save your changes.

SNMP Trap/Inform

SNMP Trap Host Settings

SNMP Trap allows an SNMP agent to notify the NMS of a significant event. The switch supports two SNMP modes: **Trap** mode and **Inform** mode. Click **SNMP Trap/Inform** on the menu, and then select the  icon on the page.

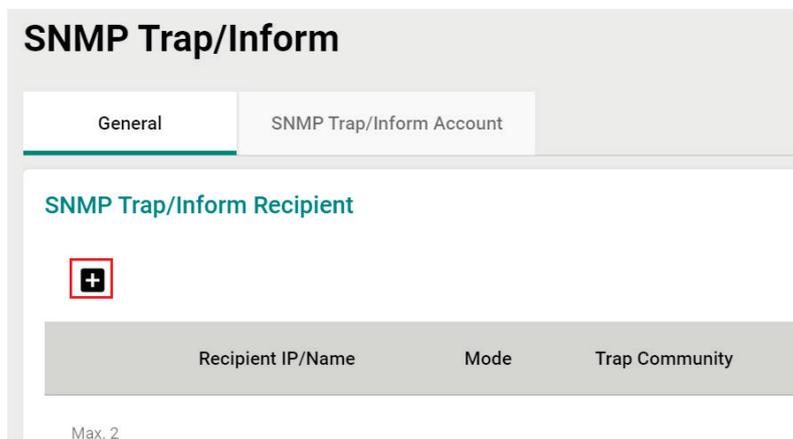

Configure the following settings.

Create Host Settings

Recipient IP/Name *
0 / 32

Mode *
▼

Trap Community *
At least 4 characters 0 / 32

Recipient IP/Name

| Setting | Description | Factory Default |
|--|---|-----------------|
| Input a recipient IP or name, (max. 32 characters) | Specify the name of the primary trap server used by your network. | None |

Mode

| Setting | Description | Factory Default |
|------------|---------------------------------------|-----------------|
| Trap V1 | Set the trap version to Trap V1. | None |
| Trap V2c | Set the trap version to Trap v2c. | |
| Inform V2c | Set the inform version to Inform V2c. | |
| Trap V3 | Set the trap version to Trap V3. | |
| Inform V3 | Set the inform version to Inform V3. | |


Trap Community

| Setting | Description | Factory Default |
|---|--|-----------------|
| At least 4 characters, (max. 30 characters) | Specify the community string that will be used for authentication. | None |


When finished, click **CREATE**.

SNMP Trap Account Settings

Click **SNMP Trap/Inform** on the menu, and then click **SNMP Trap/Inform Account** tab. Next click the  icon on the page.

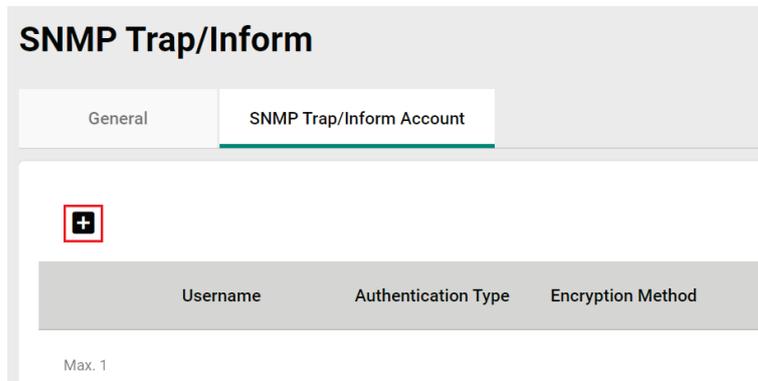

Configure the following settings.

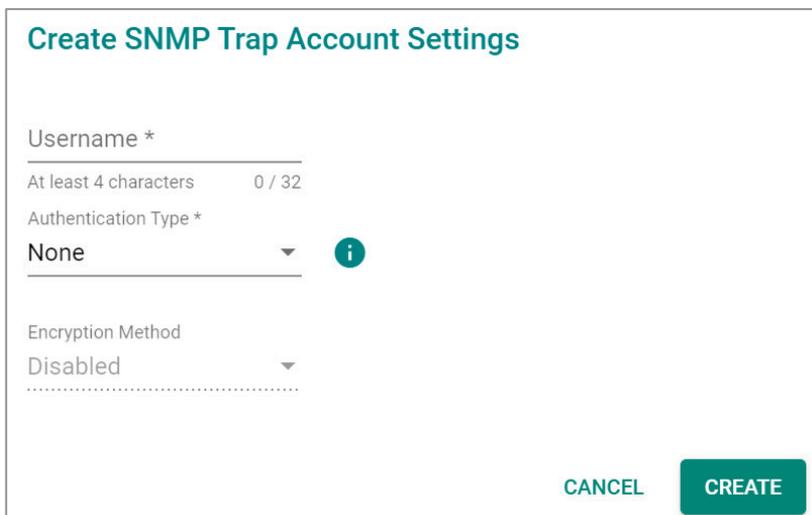

Username

| Setting | Description | Factory Default |
|---|-------------------|-----------------|
| At least 4 characters, (max. 30 characters) | Input a username. | None |

Authentication type

| Setting | Description | Factory Default |
|---------|--------------------------------------|-----------------|
| None | No authentication type will be used. | None |
| MD5 | MD5 is the authentication type. | |
| SHA | SHA is the authentication type. | |

Authentication Password

| Setting | Description | Factory Default |
|--------------------|------------------------------------|-----------------|
| 8 to 64 characters | Input the authentication password. | None |

Encryption Method

| Setting | Description | Factory Default |
|----------|--------------------------------|-----------------|
| Disabled | Disable the encryption method. | None |
| DES | DES is the encryption method. | |
| AES | AES is the encryption method. | |

Encryption Key

| Setting | Description | Factory Default |
|--------------------|-------------------------|-----------------|
| 8 to 64 characters | Enable data encryption. | None |

When finished, click **CREATE**.

SNMP Inform Settings

First select **SNMP Trap/Inform** on the menu and then click **General**. On the bottom of the page, find the following figure for the settings.

SNMP Inform Settings

Inform Retry *
3
1 - 99 times

Inform Timeout *
10
1 - 300 sec.

APPLY

Configure the following settings.

Inform Retry

| Setting | Description | Factory Default |
|---------|------------------------|-----------------|
| 1 to 99 | Input the retry value. | 3 |

Inform Timeout

| Setting | Description | Factory Default |
|----------|--------------------------|-----------------|
| 1 to 300 | Input the timeout value. | 10 |

When finished, click **APPLY** to save your changes.

Email Settings

Select **Email Settings** on the function menu and configure the following settings.

Email Settings

Mail Server *
0.0.0.0

TCP Port *
25
1 - 65535

Username Password

0 / 60 0 / 60

TLS Enable *
Disabled ▼

Sender Address
admin@localhost.com
19 / 63

1st Recipient Email Ad... 2nd Recipient Email Ad... 3rd Recipient Email Ad...

0 / 63 0 / 63 0 / 63

4th Recipient Email Ad... 5th Recipient Email Ad...

0 / 63 0 / 63

APPLY

Mail Server

| Setting | Description | Factory Default |
|-------------------|--|-----------------|
| IP address or URL | The IP Address or URL of the email server. | 0.0.0.0 |

TCP Port

| Setting | Description | Factory Default |
|------------|---|-----------------|
| 1 to 65535 | The TCP port number of your email server. | 25 |

Username

| Setting | Description | Factory Default |
|--------------------|--------------------------|-----------------|
| Max. 60 characters | Your email account name. | None |

Password

| Setting | Description | Factory Default |
|--------------------|------------------------------|-----------------|
| Max. 60 characters | Your email account password. | None |

TLS Enable

| Setting | Description | Factory Default |
|----------|---|-----------------|
| Enabled | Enable TLS (Transport Layer Security). | Disabled |
| Disabled | Disable TLS (Transport Layer Security). | |

Sender Address

| Setting | Description | Factory Default |
|--------------------|-----------------------------|---------------------|
| Max. 60 characters | The sender's email address. | admin@localhost.com |

1st to 5th Email Addresses

| Setting | Description | Factory Default |
|--------------------|--|-----------------|
| Max. 63 characters | You can set up to five email addresses to receive alert emails from the Moxa switch. | None |

When finished, click **APPLY** to save your changes.

Relay Output Overview

A relay is an electrically operated switch that often uses an electromagnet to mechanically operate a switch. Relays are used to control a circuit by a separate low-power signal, or where several circuits must be controlled by one signal. This is typically safe when the problem or malfunction occurs in a remote device.

Moxa's switches offer three sets of relay outputs, one on the mainboard and two on the power modules, providing the secured protection of the remote switch and secure data communication. In addition, email notifications can also be sent to inform system administrators to perform further checks and maintenance.

Relay Output Settings and Status

To select Relay Output as the event notifications, click **Relay Output** on the function menu.

Relay Alarm Cut-off

MGMT Relay

PWR1 Relay

PWR2 Relay

APPLY

Relay Output

| Setting | Description | Factory Default |
|------------|---|-----------------|
| MGMT Relay | Trigger MGMT Relay for event notifications. | None |
| PWR1 Relay | Trigger PWR1 Relay for event notifications. | |
| PWR2 Relay | Trigger PWR2 Relay for event notifications. | |

When finished, click **APPLY** to save your changes.

Go to the **Event Log** section, you can view the relay alarms you have selected to be cut off.

Event Log


Event Log Oversize-Action Backup

🔄 🗑️ 📄

| Index | Bootup Number | Severity | Timestamp | Uptime | Message |
|-------|---------------|----------|---------------------|-----------|--|
| 1 | 23 | Notice | 2018-12-21 18:56:56 | 0d0h3m30s | PWR1 Relay relay alarm has been cut off. |
| 2 | 23 | Notice | 2018-12-21 18:56:55 | 0d0h3m30s | PWR2 Relay relay alarm has been cut off. |
| 3 | 23 | Notice | 2018-12-21 18:56:55 | 0d0h3m30s | MGMT Relay relay alarm has been cut off. |

Diagnosis


This section explains the configurations for system diagnoses such as **LLDP**, **Port Mirror**, **Ping**, and **ARP Table**.

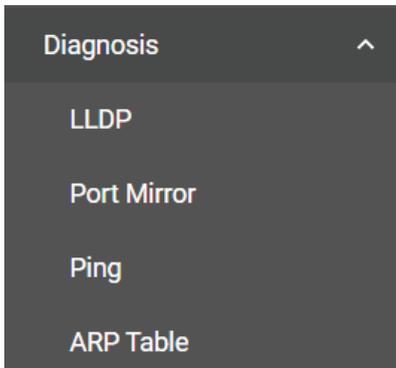

LLDP Overview

LLDP is an OSI Layer 2 protocol defined by IEEE 802.11AB. LLDP standardizes the self-identification advertisement method, and allows each networking device, such as a Moxa managed switch, to periodically send its system and configuration information to its neighbors. Because of this, all LLDP devices are kept informed of each other's status and configurations. With SNMP, this information can be transferred to Moxa's MXview for auto-topology and network visualization.

From the switch's web interface, you can enable or disable LLDP, and set the LLDP transmit interval. In addition, you can view each switch's neighbor-list, which is reported by its network neighbors. Most importantly, enabling the LLDP function allows Moxa's MXview to automatically display the network's topology and system setup details, such as VLAN and Trunking for the entire network.

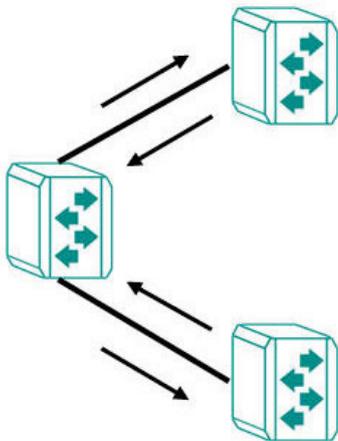

LLDP Settings and Status

Click **LLDP** on the menu and then select the **Setting** tab to configure the following settings.

LLDP

Settings
Status

Enable *
Enabled ▼

LLDP Version *
2005 ▼

Transmit Interval *
30

5 - 32768 sec.

Notification Interval *
5

5 - 3600 sec.

Tx Delay *
2

1 - 8192 sec.

Reinitialization Delay *
2

1 - 10 sec.

Holdtime Multiplier *
4

2 - 10 times

Chassis ID Subtype *
MAC-Addr ▼

APPLY

Enable

| Setting | Description | Factory Default |
|----------|---------------|-----------------|
| Enabled | Enable LLDP. | Disabled |
| Disabled | Disable LLDP. | |

LLDP Version

| Setting | Description | Factory Default |
|-----------------------|--------------------------------------|-----------------|
| Show the LLDP version | Show the LLDP version automatically. | 2005 |

Transmit Interval (sec.)

| Setting | Description | Factory Default |
|------------|--|-----------------|
| 5 to 32768 | Set the transmit interval of LLDP messages | 30 |

Notification Interval (sec.)

| Setting | Description | Factory Default |
|-----------|------------------------------------|-----------------|
| 5 to 3600 | Specify the notification interval. | 5 |

Tx Delay (sec.)

| Setting | Description | Factory Default |
|-----------|--------------------------------|-----------------|
| 1 to 8192 | Specify the Tx delay interval. | 2 |

Reinitialization Delay (sec.)

| Setting | Description | Factory Default |
|---------|---|-----------------|
| 1 to 10 | Specify the LLDP reinitialization delay interval. | 2 |

Holdtime Multiplier

| Setting | Description | Factory Default |
|---------|--|-----------------|
| 2 to 10 | Specify the holdtime multiplier value. | 4 |

Chassis ID Subtype

| Setting | Description | Factory Default |
|-------------------|---|-----------------|
| Chassis-Component | Select Chassis-Component as Chassis ID subtype. | Mac-Addr |
| If-Alias | Select If-Alias as Chassis ID subtype. | |
| Port-Component | Select Port-Component as Chassis ID subtype. | |
| MAC-Addr | Select MAC-Address as Chassis ID subtype. | |
| Network Address | Select Network Address as Chassis ID subtype. | |
| If-Name | Select If-Name as Chassis ID subtype. | |
| Local | Select Local as Chassis ID subtype. | |

When finished, click **APPLY** to save your changes.

Each port for the LLDP settings can also be configured. Select the  icon for the port you want to configure.

| Port | Port Status |
|---|-------------|
|  1/1 | Tx and Rx |
|  1/2 | Tx and Rx |
|  1/3 | Tx and Rx |
|  1/4 | Tx and Rx |

Configure the following settings.

Edit Port 1/1 Settings

Port Status *
Tx and Rx ▼

Subtype *
If-Alias ▼

TLV *
Basic ▼

Transmit TLVs

Port Description

System Name

System Description

System Capability

Copy Configurations ... ▼ 

CANCEL APPLY

Port Status

| Setting | Description | Factory Default |
|-----------|--|-----------------|
| Tx Only | Set Tx as the port status. | Tx and Rx |
| Rx Only | Set Rx as the port status. | |
| Tx and Rx | Set both Tx and Rx as the port status. | |

Subtype

| Setting | Description | Factory Default |
|----------------|---------------------------------------|-----------------|
| If-Alias | Select If-Alias as the subtype. | If-Alias |
| Port-Component | Select Port-Component as the subtype. | |
| MAC-Addr | Select MAC-Address as the subtype. | |
| If-Name | Select If-Name as the subtype. | |
| Local | Select Local as the subtype. | |

TLV

| Setting | Description | Factory Default |
|---------|-------------------|-----------------|
| Basic | Set TLV as Basic. | Basic |
| 802.1 | Set TLV as 802.1. | |
| 802.3 | Set TLV as 802.3. | |

Transmit TLVs

| Setting | Description | Factory Default |
|--------------------|---------------------------------------|---------------------------------|
| Port Description | Add a port description for the TLV. | Port Description System Name |
| System Name | Add a system name for the TLV. | |
| System Description | Add a system description for the TLV. | |
| System Capability | Add a system capability for the TLV. | |

Copy Configurations to Port

| Setting | Description | Factory Default |
|-------------------------------|--|-----------------|
| Select the port from the list | Copy the same configurations to other port(s). | None |

When finished, click **APPLY** to save your changes.

To view the LLDP status, click the **Status** tab on the LLDP page, and the status of all LLDP will be shown on the page.

LLDP

Setting **Status**

Local Information

Enable
Enabled

LLDP Version
v1(2005)

Chassis Id Subtype
MAC-Addr

Chassis ID
00:01:02:03:04:05

Local Timer

Transmit Interval
30 (sec)

Notification Interval
5 (sec)

Tx Delay
2 (sec)

Reinitialization Delay
2 (sec)

Holdtime Multiplier
4 (x)

Remote Table Statistics

Last Change Time (ms)
1300

Inserts
1

Drops
0

Delete
0

Ageouts
0

Refer to the following table for the detailed description of each item.

| Local Information | |
|--------------------|--|
| Enable | Show if LLDP has been enabled or disabled. |
| LLDP Version | Show the LLDP version. |
| Chassis ID Subtype | Show the chassis ID subtype. |
| Chassis ID | Show the chassis ID. |

| Local Timer | |
|-------------------------------|---|
| Transmit Interval (sec.) | The interval between regular LLDP packet transmissions. |
| Notification Interval (sec.) | The interval that notifications will be sent. |
| Tx Delay (sec.) | The delay period between successive LLDP frame transmissions initiated by changes. |
| Reinitialization Delay (sec.) | The interval an LLDP port waits before re-initializing an LLDP packet transmission. |
| Holdtime Multiplier | The amount of time that the receiving device holds an LLDP packet before discarding it. |

| Remote Table Statistics | |
|-------------------------|---|
| Last Change Time (ms.) | The last time the remote table changed. |
| Inserts | How many inserts have occurred. |
| Drop | How many drops have occurred. |
| Delete | How many deletes have occurred. |
| Ageouts | How many ageouts have occurred. |

To view the LLDP status for a specific port, click the detailed information icon on the port. All information will be shown on the right side of the page.

| Port | Tx Status | Rx Status | Nbr. Port ID | Nbr. Chassis ID | |
|---|-----------|-----------|-------------------|-------------------|---|
|  1/1 | Enabled | Enabled | 28:d2:44:5e:8b:40 | 28:d2:44:5e:8b:40 | <div style="border: 1px solid red; padding: 5px;"> <p style="text-align: center; background-color: #008080; color: white; margin: 0;">Detail Information</p> <hr/> <p style="margin: 0;">Port Local Interface</p> <p style="margin: 0;">Port ID SubType Chassis-Component</p> <hr/> <p style="margin: 0;">Port ID Eth1/1</p> <hr/> <p style="margin: 0;">Port Description Ethernet Interface Port 01</p> <hr/> <p style="margin: 0; background-color: #e0f0ff;">Extended 802.1 TLV</p> <hr/> <p style="margin: 0;">Port VLAN ID 1</p> <hr/> <p style="margin: 0;">VLAN ID / Name 1 / factory</p> <hr/> <p style="margin: 0; background-color: #e0f0ff;">Extended 802.3 TLV</p> <hr/> <p style="margin: 0;">Aggregated and Status Disabled</p> <hr/> <p style="margin: 0;">Aggregated Port Id 0</p> <hr/> <p style="margin: 0;">Maximum Frame Size 1522</p> </div> |
|  1/2 | Enabled | Enabled | | | |
|  1/3 | Enabled | Enabled | | | |
|  1/4 | Enabled | Enabled | | | |
|  2/1 | Enabled | Enabled | | | |
|  2/2 | Enabled | Enabled | | | |
|  2/3 | Enabled | Enabled | | | |
|  2/4 | Enabled | Enabled | | | |
|  3/1 | Enabled | Enabled | | | |
|  3/2 | Enabled | Enabled | | | |
|  3/3 | Enabled | Enabled | | | |
|  3/4 | Enabled | Enabled | | | |
|  4/1 | Enabled | Enabled | | | |

Port Mirroring

Port Mirroring Overview

The **Port Mirroring** function can be used to monitor data being transmitted through a specific port. This is done by setting up another port (the mirror port) to receive the same data being transmitted from, or both to and from, the port under observation. Using a mirror port allows the network administrator to sniff the observed port to keep tabs on network activity.




NOTE

The MDS-G4000 Series allows up to five many-to-many port mirroring sessions. Please note the mirrored and mirroring port cannot be duplicated on each session.

How Port Mirror Works

Port Mirroring can configure to copy one or more packets from various ports to a single port, so that users can check if there are problems occurring in these ports. For example, the following figure demonstrates how the packets transmitted in the four mirrored ports (marked in orange) are copied (mirrored) to a single mirroring port (marked in green). These packets will be sent to a monitoring computer and then software is used to check if there is something wrong with these packets. It is a useful function to troubleshoot or debug a network data transmission issue.

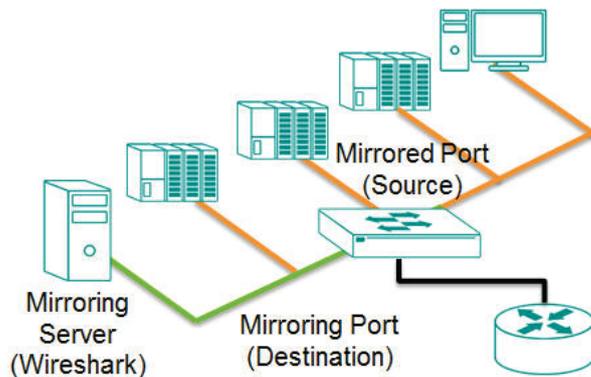

Port Mirror Settings and Status

Click **Port Mirror** on the menu and then configure the settings.

Port Mirror

Port Mirror *
Enabled

APPLY

Port Mirror

| Setting | Description | Factory Default |
|----------|----------------------|-----------------|
| Enabled | Enable Port Mirror. | Enabled |
| Disabled | Disable Port Mirror. | |

When finished, click **APPLY** to save your changes.

To configure the specific port, click the  icon next to the port.

| | Session ID | Enable | Tx Source Port |
|---|------------|----------|----------------|
|  | 1 | Disabled | |
|  | 2 | Disabled | |
|  | 3 | Disabled | |
|  | 4 | Disabled | |
|  | 5 | Disabled | |



NOTE

A maximum of five port mirroring many-to-many port combinations can be enabled for each session.

Configure the following settings.

Edit Session 1 Settings

Port Mirror *
 Disabled ▼

Tx Source Port ▼

Rx Source Port ▼

Destination Port * ▼

CANCEL
APPLY

Port Mirror

| Setting | Description | Factory Default |
|----------|---------------------------------------|-----------------|
| Enabled | Enable Port Mirror for this session. | Disabled |
| Disabled | Disable Port Mirror for this session. | |

Tx Source Port

| Setting | Description | Factory Default |
|-------------------------------|---|-----------------|
| Select the port from the list | Select this option to monitor only those data packets being sent out through the switch's port. | None |

Rx Source Port

| Setting | Description | Factory Default |
|-------------------------------|--|-----------------|
| Select the port from the list | Select this option to monitor only those data packets coming into the switch's port. | None |

Destination Port

| Setting | Description | Factory Default |
|-------------------------------|--|-----------------|
| Select the port from the list | Specify this port as the destination port. | None |

When finished, click **APPLY** to save your changes.



NOTE

The RSTP ports and Port Mirror destination port cannot be enabled on the same port.

The Port Mirror status can be seen in the figure below.

| Edit | Session ID | Enable | Tx Source Port | Rx Source Port | Destination Port |
|------|------------|----------|----------------|----------------|------------------|
| | 1 | Enabled | 1/1 | 1/2 | 1/3 |
| | 2 | Disabled | | | |

Ping

The **Ping** function uses the ping command to give users a simple but powerful tool for troubleshooting network problems. The function most unique feature of the function is that even though the ping command is entered from the user's PC, the actual ping command originates from the Moxa switch itself. This allows the user to essentially sit on top of the Moxa switch and send ping commands out through its ports.

To use the Ping function, click **Ping** on the menu, and enter the IP address or domain name you want to ping. After clicking **Ping**, the result will be shown.

Ping

IP Address/Name *

ARP Table

To view the ARP Table, select **ARP Table** and the information will be displayed.


ARP Table

| Index | MAC Address | IP Address |
|-------|-------------------|----------------|
| 1 | 28:d2:44:5e:8b:40 | 192.168.127.99 |

Max 2000


Industrial Applications

This section introduces the settings for the MMS of the IEC 61850 standard. Click **MMS** in the function menu under **Industrial Application** and **IEC 61850**.

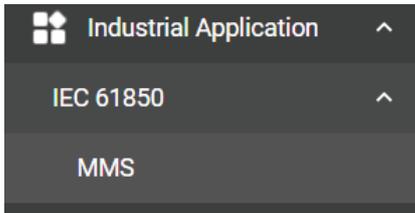

General Settings

Click the **General** tab for further configurations.

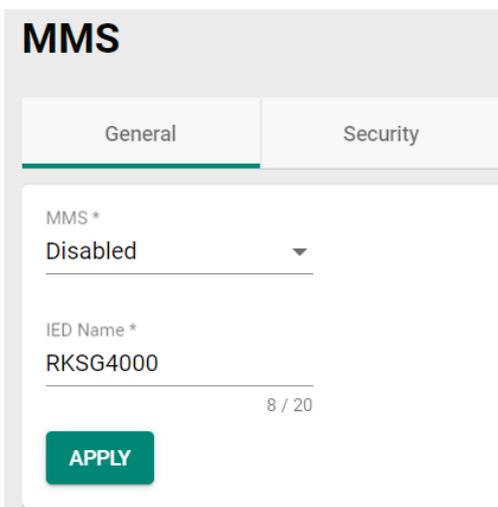A screenshot of the 'MMS' configuration page. The page has a title 'MMS' and two tabs: 'General' (selected) and 'Security'. Under the 'General' tab, there is a dropdown menu for 'MMS*' set to 'Disabled'. Below that is a text input field for 'IED Name*' containing 'RKSG4000' with a character count '8 / 20'. At the bottom left is a green 'APPLY' button.

Configure the following settings.

MMS

| Setting | Description | Factory Default |
|----------|-------------------------------------|-----------------|
| Enabled | Enable MMS function on the switch. | Disabled |
| Disabled | Disable MMS function on the switch. | |

IED Name

| Setting | Description | Factory Default |
|--------------------|---------------------------------------|--|
| 0 to 20 characters | Provide the IED name for your switch. | RKS-G4000 (Will vary depending on the switch models) |

When finished, click **APPLY** to save your changes.

CID File Settings

Click the edit icon  on the page.

| CID File Settings | |
|---|-------------|
| Report Control Block | Data Change |
|  urcbLnkSt | Enabled |
|  brcbLnkSt | Enabled |
|  urcbSysSt | Enabled |
|  brcbSysSt | Enabled |

Configure the following settings.

Edit urcbLnkSt

Data Change *
Enabled

Data Update *
Disabled

Quality Change *
Disabled

Integrity *
Enabled

Buffer Time *
1000
1 - 4294967295 ms

Integrity Period *
5000
1 - 4294967295 ms

Data Change

| Setting | Description | Factory Default |
|----------|-----------------------------------|-----------------|
| Enabled | Enable the Data Change function. | Enabled |
| Disabled | Disable the Data Change function. | |

Data Update

| Setting | Description | Factory Default |
|----------|-------------------------------|-----------------|
| Enabled | Enable Data Update function. | Disabled |
| Disabled | Disable Data Update function. | |

Quality Change

| Setting | Description | Factory Default |
|----------|--------------------------------------|-----------------|
| Enabled | Enable the Quality Change function. | Disabled |
| Disabled | Disable the Quality Change function. | |

Integrity

| Setting | Description | Factory Default |
|----------|---------------------------------|-----------------|
| Enabled | Enable the Integrity function. | Enabled |
| Disabled | Disable the Integrity function. | |

Buffer Time

| Setting | Description | Factory Default |
|----------------------|--------------------------------|-----------------|
| 1 to 4294967295 (ms) | Provide the buffer time value. | 1000 |

Integrity Period

| Setting | Description | Factory Default |
|----------------------|-------------------------------------|-----------------|
| 1 to 4294967295 (ms) | Provide the integrity period value. | 5000 |

When finished, click **APPLY** to save your changes.

Exporting CID File

To export the CID file, click **EXPORT CID FILE**.



The file will be downloaded to your local computer.

Security Settings

Click the **Security** tab, you can view the information for **T-Profile** and **A-Profile** Certificates.

MMS

General | **Security**

T-Profile Certificate Information

CA Name
moxa
Expired Date
2200-08-06 06:54:19

A-Profile Certificate Information

CA Name
moxa
Expired Date
2200-08-06 06:54:19

T-Profile Security

T-Profile Security *
Disabled

Import Client CA

Import Client Certificate

APPLY EXPORT SERVER CA EXPORT SERVER CERTIFICATE

T-Profile Security Settings

Configure the following settings for T-Profile Security.

T-Profile Security

T-Profile Security *

Disabled

Import Client CA

Import Client Certificate

T-Profile Security

| Setting | Description | Factory Default |
|----------|-----------------------------|-----------------|
| Enabled | Enable T-Profile Security. | Disabled |
| Disabled | Disable T-Profile Security. | |

Import Client CA

| Setting | Description | Factory Default |
|--|--|-----------------|
| Click the import icon <input type="button" value="📁"/> on the right. | Import Client CA file from your local computer | None |

Import Client Certificate

| Setting | Description | Factory Default |
|--|---|-----------------|
| Click the import icon <input type="button" value="📁"/> on the right. | Import Client Certificate file from your local computer | None |

When finished, click **APPLY** to complete.

Export Server CA

To export the Server CA, click **EXPORT SERVER CA**, the file will be downloaded to your local computer.

Export Server Certificate

To export the Server Certificate, click **EXPORT SERVER CERTIFICATE**, the file will be downloaded to your local computer.

A-Profile Security Settings

Configure the following settings for A-Profile Security.

A-Profile Security

A-Profile Security *

Disabled

Import Client CA

Import Client Certificate

A-Profile Security

| Setting | Description | Factory Default |
|----------|-----------------------------|-----------------|
| Enabled | Enable A-Profile Security. | Disabled |
| Disabled | Disable A-Profile Security. | |

Import Client CA

| Setting | Description | Factory Default |
|--|--|-----------------|
| Click the import icon <input type="button" value="Folder icon"/> on the right. | Import Client CA file from your local computer | None |

Import Client Certificate

| Setting | Description | Factory Default |
|--|---|-----------------|
| Click the import icon <input type="button" value="Folder icon"/> on the right. | Import Client Certificate file from your local computer | None |

When finished, click **APPLY** to complete.

Exporting Server CA


To export Server CA, click **EXPORT SERVER CA**, the file will be downloaded to your local computer.

Exporting Server Certificate

To export Server Certificate, click **EXPORT SERVER CERTIFICATE**, the file will be downloaded to your local computer.

Maintenance and Tools

This section explains how to maintain Moxa's switch and the tools that help users operate the switch. Click the icon on the upper right corner of the page.

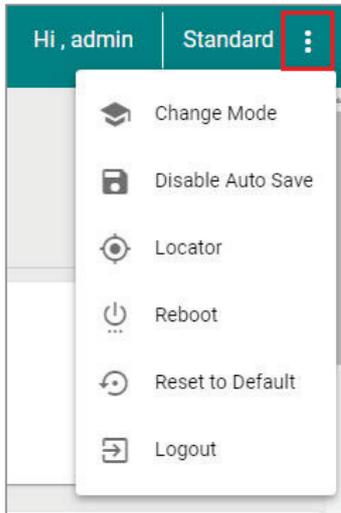


Standard/Advanced Mode


There are two configuration modes available for users: **Standard Mode** and **Advanced Mode**.

1. In **Standard Mode**, some of the features/parameters will be hidden to make it easier to perform configurations (this is the default setting).
2. In **Advanced Mode**, some advanced features/parameters will be available for users to adjust these settings.

To switch to Advanced Mode, click the change mode icon on the upper right corner of the page, and then select **Change Mode**.

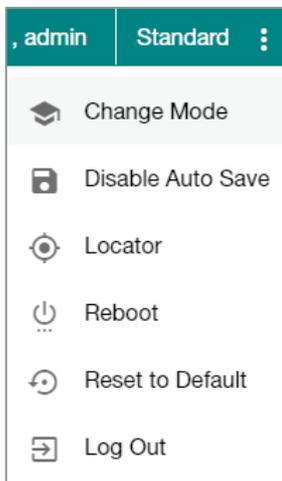


Click **CHANGE** to change to **Advanced Mode**.

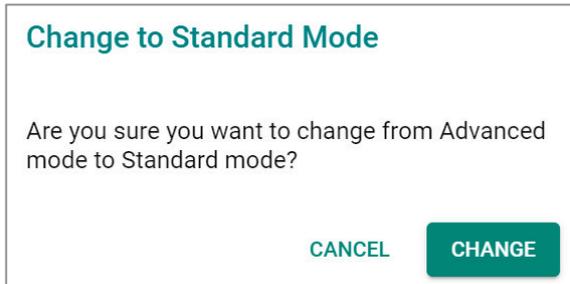

Advanced Mode offers more detailed system configurations for specific functions. Use the same process if you want to return to Standard Mode.

Disable Auto Save


Auto Save allows users to save the settings to the start-up configurations; all parameters will be effective when applied immediately, even when the switch has restarted. When users select **Disable Auto Save**, all parameters will be temporarily stored in the running config (memory), and a disk icon will appear on the upper right corner of the page. Users need to save the running-configuration to the startup-configuration when changing any parameters or function after clicking **Apply**.

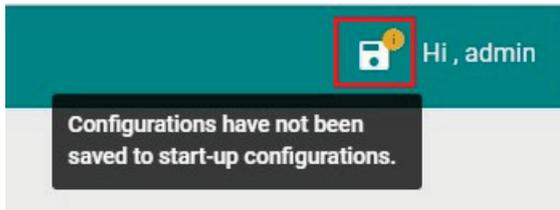

It is highly recommended that you always manually save all configurations by clicking Save Disk icon when **Disable Auto Save** is applied, or all information will have disappeared after the switch has restarted.

When **Disable Auto Save** is applied, only the configurations that are running will be saved; users can unplug the power or perform a warm start to recover the network before manually saving the configurations. When Auto Save is enabled, the start-up configurations will be saved in the switch.

To disable the **Auto Save** function, click **Disable Auto Save** in the menu.

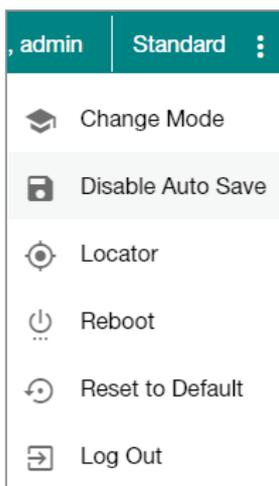

Click **Disable**.

Disable Auto Save Mode

Are you sure you want to disable auto save mode?

CANCEL **DISABLE**

Locator

Users can trigger the device locator by clicking this icon. This will cause the LED indicators on the switch to flash for one minute. This helps users easily find the location of the switch in a field site.

, admin | Standard

- Change Mode
- Disable Auto Save
- Locator**
- Reboot
- Reset to Default
- Log Out

Click **Locate** to finish.

Switch Locator

Duration *

60 ⓘ


30 - 300 sec.

CANCEL **LOCATE**

Duration (sec.)


| Setting | Description | Factory Default |
|-----------|---|-----------------|
| 30 to 300 | Specify the length of time the indicators will remain flashing. | 60 |

Click **Locate** to activate the switch locator. The LED indicators are located on the upper left corner of the switch as can be seen in the figure below.

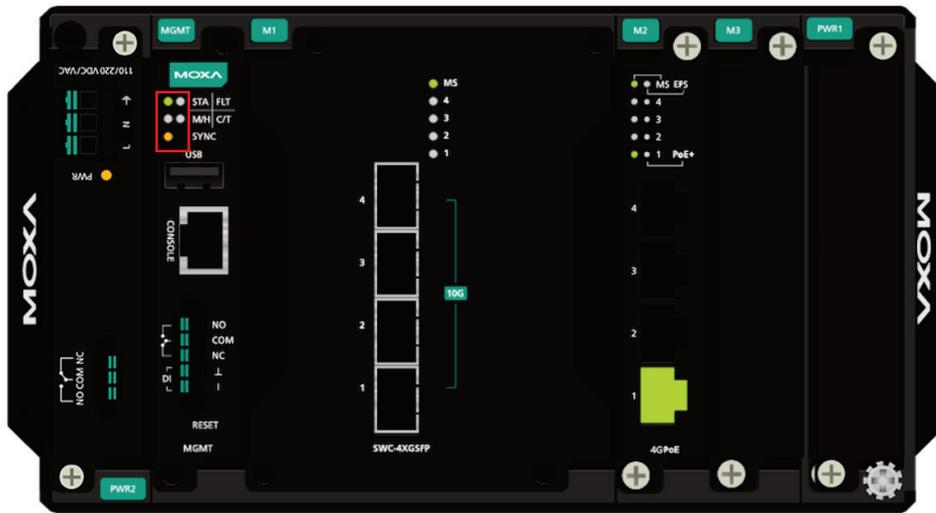


Reboot

To reboot the device, select **Reboot**.

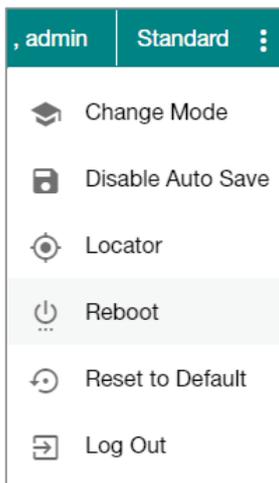


Click **REBOOT** to restart the device.

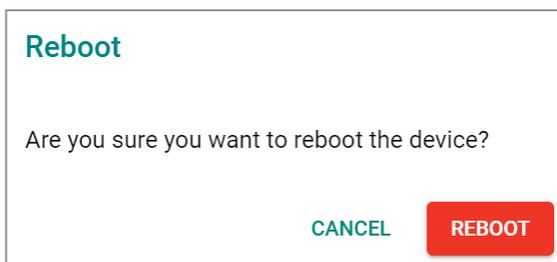


Reset to Default

To reset the switch to the default status, select **Reset to Default**.

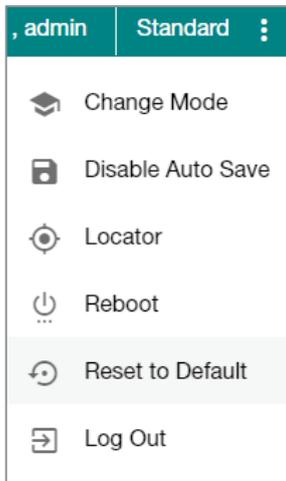


To return the switch to factory default settings, click **RESET**.

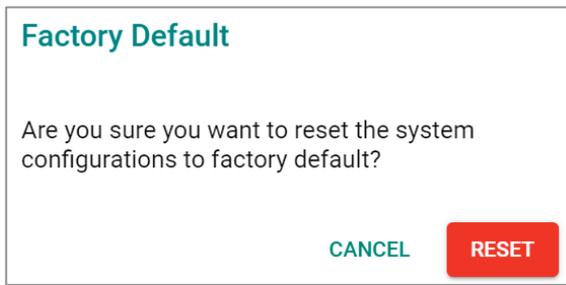


Log Out of the Switch

To log out of the switch, select **Log Out**.

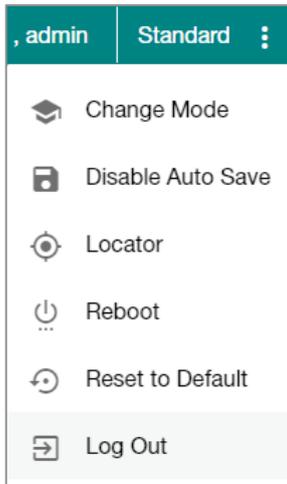

Click **LOG OUT** to log out of the switch.

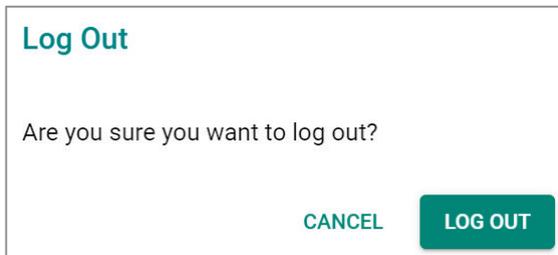

A. Account Privileges List

This appendix describes the read/write access privileges for different accounts on Moxa's Managed Ethernet Series switches.

Account Privileges List

This appendix lists the privileges for different account roles.

Please note, **R** stands for **Read** and **W** stands for **Write**.

| Function | Account Privilege | | |
|----------------------------------|-------------------|------------|-----------|
| | Admin | Supervisor | User |
| System | | | |
| Information Setting | R/W | R/W | R |
| Firmware Upgrade | Execute | No Access | No Access |
| Configuration Backup and Restore | Execute | Execute | No Access |
| Event log backup | Execute | Execute | Execute |
| User Account | R/W | No Access | No Access |
| Password Policy | R/W | No Access | No Access |
| IP Configuration | R/W | R/W | R |
| DHCP Server | R/W | R/W | R |
| Time Zone | R/W | R/W | R |
| System Time | R/W | R/W | R |
| Port | | | |
| Port Setting | R/W | R/W | R |
| Linkup Delay | R/W | R/W | R |
| Link Aggregation (Port Channel) | R/W | R/W | R |
| PoE | R/W | R/W | R |
| VLAN | | | |
| IEEE 802.1Q | R/W | R/W | R |
| GARP | R/W | R/W | R |
| MAC | | | |
| Static Unicast | R/W | R/W | R |
| MAC Address Table | R/W | R/W | R |
| QoS | | | |
| Classification | R/W | R/W | R |
| Ingress Rate Limit | R/W | R/W | R |
| Scheduler | R/W | R/W | R |
| Egress Shaper | R/W | R/W | R |
| Multicast | | | |
| IGMP Snooping | R/W | R/W | R |
| Static Multicast | R/W | R/W | R |
| GMRP | R/W | R/W | R |
| Layer 2 Redundancy | | | |
| Spanning Tree | R/W | R/W | R |
| Turbo Ring v2 | R/W | R/W | R |
| Turbo Chain | R/W | R/W | R |
| Dual Homing | R/W | R/W | R |
| Network Management | | | |
| SNMP | R/W | No Access | No Access |
| SNMP Trap/Inform | R/W | No Access | No Access |
| RMON1 (CLI only) | R/W | R/W | R |

| Function | Account Privilege | | |
|-----------------------------|-------------------|------------|-----------|
| | Admin | Supervisor | User |
| Security | | | |
| Management Interface | R/W | R/W | R |
| Login Policy | R/W | R | R |
| Trusted Access | R/W | R | R |
| SSH & SSL | Execute | Execute | No Access |
| IEEE802.1X | R/W | R/W | R |
| Port Security | R/W | R/W | R |
| Traffic Storm Control | R/W | R/W | R |
| Authentication | | | |
| RADIUS | R/W | No Access | No Access |
| TACACS+ | R/W | No Access | No Access |
| Login Authentication | R/W | No Access | No Access |
| Diagnostics | | | |
| Event Notification | R/W | R/W | R |
| Relay Output | R/W | R/W | R |
| Email Notification | R/W | R | R |
| Syslog | R/W | R | R |
| Event Log | R/W | R/W | R |
| LLDP | R/W | R/W | R |
| Port Mirror | R/W | R/W | R |
| Ping | Execute | Execute | Execute |
| ARP Table | R/W | R/W | R |
| Utilization | R | R | R |
| Statistics | R | R | R |
| Module information | R | R | R |
| Maintenance and Tool | | | |
| Standard/Advance Mode | Execute | Execute | Execute |
| Disable Auto Save | R/W | R/W | R |
| Locator | R/W | R/W | Execute |
| Reboot | Execute | Execute | No Access |
| Reset to default | R/W | No Access | No Access |

B. Event Log Description

This appendix describes all of the information for the event logs. When an event occurs, it will be recorded in the event log files. Users can check the event log name and its event log description.

Event Log Description

| Event Name | Severity | Event Description |
|--|----------|---|
| 802.1X Auth Failed | Warning | 802.1x authentication failed on port {{index}}/{{number}} with {{buffer}} |
| ABC-02 is inserted or unplugged | Notice | ABC-02 is {{inserted/unplugged}}. |
| ABC-03 is inserted or unplugged | Notice | ABC-03 is {{inserted/unplugged}}. |
| Account log out | Notice | [Account:{{user_name}}] logged out. |
| Account removed | Notice | [Account:{{user_name}}] has been removed by admin. |
| Account settings changed | Notice | Account settings of [Account:{{user_name}}] has been updated. Account settings of [Account:{{user_name}}] has been deleted. Account settings of [Account:{{user_name}}] has been created. |
| Announce message with different interval | Warning | An Announce message with a different interval has been received from port {{index}}/{{number}} |
| Announce timeout | Warning | PTP port {{index}}/{{number}} Announce receipt timer has timed out. |
| Check if hardware revision is valid | Notice | The hardware revision of Power Module {{index}} is not allowed. |
| Check if it is a known power module | Warning | To avoid potential overheating, Moxa does not recommend using a {{index}} power supply with this device. |
| Cold start | Critical | System has performed a cold start. |
| Configuration changed | Notice | Configuration {{modules}} changed by {{username}}. |
| Configuration exported | Notice | Configurations exported {{successful /failed}} by {{username}} via {{method}}. |
| Configuration imported | Notice | Configuration import {{successful /failed}} by {{username}} via {{method}}. |
| Coupling changed | Warning | Turbo Ring v2 coupling path status has changed. |
| dhcpsnp untrust mac discards | Warning | VLAN {{Vlan Id}} dropped packets due to violation of DHCP Snooping rule. Total mac discards: {{number}}. |
| dhcpsnp untrust server discards | Warning | VLAN {{Vlan Id}} dropped packets due to a violation of the DHCP Snooping rule. Total server discards: {{number}}. |
| DI off | Notice | Digital Input {{index}} has been turned off. |
| DI on | Notice | Digital Input {{index}} has been turned on. |
| Dual homing path changed | Warning | Dual Homing path has switched. |
| Event log export | Notice | Event Log export {{successful /failed}} by {{username}} via {{method}}. |
| Firmware upgrade failed | Warning | Firmware failed to upgrade. |
| Firmware upgrade successful | Notice | Firmware successfully upgraded |
| Grand Master changed | Warning | The PTP grandmaster has changed from {{mac addr}} to {{mac addr}} |

| Event Name | Severity | Event Description |
|----------------------------------|----------|--|
| Hardware revision is not allowed | Error | The hardware revision of Line Module %d is not allowed. |
| Interface link down | Notice | Interface{{number}} down. |
| Interface link up | Notice | Interface {{number}} up. |
| LLDP table changed | Info | LLDP remote table has changed. |
| Log capacity threshold | Warning | Number of event log entries {{logEntryNum}} has reached the threshold. |
| Log Turbo Chain Port Restart | Notice | Port-Channel {{channel id}} has restarted by Turbo Chain. Port {{index}}/{{number}} has restarted by Turbo Chain. |
| Login failed | Warning | [Account {{user_name}}] log in failed via {{interface}}. |
| Login lockout | Warning | [Account {{user_name}}] locked due to {{failed_times}} failed login attempts. |
| Login successful | Notice | [Account {{user_name}}] successfully logged in via {{interface}}. |
| Low input voltage | Warning | The input voltage of the power supply has dropped below 46 VDC. Please adjust the voltage to between 46 and 57 VDC to fit the PoE voltage requirement. |
| Master changed | Warning | Ring {{Index}} master has changed. |
| Master mismatch | Warning | Ring {{Index}} master setting does not match. |
| module change | Notice | M{{index}} module has changed. |
| Module Initialized Fail | Error | M{{index}} Module initialized has failed. |
| Module inserted | Notice | M{{Index}} Module inserted. |
| Module removed | Notice | M{{index}} Module removed. |
| MSTP new port role | Warning | MSTP (MST{{Index}}) port {{number}} role changed from {{role}} to {{role}}. |
| MSTP root changed | Warning | MSTP (MST{{Index}}) new root has been elected in topology. |
| MSTP topology changed | Warning | Topology (MST{{Index}}) has been changed by MSTP. |
| OSPF DR router adjacency changed | Notice | Interface {{ip addr}}{{ip addr}}{{ip addr}}{{ip addr}} DR neighbor {{ip addr}}{{ip addr}}{{ip addr}}{{ip addr}} adjacency changed. |
| OSPF interface DR changed | Notice | Interface {{ip addr}}{{ip addr}}{{ip addr}}{{ip addr}} DR Change{{ip addr}}{{ip addr}}{{ip addr}}{{ip addr}}to {{ip addr}}{{ip addr}}{{ip addr}}{{ip addr}}. |
| OSPF interface ISM became DR | Notice | Interface {{ip addr}}{{ip addr}}{{ip addr}}{{ip addr}} become DR. |
| Over power budget limit | Warning | The consumed power {{power_value}} of all the PDs have exceeded the maximum input power {{input_power_value}}. |
| Packet dropped by Port Security | Warning | Port {{index}}/{{number}} dropped packets due to violation of Port Security rule. |
| Password changed | Notice | Password of [Account: {{user_name}}] has been changed. |
| PD no response | Error | Port {{number}} device is not responding to the PD failure check. Please check the device status. |
| PD over-current | Error | Current of port {{number}} has exceeded the safety limit. Please check the device status. |
| PD power off | Notice | Port {{number}} PD power off. |
| PD power on | Notice | Port {{number}} PD power on. |
| Port Link Down | Notice | Port {{index}}/{{number}} link down. Port-channel {{Channel id}} link down. |
| Port Link Up | Notice | Port {{index}}/{{number}} link up. Port-channel {{Channel id}} link up. |

| Event Name | Severity | Event Description |
|--|----------|--|
| Port recovery by Rate Limit | Warning | Port {{index}}/{{number}} has recovered by rate limit. |
| Port shutdown by Loop | Critical | Port {{index}}/{{number}} looping and shutdown. |
| Port shutdown by Port Security | Warning | Port {{index}}/{{number}} has shut down due to a violation of the Port Security rule. |
| Port shutdown by Rate Limit | Warning | Port {{index}}/{{number}} has excessive traffic and shutdown. |
| Port state change | Info | PTP port {{index}}/{{number}} has changed from {{state}} to {{state}}. |
| Power detection failure | Warning | Port {{number}} device is {{Not present/Legacy PD/802.3 af/802.3 at/802.3 bt/NIC/Unknown}}. Please {{No suggestion/enable PoE power output/disable PoE power output/select PoE output mode to High power/select PoE output mode to Force/enable legacy PD detection/raise external power supply voltage greater than 46 VDC}}. |
| Power module inserted | Notice | Power Module {{index}} has been inserted. |
| Power module removed | Notice | Power Module {{index}} has been removed. |
| Power Off->On | Notice | Power {{index}} has turned off. |
| Power On->Off | Notice | Power {{index}} has turned on. |
| PTP message with the wrong domain number | Warning | The PTP message with the wrong domain number was received from port {{index}}/{{number}}. |
| Redundant port health check failed | Error | Redundant port {{index}}/{{number}} health check fail. |
| Relay Override message | Notice | {{relay_name}} relay alarm has been cut off. |
| Relay Triggered message | Notice | {{MGMT/PWR1/PWR2}} alarm is on due to {{Event Name}}. |
| RMON failing alarm | Warning | {{user defined}}. |
| RMON raising alarm | Warning | {{user defined}}. |
| RSTP invalid BPDU | Warning | RSTP Port-Channel {{channel id}} received an invalid BPDU (type: {{type}}, value: {{value}}). RSTP port {{index}}/{{number}} received an invalid BPDU (type: {{type}}, value: {{value}}). |
| RSTP migration | Warning | Port-Channel {{channel id}} changed to {{rstp/stp}}. Port {{index}}/{{number}} changed to {{rstp/stp}}. |
| RSTP new port role | Warning | RSTP Port-Channel {{channel id}} role changed from {{role}} to {{role}}. RSTP port {{index}}/{{number}} role changed from {{role}} to {{role}}. |
| RSTP root changed | Warning | RSTP new root has been elected in topology. |
| RSTP topology changed | Warning | Topology has been changed by RSTP. |
| Send message failed | Warning | PTP port {{index}}/{{number}} failed to transmit {{Type}}. |
| SSH Key generated | Notice | SSH key has been regenerated. |
| SSL certification changed | Notice | SSL certificate has been changed. SSL certificate has been regenerated. |
| Sync status changed | Warning | The PTP sync status has changed from {{PreSyncStatus}} to {{CurSyncStatus}}. |
| Topology changed (RSTP) | Warning | Topology has been changed by RSTP. |
| Topology changed (Turbo Chain) | Warning | Topology has been changed by Turbo Chain. |
| Topology changed (Turbo Ring) | Warning | Topology change has been detected on Ring {{RingIndex}} of Turbo Ring v2. |
| Topology changed (MSTP) | Warning | Topology (MST{{Index}}) has been changed by MSTP. |
| Unknown module | Warning | Module {{index}} Unknown Module Initialized Failed. |

| Event Name | Severity | Event Description |
|--|----------|--|
| VRRP Master changed | Warning | VRRP Interface {{number}} VrId {{vlanId}} state change to master. |
| Warm start | Notice | System has performed a warm start. |
| When the trust host moves, it will send a log to Moxa log handler. | Warning | A trust host, MAC is {{mac address}} with VLAN {{Vlan Id}}, moved from port {{index}}/{{number}} to port {{index}}/{{number}}. |

C. SNMP MIB File

This appendix contains the SNMP MIB file for the managed switch.

Standard MIB Installation Order

If you need to import the MIB one-by-one, please install the MIBs in the following order.

1. RFC1213-MIB.mib
2. SNMP-FRAMEWORK-MIB.mib
3. SNMPv2-SMI.mib
4. SNMPv2-TC.mib
5. SNMPv2-CONF.mib
6. SNMPv2-MIB.mib
7. IANAifType-MIB.mib
8. IEEE8023-LAG-MIB.mib
9. IF-MIB.mib
10. EtherLike-MIB.mib
11. IEEE8021-PAE-MIB.mib
12. BRIDGE-MIB.mib
13. P-BRIDGE-MIB.mib
14. RFC1271-MIB.mib
15. RMON-MIB.mib
16. TOKEN-RING-RMON-MIB.mib
17. RMON2-MIB.mib
18. Q-BRIDGE-MIB.mib
19. INET-ADDRESS-MIB.mib
20. IEEE8021-TC-MIB.mib
21. IEEE8021-SPANNING-TREE-MIB.mib
22. IANA-ADDRESS-FAMILY-NUMBERS-MIB.mib
23. LLDP-MIB.mib
24. LLDP-EXT-DOT1-MIB.mib
25. LLDP-EXT-DOT3-MIB.mib

MIB Tree

Refer to the following content for the MIB Tree structure.

```
iso(1)
|-std(0)-iso8802(8802)-ieee802dot1(1)-ieee802dot1mibs(1)
  |-ieee8021paeMIB(1): IEEE8021-PAE-MIB.mib
  |-ieee8021SpanningTreeMib(3): IEEE8021-SPANNING-TREE-MIB.mib
|-org(3)
  |-dod(6)-internet(1)
    |-mgmt(2)-mib-2(1): SNMPv2-MIB.mib
    |-system(1): RFC1213-MIB.mib
```

```

|-interface(2): RFC1213-MIB.mib
|-at(3): RFC1213-MIB.mib
|-snmp(11): RFC1213-MIB.mib
|-rmon(16): RMON-MIB.mib
|-dot1dBridge(17): BRIDGE-MIB.mib, P-BRIDGE-MIB.mib, Q-BRIDGE-MIB.mib
|-ifMIB(31): IF-MIB.mib
|-etherMIB(35): EtherLike-MIB.mib
|-private(4)-moxa(8691)
|-product(600): mxGeneralInfo.mib, mxProductInfo.mib,
|-general(602): mxGeneral.mib, mxDeviceIo.mib, mxDhcpSvr.mib, mxEmailC.mib,
mxEventLog.mib,
:mxGene.mib, mxLocator.mib, mxManagementIp.mib, mxPoe.mib,
mxPorte.mib,
: mxRelayC.mib, mxSnmp.mib, mxSwe.mib, mxSysLoginPolicySvr.mib,
: mxSyslogSvr.mib, mxSysPasswordPolicySvr.mib, mxSystemInfo.mib,
: mxSysTrustAccessSvr.mib, mxSysUtilSvr.mib, mxTimeSetting.mib,
: mxTimeZone.mib, mxTrapC.mib, mxUiServiceMgmt.mib
|-switching(603): mxSwitching.mib
|- portInterfacce : mxPort.mib, mxLa.mib
|- basicLayer2: mxLhc.mib, mxQos, mxVlan.mib
|- layer2Redundancy: mxRstp.mib, mxTrv2.mib, mxTurboChain.mib,
mxDualHoming.mib
|- layer2Security: mxStcl.mib, mxRlps.mib, mxPssp.mib, mxPsms.mib, mxDot1x.mib,
mxRadius.mib
|- layer2Diagnostic: mxLldp.mib, mxTcst.mib, mxPortMirror.mib, mxRmon.mib
|- layer3Diagnostic
|- layer2Multicast: mxIgmpSnp.mib
|- layer3Multicast
|-poe(608): mxPoe.mib
|-snmpV2(6)-snmpModules(3)
|-snmpFrameworkMIB(10): SNMP-FRAMEWORK.mib
|-ieee(111)-standards-association-numbers-series-standards(2)-lan-man-stds(802)-ieee802dot1(1)-
ieee802dot1mibs(1)-ieee8021SpanningTreeMib(3): IEEE8021-SPANNING-TREE-MIB.mib

```

D. Security Guidelines

This appendix explains security practices for installing, operating, maintaining, and decommissioning the device. Moxa strongly recommends that our customers follow these guidelines to enhance network and equipment security.

Installation

Physical Installation

1. The device **MUST** be installed in an access controlled area, where only the necessary personnel have physical access to the device.
2. The device **MUST NOT** be directly connected to the Internet, which means switches **MUST** be installed within a security perimeter, which can be implemented by a firewall at the border since the device is not classified as zone/boundary equipment.
3. Please follow the instructions in the Quick Installation Guide, which is included in the package, to ensure you install the device correctly in your environment.
4. The device has anti-tamper labels on the enclosures. This allows an administrator to tell whether the device has been tampered with.
5. The ports that are not in use should be deactivated. Please refer to **[User Manual section Port Interface]** for detailed instructions.

Account Management

Follow these best practices when setting up an account.

1. Each account should be assigned the correct privileges: Only allow the minimum number of people to have admin privilege so they can perform device configuration or modifications, while other users should only have read access privilege. The device supports both local account authentication and remote centralized mechanism, including Radius and TACACS+.
2. Change the default password, and strengthen the account password complexity by:
 - a. Enabling the "Password Policy" function.
 - b. Increasing the minimum password length to at least eight characters.
 - c. Defining a password policy to ensure that it contains at least an uppercase and lowercase letter, a digit, and a special character.
 - d. Setting user passwords to expire after a certain period of time.
3. Enforce regulations that ensure that only a trusted host can access the device. Please refer to **Trusted Access** for detailed instructions.

Vulnerable Network Ports

1. For network security concerns, we strongly recommend that you change the port numbers, such as TCP port numbers for HTTP, HTTPS, Telnet, and SSH, for the protocols that are in use; ports that are not in use but are still reachable pose an unacceptable security risk and should be disabled. Refer to the **Management Interface** section for detailed instructions.
2. In order to avoid eavesdroppers from snooping confidential information, users should adopt encryption-based communication protocols, such as HTTPS instead of HTTP, SSH instead of Telnet, SFTP instead of TFTP, SNMPv3 instead of SNMPv1/v2c, etc. In addition, the maximum number of sessions should be kept to an absolute minimum. Please refer to **Management Interface** for detailed instructions.
3. Users should re-generate SSL certificate and SSH key for the device before commissioning HTTPS or SSH applications. Please refer to **SSH & SSL** for detailed instructions.

Operation

1. In order to ensure that communications are properly protected, use a strong cryptographic algorithm for key exchange or encryption protocols for HTTPS/SSH applications. The device follows the NIST SP800-52 and SP800-131 standards, and supports TLS v1.2 and v1.3 with the following cipher suites:

| TLS V1.2 | | | | |
|---|--------------|----------------|-------------------|---------------|
| Cipher suite name | Key exchange | Authentication | Encryption | Hash function |
| TLS_ECDHE_RSA_WITH_CHACHA20_POLY1305_SHA256 | ECDHE | RSA | CHACHA20-POLY1305 | SHA256 |
| TLS_ECDHE_ECDSA_WITH_AES_128_GCM_SHA256 | ECDHE | ECDSA | AES128 | SHA256 |
| TLS_ECDHE_RSA_WITH_AES_128_GCM_SHA256 | ECDHE | RSA | AES128 | SHA256 |
| TLS_ECDHE_RSA_WITH_AES_256_GCM_SHA384 | ECDHE | RSA | AES256 | SHA384 |
| TLS_DHE_RSA_WITH_AES_128_GCM_SHA256 | Ephemeral DH | RSA | AES128 | SHA256 |
| TLS_DHE_RSA_WITH_AES_256_GCM_SHA384 | Ephemeral DH | RSA | AES256 | SHA384 |
| TLS_DHE_RSA_WITH_CHACHA20_POLY1305_SHA256 | Ephemeral DH | RSA | CHACHA20-POLY1305 | SHA256 |
| TLS_ECDHE-RSA_WITH_AES256-SHA384 | ECDHE | RSA | AES256 | SHA384 |
| TLS_ECDHE_RSA_WITH_AES_128_CBC_SHA256 | ECDHE | RSA | AES128 | SHA256 |
| TLS_ECDHE_ECDSA_WITH_CHACHA20_POLY1305_SHA256 | ECDHE | ECDSA | CHACHA20-POLY1305 | SHA256 |
| TLS_ECDHE_RSA_WITH_AES_256_CBC_SHA384 | ECDHE | RSA | AES256 | SHA384 |
| TLS_ECDHE_ECDSA_WITH_AES_256_CBC_SHA384 | ECDHE | ECDSA | AES256 | SHA384 |
| TLS_ECDHE_ECDSA_WITH_AES_128_CBC_SHA256 | ECDHE | ECDSA | AES128 | SHA256 |

| TLS V1.3 | | | | |
|------------------------------|--------------|-------------------|------|---------------|
| Cipher suite name | Key exchange | Encryption | Mode | Hash function |
| TLS_AES_256_GCM_SHA384 | any | AES256 | GCM | SHA384 |
| TLS_CHACHA20_POLY1305_SHA256 | any | CHACHA20-POLY1305 | N/A | SHA256 |
| TLS_AES_128_GCM_SHA256 | any | AES128 | GCM | SHA256 |

2. Below is a list of the recommended secure browsers that support TLS v1.2 or above:

| Browser | Version |
|-----------------------------|--------------|
| Microsoft Edge | All |
| Microsoft Internet Explorer | v11 or above |
| Mozilla Firefox | v27 or above |
| Google Chrome | v38 or above |
| Apple Safari | v7 or above |

Reference: <https://support.globalsign.com/ssl/general-ssl/tls-protocol-compatibility#Browsers>

3. The device supports event logs and syslog for SIEM integration:
- Event log: Due to limited storage capacity, the event log can only accommodate a maximum of 10,000 entries. Administrators can set a warning for a pre-defined threshold. We recommend that users regularly back up system event logs. Please refer to **Event Log** for detailed instructions.
 - Syslog: the device supports syslog, and advanced secure TLS-based syslog for centralized SIEM integration. Please refer to **Syslog Settings** for detailed instructions.
4. The device can provide information for control system inventory:
- SNMPv1, v2c, v3: We recommend administrators use SNMPv3 with authentication and encryption to manage the network. Please refer to the **MIB** file for detailed instructions.
 - Telnet/SSH: We recommend that administrators use SSH with authentication and encryption to retrieve device properties.
 - HTTP/HTTPS: We recommend that administrators use HTTPS with a certificate that has been granted by a Certificate Authority to configure the device.
 - MMS: We recommend administrators enable MMS security mode to enhance protection.
5. Denial of Service protection: To avoid disruption of normal operation of the switch, administrators should configure the QoS function. The device supports ingress rate limit and egress shaper. Administrators can decide how to deal with excess data flow and configure the device accordingly. This process will regulate the resulted data rate per port. Please refer to **QoS** for detailed instructions.
6. Time synchronization with authentication: Time synchronization is crucial for process control. To prevent malicious attacks whereby the settings are changed without permission, authentication must be in place between the NTP server and client. The device supports NTP with a pre-shared key. Please refer to **NTP** for detailed instructions.
7. Periodically regenerate the SSH and SSL certificates: Even though the device supports RSA 2048-bit and SHA-256 to ensure sufficient complexity, we strongly recommend that users frequently renew their SSH key and SSL certificate in case the key is compromised. Please refer to **SSH & SSL** for detailed instructions.
8. Below is the list of the protocol port numbers used for all external interfaces.

Protocol: TCP

| Service Type | Port Number |
|--------------|-------------|
| SSH | 22 |
| Telnet | 23 |
| HTTP | 80 |
| HTTPS | 443 |

Protocol: UDP

| Service Type | Port Number |
|--------------|-------------|
| DHCP | 67 |
| NTP | 123 |
| SNMP | 161 |
| Moxa Service | 40404 |

Maintenance

1. Perform firmware upgrades frequently to enhance features, deploy security patches, or fix bugs.
2. Frequently back up the system configurations: In order to properly protect the system configuration files from being tampered with, the device supports password encryption and signature authentication for backup files.
3. Examine event logs frequently to detect any anomalies.
4. To report vulnerabilities of Moxa products, please submit your findings on the following web page:
<https://www.moxa.com/en/support/product-support/security-advisory/report-a-vulnerability>.

Decommission

To avoid disclosing sensitive information such as account password and certificate, please reset the system settings to factory default before decommissioning the device or sending it back to Moxa RMA service.