

# **V2401/2402 Series**

## **Linux User's Manual**

---

**First Edition, March 2010**

**[www.moxa.com/product](http://www.moxa.com/product)**



© 2010 Moxa Inc. All rights reserved.  
Reproduction without permission is prohibited.

# V2401/2402 Series

## Linux User's Manual

The Moxa software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

### **Copyright Notice**

Copyright © 2010 Moxa Inc.

All rights reserved.

Reproduction without permission is prohibited.

### **Trademarks**

MOXA is a registered trademark of Moxa Inc.

All other trademarks or registered marks in this manual belong to their respective manufacturers.

### **Disclaimer**

Information in this document is subject to change without notice and does not represent a commitment on the part of Moxa.

Moxa provides this document “as is,” without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. Moxa reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.

Information provided in this manual is intended to be accurate and reliable. However, Moxa assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.

This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

### **Technical Support Contact Information**

**[www.moxa.com/support](http://www.moxa.com/support)**

#### **Moxa Americas:**

Toll-free: 1-888-669-2872  
Tel: +1-714-528-6777  
Fax: +1-714-528-6778

#### **Moxa China (Shanghai office):**

Toll-free: 800-820-5036  
Tel: +86-21-5258-9955  
Fax: +86-10-6872-3958

#### **Moxa Europe:**

Tel: +49-89-3 70 03 99-0  
Fax: +49-89-3 70 03 99-99

#### **Moxa Asia-Pacific:**

Tel: +886-2-8919-1230  
Fax: +886-2-8919-1231

# Table of Contents

|                  |   |            |
|------------------|---|------------|
| <b>Chapter 1</b> | <b>Introduction .....</b>   | <b>1-1</b> |
|                  | Overview.....   | 1-2        |
|                  | Software Specifications .....                                     | 1-2        |
|                  | Software Components.....  | 1-3        |
| <b>Chapter 2</b> | <b>Software Configuration .....</b>                               | <b>2-1</b> |
|                  | Starting from a VGA Console .....                                 | 2-2        |
|                  | Desktop Display Configuration .....                               | 2-3        |
|                  | Connecting from a Telnet Console.....                             | 2-7        |
|                  | Connecting from an SSH Console .....                              | 2-8        |
|                  | Windows Users.....  | 2-8        |
|                  | Linux Users .....   | 2-9        |
|                  | Adjusting the System Time.....                                    | 2-9        |
|                  | Setting the Time Manually .....                                   | 2-9        |
|                  | NTP Client.....   | 2-10       |
|                  | Updating the Time Automatically .....                             | 2-10       |
|                  | Enabling and Disabling Daemons.....                               | 2-11       |
|                  | Setting the Run-Level .....                                       | 2-15       |
|                  | Cron—Daemon for Executing Scheduled Commands.....                 | 2-16       |
|                  | Inserting a USB Storage Device into the Computer.....             | 2-17       |
|                  | Checking the Linux Version.....                                   | 2-18       |
|                  | APT—Installing and Removing Packages.....                         | 2-18       |
|                  | Device Suspend.....   | 2-20       |
| <b>Chapter 3</b> | <b>Managing Communications .....</b>                              | <b>3-1</b> |
|                  | Changing the Network Settings .....                               | 3-3        |
|                  | Changing the “interfaces” Configuration File .....                | 3-3        |
|                  | Adjusting IP Addresses with “ifconfig” .....                      | 3-4        |
|                  | Serial Port Operation Mode .....                                  | 3-4        |
|                  | Telnet/FTP Server .....   | 3-5        |
|                  | DNS Client.....   | 3-6        |
|                  | Apache Web Server.....  | 3-8        |
|                  | Default Homepage.....   | 3-8        |
|                  | Disabling the CGI Function.....                                   | 3-8        |
|                  | Saving Web Pages to a USB Storage Device .....                    | 3-9        |
|                  | IPTABLES .....  | 3-11       |
|                  | IPTABLES Hierarchy.....   | 3-13       |
|                  | IPTABLES Modules.....   | 3-14       |
|                  | Observe and Erase Chain Rules.....                                | 3-15       |
|                  | Define Policy for Chain Rules.....                                | 3-15       |
|                  | Append or Delete Rules.....                                       | 3-16       |
|                  | NAT (Network Address Translation) .....                           | 3-17       |
|                  | NAT Example.....  | 3-17       |
|                  | Enabling NAT at Bootup .....                                      | 3-18       |
|                  | PPP (Point to Point Protocol).....                                | 3-19       |
|                  | Connecting to a PPP Server over a Simple Dial-up Connection ..... | 3-19       |
|                  | Connecting to a PPP Server over a Hard-wired Link .....           | 3-20       |

|   |            |
|---|------------|
| Checking the Connection.....                                      | 3-20       |
| Setting up a Machine for Incoming PPP Connections.....            | 3-22       |
| PPPoE .....   | 3-23       |
| NFS (Network File System) Client.....                             | 3-27       |
| SNMP (Simple Network Management Protocol).....                    | 3-28       |
| OpenVPN.....  | 3-29       |
| Ethernet Bridging for Private Networks on Different Subnets ..... | 3-29       |
| Ethernet Bridging for Private Networks on the Same Subnet.....    | 3-34       |
| Routed IP .....   | 3-35       |
| <b>Chapter 4    Programmer Guide.....</b>                         | <b>4-1</b> |
| Device API.....   | 4-2        |
| RTC (Real Time Clock) .....                                       | 4-2        |
| UART.....   | 4-2        |
| Digital I/O.....  | 4-4        |
| <b>Chapter 5    System Recovery .....</b>                         | <b>5-1</b> |
| Recovery Environment .....  | 5-2        |
| Recovery Procedure .....  | 5-2        |
| <b>Appendix A   Software Component List.....</b>                  | <b>A-1</b> |

# Introduction

---

Thank you for purchasing the Moxa V2401/2402 Series of x86 ready-to-run embedded computers. This manual introduces the software configuration and management of the V2401/2402, which runs the Linux operating system. For hardware installation, connector interfaces, setup, and upgrading the BIOS, please refer to the “V2401/2402 Series Hardware User’s Manual.”

Linux is an open, scalable operating system that allows you to build a wide range of innovative, small footprint devices. Software written for desktop PCs can be easily ported to the embedded computer with a GNU cross compiler and a minimum of source code modifications. A typical Linux-based device is designed for a specific use, and is often not connected to other computers, or a number of such devices connect to a centralized, front-end host. Examples include enterprise tools such as industrial controllers, communications hubs, point-of-sale terminals, and display devices, which include HMIs, advertisement appliances, and interactive panels.

This chapter covers the following topics:

- Overview**
- Software Specifications**
- Software Components**

## Overview

V2401/2402 embedded computers are based on the Intel Atom N270 x86 processor and feature 4 RS-232/422/485 serial ports, 8 RS-232 serial ports, dual Gigabit LAN ports, six USB 2.0 hosts, and a CompactFlash socket. The V2401/2402 series offers both VGA and LVDS outputs, making it exceptionally well suited for industrial applications such as SCADA and factory automation.



The V2401/2402's two serial ports make it ideal for connecting a wide range of serial devices, and the dual 10/100/1000 Mbps Ethernet ports offer a reliable solution for network redundancy, which taken together promise continuous data communication and management operations. For added convenience, the V2401/2402 has four DI and four DO for connecting digital input/output devices. In addition, the CompactFlash and USB ports provide V2401/2402 computers with data buffering and storage expansion, which provide the necessary reliability for industrial applications.

Pre-installed with Linux, the V2401/2402 series provides programmers with a friendly environment for developing sophisticated, bug-free application software at a lower cost.

All V2401/2402 models support a wide operating temperature range of -40 to 85°C for use in harsh industrial environments.

## Software Specifications

The Linux operating system pre-installed on the V2401/2402 embedded computer is the **Debian Lenny 5.02** distribution. The Debian project is a worldwide group of volunteers who endeavor to produce an operating system distribution that composed entirely of free software. The Debian GNU/Linux follows the standard Linux architecture, making it easy to use programs that meet the POSIX standard. Program porting can be done with the GNU Tool Chain provided by Moxa. In addition to Standard POSIX APIs, device drivers for Moxa UART and other special peripherals are also included. An example software architecture is shown below:

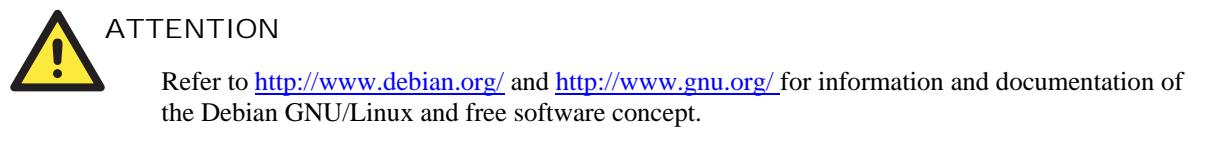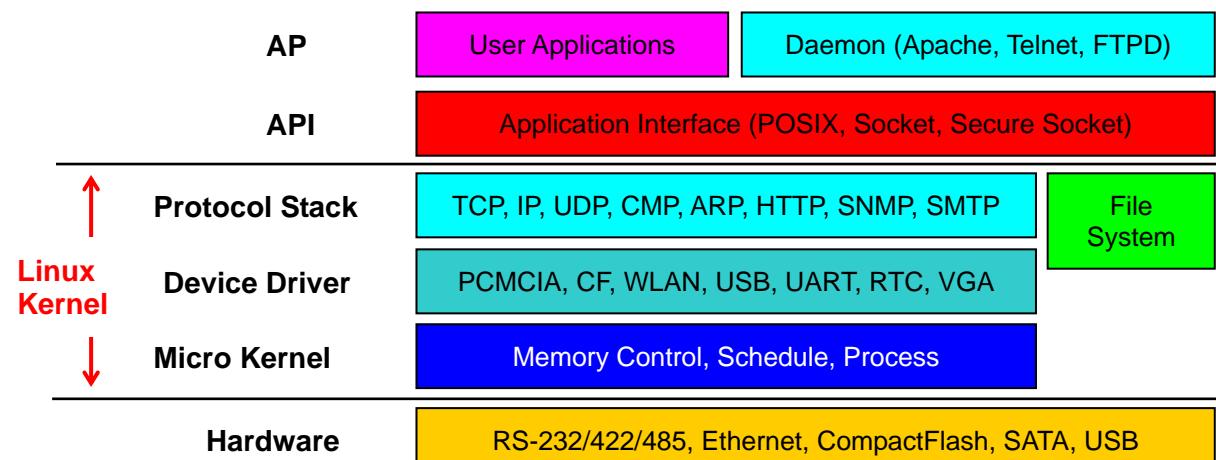

**ATTENTION**

The above software architecture is only an example. Different models or different build revisions of the Linux operating system may include components not shown in the above graphic.

## Software Components

The V2401/2402-LX has been pre-installed with the Debian Lenny 5.02 Linux distribution. For detailed software components, please refer to **Appendix A: Software Component List**.

# 2

## Software Configuration

---

In this chapter, we explain how to operate a V2401/2402-LX computer directly or through your desktop. There are three ways to connect to the V2401/2402-LX computer: through a VGA monitor, by using Telnet over the network, or by using an SSH console from a Windows or Linux machine. This chapter describes basic Linux operating system configurations. The advanced network management and configuration will be described in the next chapter “Managing Communications.”

This chapter covers the following topics:

- ❑ **Starting from a VGA Console**
- ❑ **Desktop Display Configuration**
- ❑ **Connecting from a Telnet Console**
- ❑ **Connecting from an SSH Console**
  - Windows Users
  - Linux Users
- ❑ **Adjusting the System Time**
  - Setting the Time Manually
  - NTP Client
  - Updating the Time Automatically
- ❑ **Enabling and Disabling Daemons**
- ❑ **Setting the Run-Level**
- ❑ **Cron—Daemon for Executing Scheduled Commands**
- ❑ **Inserting a USB Storage Device into the Computer**
- ❑ **Checking the Linux Version**
- ❑ **APT—Installing and Removing Packages**
- ❑ **Device Suspend**

## Starting from a VGA Console

Connect the display monitor to the V2401/2402-LX VGA connector, and then power it up by connecting it to the power adaptor. It takes about 30 to 60 seconds for the system to boot up. Once the system is ready, a login screen will appear on your monitor.

To log in, type the login name and password as requested. The default values are both **root**.

**Login: root**

**Password:** root

```
Moxa login: root  
Password:  
Last login: Fri Jan 22 19:02:16 2010 from 192.168.3.120
```

##### ###### ##### ###### ##### ##### ##  
### ##### ### ##### ##### ##### ##### ##### ##  
### ##### ##### ##### ##### ##### ##### ##### ##  
### ##### ##### ##### ##### ##### ##### ##### ##  
### ##### ##### ##### ##### ##### ##### ##### ##  
##### ##### ##### ##### ##### ##### ##### ##### ##  
## ## # ## ## ##### ##### ##### ##### ##### ##  
## ## # ## ##### ##### ##### ##### ##### ##  
## ##### ##### ##### ##### ##### ##### ##### ##  
## ##### ##### ##### ##### ##### ##### ##### ##  
## ##### ##### ##### ##### ##### ##### ##### ##  
## ##### ##### ##### ##### ##### ##### ##### ##  
##### ##### ##### ##### ##### ##### ##### ##### ##

For further information check:  
<http://www.moxa.com/>  
Mount user file system.

Moxa : ~#

## Desktop Display Configuration

This section introduces the display configuration settings for V2401/2402-LX computers.

As only the V2401 only provides a LVDS connector, you may need to change the configuration for a V2401-LX computer.

### 1 Display at BIOS start-up

You can configure which display will display BIOS message via BIOS settings; by default the text console will display through the CRT monitor. Enter **Advanced > Advanced Chipset Features** in BIOS for this option.

### 2 Dual display on desktop environment

2.1 Configure /etc/X11/xorg.conf for dual display.

| Parameter |  |    |                  |   |         |   |         |   |          |   |           |   |           |   |           |   |          |   |           |   |          |    |          |
|-----------|--|----|------------------|---|---------|---|---------|---|----------|---|-----------|---|-----------|---|-----------|---|----------|---|-----------|---|----------|----|----------|
| ConfigID  | <p>This option identifies the configuration, default value is 2<br/>System will read “All/&lt;ConfigID&gt;/Name” strings as setting.</p> <p>If your device is equipped with LVDS, you need set up a specific ConfigID for your LVDS panel.</p> <p>Configuration ID list:</p> <table border="1"> <thead> <tr> <th>ID</th><th>Panel resolution</th></tr> </thead> <tbody> <tr><td>1</td><td>640*480</td></tr> <tr><td>2</td><td>800*600</td></tr> <tr><td>3</td><td>1024*768</td></tr> <tr><td>4</td><td>1280*1024</td></tr> <tr><td>5</td><td>1400*1050</td></tr> <tr><td>6</td><td>1600*1200</td></tr> <tr><td>7</td><td>1280*780</td></tr> <tr><td>8</td><td>1680*1050</td></tr> <tr><td>9</td><td>1280*800</td></tr> <tr><td>10</td><td>1280*600</td></tr> </tbody> </table> | ID | Panel resolution | 1 | 640*480 | 2 | 800*600 | 3 | 1024*768 | 4 | 1280*1024 | 5 | 1400*1050 | 6 | 1600*1200 | 7 | 1280*780 | 8 | 1680*1050 | 9 | 1280*800 | 10 | 1280*600 |
| ID        | Panel resolution   |    |                  |   |         |   |         |   |          |   |           |   |           |   |           |   |          |   |           |   |          |    |          |
| 1         | 640*480  |    |                  |   |         |   |         |   |          |   |           |   |           |   |           |   |          |   |           |   |          |    |          |
| 2         | 800*600  |    |                  |   |         |   |         |   |          |   |           |   |           |   |           |   |          |   |           |   |          |    |          |
| 3         | 1024*768   |    |                  |   |         |   |         |   |          |   |           |   |           |   |           |   |          |   |           |   |          |    |          |
| 4         | 1280*1024  |    |                  |   |         |   |         |   |          |   |           |   |           |   |           |   |          |   |           |   |          |    |          |
| 5         | 1400*1050  |    |                  |   |         |   |         |   |          |   |           |   |           |   |           |   |          |   |           |   |          |    |          |
| 6         | 1600*1200  |    |                  |   |         |   |         |   |          |   |           |   |           |   |           |   |          |   |           |   |          |    |          |
| 7         | 1280*780   |    |                  |   |         |   |         |   |          |   |           |   |           |   |           |   |          |   |           |   |          |    |          |
| 8         | 1680*1050  |    |                  |   |         |   |         |   |          |   |           |   |           |   |           |   |          |   |           |   |          |    |          |
| 9         | 1280*800   |    |                  |   |         |   |         |   |          |   |           |   |           |   |           |   |          |   |           |   |          |    |          |
| 10        | 1280*600   |    |                  |   |         |   |         |   |          |   |           |   |           |   |           |   |          |   |           |   |          |    |          |
| PortOrder | <p>Search Order to detect attached displays for the display detection feature.<br/>When DisplayDetect is enabled (set to 1), the port order determines which display is primary and which display is secondary (refer to the BIOS manual)</p> <p>Check if your device is equipped with a LVDS connector:</p> <ol style="list-style-type: none"> <li>1. Device with LVDS connector:<br/>In the numbering scheme, CRT is 5, DVI is 2, and LVDS is 4.<br/>For example, the following numbers correspond to the following settings:<br/>52400: CRT+DVI<br/>45200: LVDS+CRT*<br/>42500: LVDS+DVI<br/>*Note: if you set 4 (LVDS) before 5 (CRT), configure the IEGD read build-in</li> </ol>   |    |                  |   |         |   |         |   |          |   |           |   |           |   |           |   |          |   |           |   |          |    |          |

|               |  |
|---------------|--|
|               | LVDS setting to create a clone mode.<br><br>2. Device without LVDS connector:<br>In the numbering scheme, CRT is 5 and DVI is 2.<br>See the example below:<br>52000: CRT+DVI |
| DisplayConfig | 1: Single mode<br>2: Clone mode<br>3: Twin head mode   |
| DisplayDetect | 0: Disable<br>1: Enable  |

Here are partial settings of xorg.conf:

```
Section "Device"
    Identifier "Intel_IEGD-0"
    Driver      "iegd"
    VendorName "Intel(R) DEG"
    BoardName  "Embedded Graphics"
    BusID      "0:2:0"
    Screen     0
    Option     "PcfVersion"          "1792"
    Option     "ConfigId"           "2"

    ...
    Option     "ALL/2/name"          "8x6"
    Option     "ALL/2/General/PortOrder" "52400"
    Option     "ALL/2/General/DisplayConfig" "2"
    Option     "ALL/2/General/DisplayDetect" "1"
    Option     "ALL/2/Port/5/General/name"      "CRT"
    Option     "ALL/2/Port/5/General/EdidAvail"   "3"
    Option     "ALL/2/Port/5/General/EdidNotAvail" "1"
    Option     "ALL/2/Port/5/General/Rotate"       "0"
    Option     "ALL/2/Port/5/General/Edid"         "1"
    Option     "ALL/2/Port/2/General/name"        "DVI"
    Option     "ALL/2/Port/2/General/EdidAvail"   "3"
    Option     "ALL/2/Port/2/General/EdidNotAvail" "1"
    Option     "ALL/2/Port/2/General/Rotate"       "0"
    Option     "ALL/2/Port/2/General/Edid"         "1"
    Option     "ALL/2/Port/4/General/name"        "LVDS8x6"
    Option     "ALL/2/Port/4/General/EdidAvail"   "3"
    Option     "ALL/2/Port/4/General/EdidNotAvail" "5"
    Option     "ALL/2/Port/4/General/Rotate"       "0"
    Option     "ALL/2/Port/4/General/Edid"         "1"
    Option     "ALL/2/Port/4/FpInfo/BkltMethod"   "0"
    Option     "ALL/2/Port/4/Dtd/10/PixelClock"  "40000"
    Option     "ALL/2/Port/4/Dtd/10/HorzActive"  "800"
    Option     "ALL/2/Port/4/Dtd/10/HorzSync"    "40"
    Option     "ALL/2/Port/4/Dtd/10/HorzSyncPulse" "128"
    Option     "ALL/2/Port/4/Dtd/10/HorzBlank"   "256"
    Option     "ALL/2/Port/4/Dtd/10/VertActive"  "600"
    Option     "ALL/2/Port/4/Dtd/10/VertSync"    "1"
    Option     "ALL/2/Port/4/Dtd/10/VertSyncPulse" "4"
    Option     "ALL/2/Port/4/Dtd/10/VertBlank"   "28"
```

```
Option      "ALL/2/Port/4/Dtd/10/Flags"          "0xc020000"
Option      "ALL/2/Port/4/Attr/27"        "0"
Option      "ALL/2/Port/4/Attr/26"        "18"
Option      "ALL/2/Port/4/Attr/60"        "1"
Option      "PortDrivers"                "analog sdvo lvds"
```

2.2 After setting up xorg.conf, enter **/etc/init.d/gdm restart** to load the new configuration


In addition, you can start the gnome desktop environment in the text console:


```
MOXA:~# /etc/init.d/gdm start
```

Or you can set gnome-display-manager as a startup daemon:

```
MOXA:~# mv /etc/rc2.d/N30gdm /etc/rc2.d/S30gdm
```

Then, you will see the login window illustrated below:

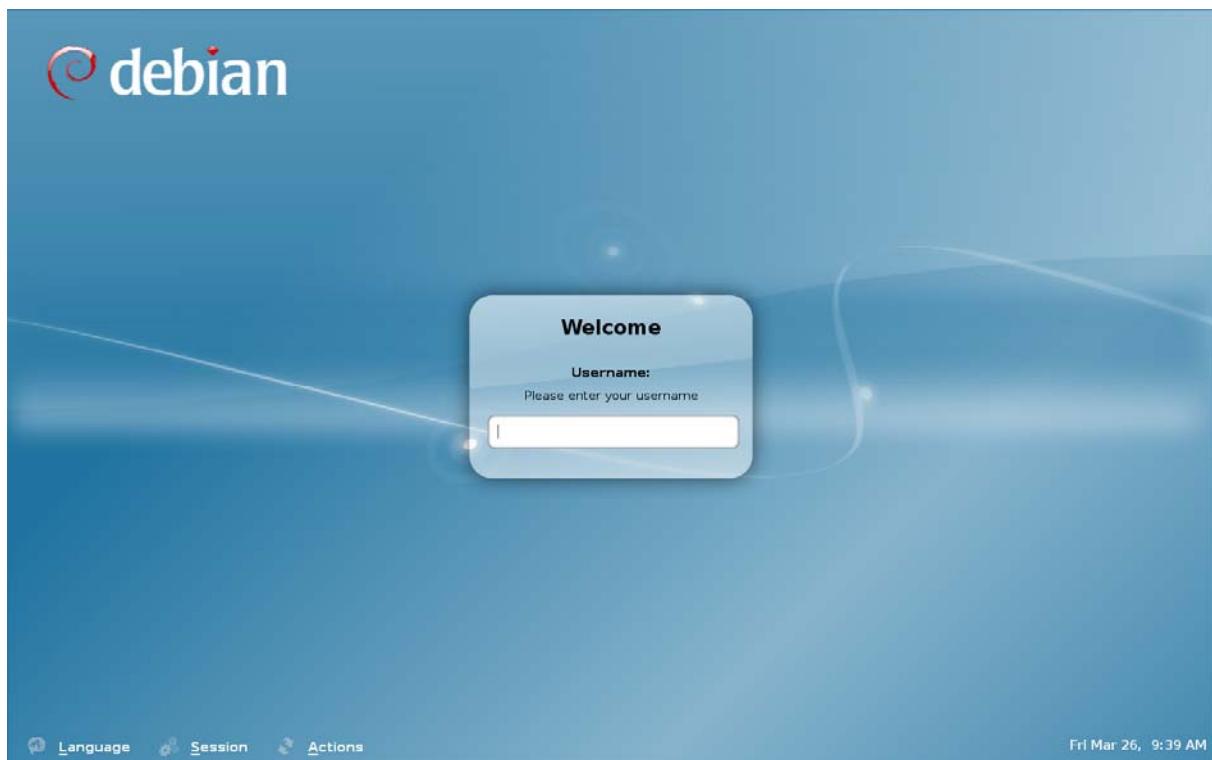

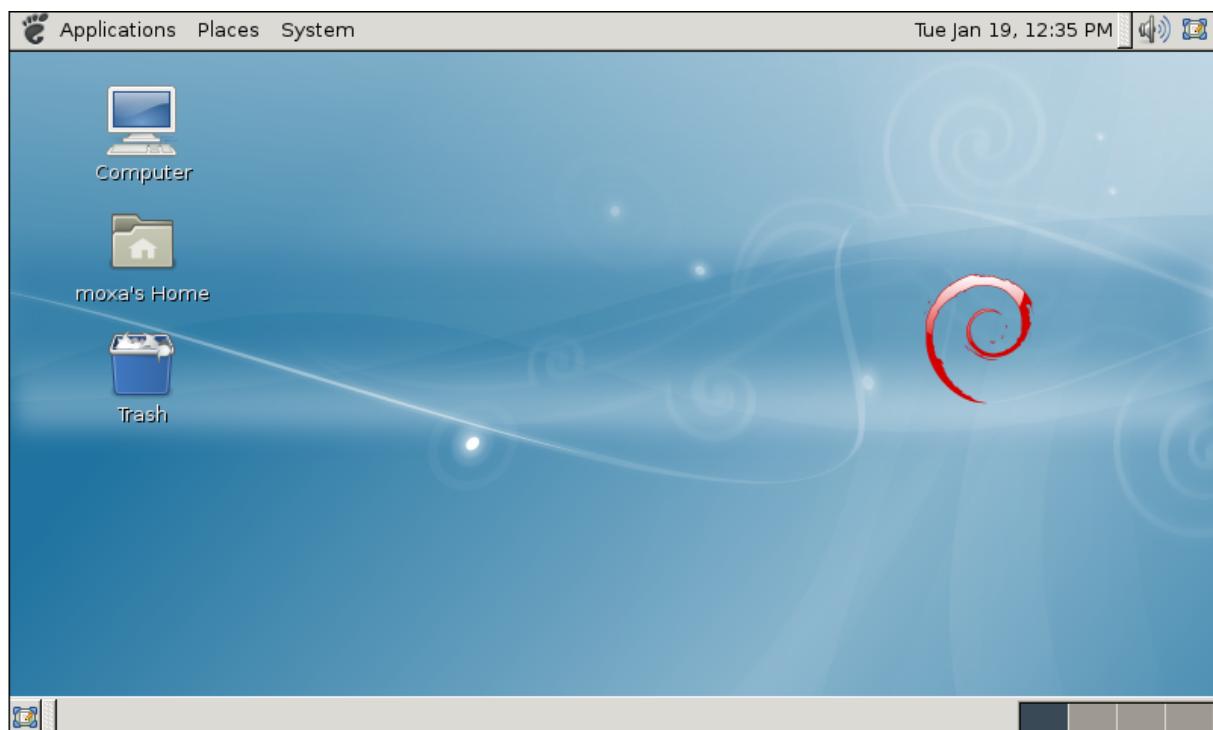

Please note that after you log in to the gnome desktop environment, you can change the resolution and display mode with the IEGD utility, found in **Applications -> System Tools -> IEGD GUI Utility**. However, the configuration values will only be valid for the session.

# Connecting from a Telnet Console

The V2401/2402-LX computer comes with four basic Gigabit Ethernet ports named LAN1 and LAN2. The default IP addresses and netmasks of the network interfaces are as follows:


|       | <b>Default IP Address</b> | <b>Netmask</b> |
|-------|---------------------------|----------------|
| LAN 1 | 192.168.3.127             | 255.255.255.0  |
| LAN 2 | 192.168.4.127             | 255.255.255.0  |

Before using the Telnet client, you should change the IP address of your development workstation so that the network ports are on the same subnet as the IP address for the LAN port that you connect to. For example, if you connect to LAN 1, you could set your PC's IP address to 192.168.3.126, and the netmask to 255.255.255.0. If you connect to LAN 2, you can set your PC's IP address to 192.168.4.126, and the netmask to 255.255.255.0.

Use a cross-over Ethernet cable to connect your development workstation directly to the target computer, or use a straight-through Ethernet cable to connect the computer to a LAN hub or switch. Next, use a Telnet client on your development workstation to connect to the target computer. After a connection has been established, type the login name and password as requested to log on to the computer. The default values are both **root**.

**Login: root**

Password: root

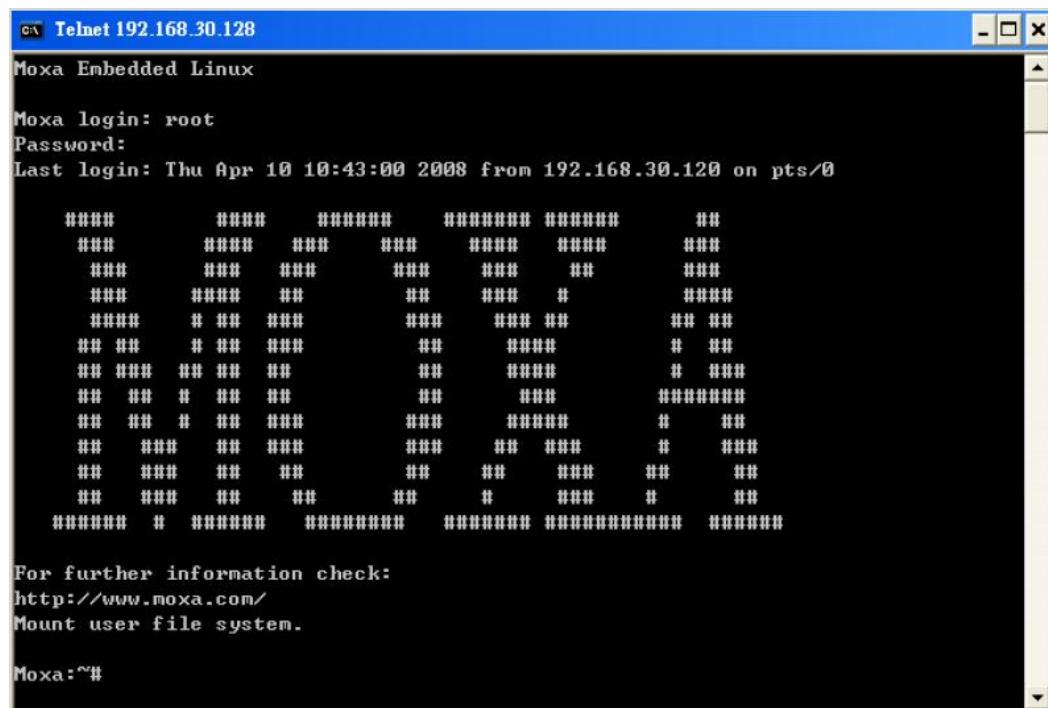


## Connecting from an SSH Console

The V2401/2402-LX computer supports an SSH Console to offer users with better security over the network compared to Telnet.

### Windows Users

Click on the link <http://www.chiark.greenend.org.uk/~sgtatham/putty/download.html> to download PuTTY (free software) to set up an SSH console for the V2401/2402-LX in a Windows environment. The following screen shows an example of the configuration that is required.

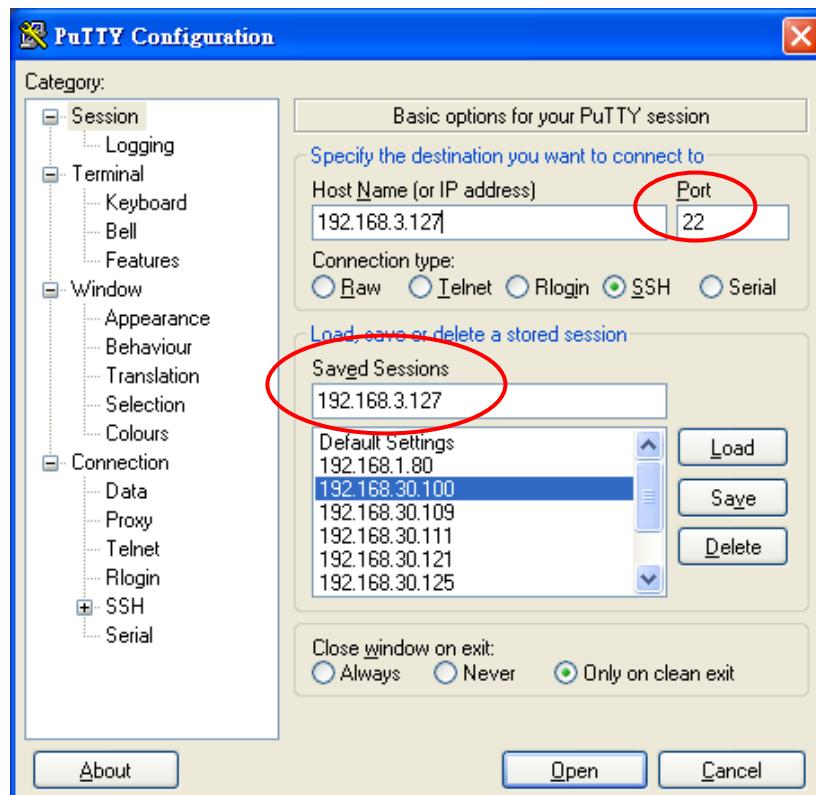

## Linux Users

From a Linux machine, use the **ssh** command to access the V2401/2402-LX's console utility via SSH.

**#ssh 192.168.3.127**

Select **yes** to open the connection.

```
[root@ root]# ssh 192.168.3.127
The authenticity of host '192.168.3.127 (192.168.3.127)'
can't be established.
RSA key fingerprint is
8b:ee:ff:84:41:25:fc:cd:2a:f2:92:8f:cb:1f:6b:2f.
Are you sure you want to continue connection (yes/no)? yes_
```

## Adjusting the System Time

The V2401/2402-LX has two time settings. One is the system time, and the other is provided by an RTC (Real Time Clock) built into the V2401/2402-LX's hardware.

### Setting the Time Manually

Use the **date** command to query the current system time or set a new system time. Use **hwclock** to query the current RTC time or set a new RTC time.

Use the following command to set the system time.

**# date MMDDhhmmYYYY**

MM: Month  
DD: Date  
hhmm: Hour and Minute  
YYYY: Year

Use the following command to write the current system time to the RTC.

**# hwclock -w**

```
MOXA:~# date
Wed Dec 16 03:34:46 CST 2009
MOXA:~# hwclock
Wed 16 Dec 2009 03:35:16 AM CST -0.017600 seconds
MOXA:~# date 121616352009
Wed Dec 16 16:35:00 CST 2009
MOXA:~# hwclock -w
MOXA:~# date ; hwclock
Wed Dec 16 16:36:12 CST 2009
Wed 16 Dec 2009 03:38:13 AM CST -0.016751 seconds
MOXA:~#
```

## NTP Client

The V2401/2402-LX has a built-in NTP (Network Time Protocol) client that is used to initialize a time request to a remote NTP server. Use **ntpdate** to update the system time.

```
#ntpdate time.stdtime.gov.tw
```

```
#hwclock -w
```

Visit <http://www.ntp.org> for more information about NTP and NTP server addresses.

```
MOXA:~# date ; hwclock
Wed Dec 16 16:36:12 CST 2009
Wed 16 Dec 2009 03:38:13 AM CST -0.016751 seconds
MOXA:~#
MOXA:~# ntpdate time.stdtime.gov.tw
16 Dec 03:49:48 ntpdate[2510]: step time server 220.130.158.52
offset 155905087.9
84256 sec
MOXA:~#
MOXA:~# hwclock -w
MOXA:~# date ; hwclock
Wed Dec 16 03:51:07 CST 2009
Wed 16 Dec 2009 03:51:07 AM CST -0.016771 seconds
MOXA:~#
```



### ATTENTION

Before using the NTP client utility, check your IP address and network settings (gateway and DNS) to make sure an Internet connection is available.

## Updating the Time Automatically

This section describes how to use a shell script to update the time automatically.

### Example shell script for updating the system time periodically

```
#!/bin/sh
ntpdate time.stdtime.gov.tw
# You can use the time server's ip address or domain
# name directly. If you use domain name, you must
# enable the domain client on the system by updating
# /etc/resolv.conf file.
hwclock -w
sleep 100
# Updates every 100 seconds. The min. time is 100 seconds.
# Change 100 to a larger number to update RTC less often.
```

Save the shell script using any file name. For example, **fixtime**.

### How to run the shell script automatically when the kernel boots up

Because the root file system is mounted in Read-only mode, we need to re-mount it using writable permission.

```
# mount -o remount,rw /dev/sda1/
```

Copy the example shell script **fixtime** to directory **/etc/init.d**, and then use **chmod 755 fixtime** to change the shell script mode.

```
# chmod 755 fixtime
```

Next, use **vi** editor to edit the file **/etc/inittab**.

```
# vi /etc/inittab
```

Add the following line to the bottom of the file:

```
ntp :2345 :respawn :/etc/init.d/fixtime
```

After you finish writing or modifying the code, remember to execute “**umount /**” to change the root directory back to Read-only mode.

```
# umount /
```

Use the command **#init q** to re-initialize the kernel.

```
# init q
```

## Enabling and Disabling Daemons

The following daemons are enabled when the V2401/2402-LX boots up for the first time.

- **snmpd**      SNMP Agent Daemon
- **telnetd**     Telnet Server/Client Daemon
- **inetd**       Internet Daemons
- **ftpd**        FTP Server/Client Daemon
- **sshd**        Secure Shell Server Daemon
- **httpd**       Apache WWW Server Daemon

Type the command **ps -ef** to list all processes currently running.

```
MOXA:~# ps -ef
UID  PID  PPID   C   STIME    TTY      TIME     CMD
root  1    0    0 18:00 ? 00:00:02 Init [2]
root  2    0    0 18:00 ? 00:00:00 [kthreadd]
root  3    2    0 18:00 ? 00:00:00 [migration/0]
root  4    2    0 18:00 ? 00:00:00 [ksoftirqd/0]
root  5    2    0 18:00 ? 00:00:00 [watchdog/0]
root  6    2    0 18:00 ? 00:00:00 [migration/1]
root  7    2    0 18:00 ? 00:00:00 [ksoftirqd/1]
root  8    2    0 18:00 ? 00:00:00 [watchdog/1]
root  9    2    0 18:00 ? 00:00:00 [events/0]
root 10   2    0 18:00 ? 00:00:00 [events/1]
root 11   2    0 18:00 ? 00:00:00 [khelper]
root 44   2    0 18:00 ? 00:00:00 [kblockd/0]
root 45   2    0 18:00 ? 00:00:00 [kblockd/1]
root 47   2    0 18:00 ? 00:00:00 [kacpid]
root 48   2    0 18:00 ? 00:00:00 [kacpi_notify]
root 118  2    0 18:00 ? 00:00:00 [kseriod]
root 159  2    0 18:00 ? 00:00:00 [pdflush]
root 160  2    0 18:00 ? 00:00:00 [pdflush]
root 161  2    0 18:00 ? 00:00:00 [kswapd0]
root 162  2    0 18:00 ? 00:00:00 [aio/0]
root 163  2    0 18:00 ? 00:00:00 [aio/1]
root 632  2    0 18:00 ? 00:00:00 [ksuspend_usbd]
root 633  2    0 18:00 ? 00:00:00 [khubd]
```

To run a private daemon, you can edit the file **rc.local** as follows:

1. Because the root file system is mounted in Read-only mode, you need to re-mount it with write permission.

```
MOXA:~# mount -o remount,rw /dev/sda1/
```

2. Type **cd /etc/** to change directories.

```
MOXA:~# cd /etc/
```

3. Type **vi rc.local** to edit the configuration file with vi editor.

```
MOXA:/etc/# vi rc.local
```

4. Next, add the application daemon that you want to run. We use the example program **tcps2-release** which you can find in the CD to illustrate, and configure it to run in the background.

```
#!/bin/sh  
# Add you want to run daemon  
/root/tcps2-release &~
```

5. After you finish writing or modifying the code, remember to execute “umount /” to change the root directory back to Read-only mode.

```
MOXA:~# umount /
```

6. You should be able to find the enabled daemon after you reboot the system.

```
MOXA:~# ps -ef
UID      PID    PPID   C   STIME   TTY        TIME     CMD
root       1      0   0 18:00 ? 00:00:02 Init [2]
root       2      0   0 18:00 ? 00:00:00 [kthreadd]
root       3      2   0 18:00 ? 00:00:00 [migration/0]
root       4      2   0 18:00 ? 00:00:00 [ksoftirqd/0]
root       5      2   0 18:00 ? 00:00:00 [watchdog/0]
root       6      2   0 18:00 ? 00:00:00 [migration/1]
root       7      2   0 18:00 ? 00:00:00 [ksoftirqd/1]
root       8      2   0 18:00 ? 00:00:00 [watchdog/1]
root       9      2   0 18:00 ? 00:00:00 [events/0]
root      10      2   0 18:00 ? 00:00:00 [events/1]
root      11      2   0 18:00 ? 00:00:00 [khelper]
root      44      2   0 18:00 ? 00:00:00 [kblockd/0]
root      45      2   0 18:00 ? 00:00:00 [kblockd/1]
root      47      2   0 18:00 ? 00:00:00 [kacpid]
root      48      2   0 18:00 ? 00:00:00 [kacpi_notify]
root     118      2   0 18:00 ? 00:00:00 [kseriod]
root     159      2   0 18:00 ? 00:00:00 [pdfflush]
root     160      2   0 18:00 ? 00:00:00 [pdfflush]
root     161      2   0 18:00 ? 00:00:00 [kswapd0]
root     162      2   0 18:00 ? 00:00:00 [aio/0]
root     163      2   0 18:00 ? 00:00:00 [aio/1]
root     632      2   0 18:00 ? 00:00:00 [ksuspend_usbd]
root     633      2   0 18:00 ? 00:00:00 [khubd]
root    655      2   0 18:00 ? 00:00:00 tcps2-release
```

## Setting the Run-Level

To set the Linux run-level and execution priority of a program, use the following command (because the root file system is mounted in Read-only mode, we need to re-mount it with write permission).

```
MOXA:~# mount -o remount,rw /dev/sdal/
```

Edit a shell script to execute **/root/tcps2-release** and save to **tcps2** as an example.

```
#cd /etc/rc2.d
#ln -s /etc/root/tcps2 S60tcpss2
or
#ln -s /etc/root/tcps2 k30tcpss2
```

```
MOXA:~# cd /etc/rc2.d
MOXA:/etc/rc2.d#
MOXA:/etc/rc2.d# ls
S19nfs-common      S25nfs-user-server  S99showreadyled
S20snmpd          S55ssh
S24pcmcia         S99rmnologin
MOXA:/etc/rc2.d#
MOXA:/etc/rc2.d# ln -s /root/tcps2-release S60tcpss2
MOXA:/etc/rc2.d# ls
S19nfs-common      S25nfs-user-server  S99rmnologin
S20snmpd          S55ssh                S99showreadyled
S24pcmcia         S60tcpss2
MOXA:/etc/rc2.d#
```

The command **SxxRUNFILE** has the following meaning:

**S:** Start the run file while Linux boots up.  
**xx:** A number between 00-99. The smaller number has a higher priority.  
**RUNFILE:** The script file name

The command **KxxRUNFILE** has the following meaning:

**K:** Start the run file while Linux shuts down or halts.  
**xx:** A number between 00-99. The smaller number has a higher priority.  
**RUNFILE:** The script file name

To remove the daemon, remove the run file from /etc/rc2.d by using the following command:

```
MOXA:~# rm -f /etc/rc2.d/S60tcpss2
```

After you finish writing or modifying the code, remember to execute “umount /” to change the root directory back to Read-only mode.

```
MOXA:~# umount /
```

## Cron—Daemon for Executing Scheduled Commands

The Cron daemon will search **/etc/crontab** for crontab files.

Cron wakes up every minute and checks each command to see if it should be run in that minute. When executing commands, output is mailed to the owner of the **crontab** (or to the user named in the MAILTO environment variable in the **crontab**, if such a user exists).

Modify the file **/etc/crontab** to set up your scheduled applications. **Crontab** files have the following format:

| <b>mm</b> | <b>h</b> | <b>dom</b> | <b>mon</b> | <b>dow</b>        | <b>user</b> | <b>command</b> |
|-----------|----------|------------|------------|-------------------|-------------|----------------|
| minute    | hour     | date       | month      | week              | user        | command        |
| 0-59      | 0-23     | 1-31       | 1-12       | 0-6 (0 is Sunday) |             |                |

For example, if you want to launch a program at 8:00 every day

```
#minute hour date month week user command
*       8      *      *      *      root   /path/to/your/program
```

The following example demonstrates how to use **Cron** to update the system time and RTC time every day at 8:00.

1. Write a shell script named **fixtime.sh** and save it to **/home/**.

```
#!/bin/sh
ntpdate time.stdtime.gov.tw
hwclock -w
exit 0
```

2. Change mode of **fixtime.sh**

```
# chmod 755 fixtime.sh
```

3. Modify **/etc/crontab** file to run **fixtime.sh** at 8:00 every day.

Add the following line to the end of crontab:

```
* 8 * * * root /home/fixtime.sh
```

## Inserting a USB Storage Device into the Computer

Since mounting USB storage devices manually can be difficult, a Debian package named **usbmount** to mount the USB drivers automatically. **usbmount** relies on **udev** to mount USB storage devices automatically at certain mount points. The USB storage devices will be mounted on **/media/usb0**, **/media/usb1**, etc.

```
MOXA:~# mount
/dev/sdal on / type ext2 (rw,errors=remount-ro)
tmpfs on /lib/init/rw type tmpfs (rw,nosuid,mode=0755)
proc on /proc type proc (rw,noexec,nosuid,nodev)
sysfs on /sys type sysfs (rw,noexec,nosuid,nodev)
procbususb on /proc/bus/usb type usbfs (rw)
udev on /dev type tmpfs (rw,mode=0755)
tmpfs on /dev/shm type tmpfs (rw,nosuid,nodev)
devpts on /dev/pts type devpts
(rw,noexec,nosuid,gid=5,mode=620)
/dev/hdb2 on /home type ext2 (rw)
nfsd on /proc/fs/nfsd type nfsd (rw)
rpc_pipefs on /var/lib/nfs/rpc_pipefs type rpc_pipefs (rw)
/dev/sdal on /media/usb0 type vfat
(rw,noexec,nodev,sync,noatime,gid=25,dmask=0007,fmask=0117)
/dev/sdb1 on /media/usb1 type vfat
(rw,noexec,nodev,sync,noatime,gid=25,dmask=0007,fmask=0117)
MOXA:~#
```

Note that **usbmount** is a lightweight text mode solution and does not fully support the gnome desktop environment. For improved support, you can install **gnome-volume-manager** instead of **usbmount**:

```
MOXA:~# mount -o,remount rw /
MOXA:~# apt-get remove usbmount
MOXA:~# apt-get install gnome-volume-manager
MOXA:~# umount /
```



### ATTENTION

Remember to type the command # **sync** before you disconnect the USB storage device. If you do not issue the command, you may lose data.



### ATTENTION

Remember to exit the **/media/usb0** or **/media/usb1** directory when you disconnect the USB storage device. If you stay in **/media/usb0** or **/media/usb1**, the automatic un-mount process will fail. If that happens, type # **umount /media/usb0** to un-mount the USB device manually.

## Checking the Linux Version

The program **uname**, which stands for “Unix Name” and is part of the Unix operating system, prints the name, version, and other details about the operating system running on the computer. Use the **-a** option to generate a response similar to the one shown below:

```
MOXA:~# uname -a
Linux Moxa 2.6.26-2-686 #1 SMP Wed Aug 19 06:06:52 UTC 2009
i686 GNU/Linux
MOXA:~#
```

## APT—Installing and Removing Packages

APT is the Debian tool used to install and remove packages. Before installing a package, you need to configure the apt source file, **/etc/apt/sources.list**, which is located in the read-only partition.

1. Mount the root file system with write permission.

```
MOXA:~# mount -o remount,rw /dev/sda1/
```

2. Next, configure the **/etc/apt/sources.list** using **vi** editor.

```
MOXA:~# vi /etc/apt/sources.list

#
# deb cdrom:[Debian GNU/Linux 5.0.2a _Lenny_ - Official i386
NETINST Binary-1 20
090817-16:43]/ lenny main

#deb cdrom:[Debian GNU/Linux 5.0.2a _Lenny_ - Official i386
NETINST Binary-1 200
90817-16:43]/ lenny main

deb http://ftp.us.debian.org/debian/ lenny main
deb-src http://ftp.us.debian.org/debian/ lenny main

deb http://security.debian.org/ lenny/updates main contrib
deb-src http://security.debian.org/ lenny/updates main contrib

deb http://volatile.debian.org/debian-volatile lenny/volatile
main
deb-src http://volatile.debian.org/debian-volatile
lenny/volatile main
```

3. Update the source list after you configure it.

```
MOXA:~# apt-get update
MOXA:~#
```

4. Once you indicate which package you want to install (**openswan**, for example), type:

```
MOXA:~# apt-get install openswan
MOXA:~#
```

5. Use one of the following commands to remove a package:

(a) For a simple package removal:

```
MOXA:~# apt-get remove openswan
MOXA:~#
```

(b) For a complete package removal:

```
MOXA:~# apt-get remove openswan --purge
MOXA:~#
```

6. If the installation is complete, remember to umount the root directory back to read-only mode.

```
MOXA:~# umount /
MOXA:~#
```



#### ATTENTION

The APT cache space **/var/cache/apt** is located in **tmpfs**. If you need to install a huge package, link **/var/cache/apt** to USB mass storage or mount it to an NFS space to generate more free space. Use **df -h** to check how much free space is available on **tmpfs**.

```
MOXA:~# df -h
Filesystem      Size   Used   Avail   Use%   Mounted on
rootfs          1.6G  972M   560M   64%    /
udev             10M   700K   9.4M   7%     /dev
/dev/sda1        1.6G  972M   560M   64%    /
tmpfs            502M   0      502M   0%     /lib/init/rw
tmpfs            502M   0      502M   0%     /dev/shm
none             502M   19M   483M   4%     /tmp
/dev/sda2        199M  125M   63M   67%    /home
MOXA:~#
```



#### ATTENTION

You can free up the cache space with the command **# apt-get clean**

```
MOXA:~# apt-get clean
MOXA:~#
```

## Device Suspend

The V2401/2402-LX supports ACPI S3 (suspend to RAM). You can activate the S3 option in the BIOS and then use the **pm-suspend --quirk-s3-bios** command.

The power button wakes up a suspended V2401/2402-LX.

```
MOXA:~# pm-suspend --quirk-s3-bios
```

If

you login in as the administrator (root) in X windows, you can use **System -> Shutdown> Suspend** to suspend your device. Note that this function does not work for non-root users.

Some components on Moxa's device may need to be reset after a resume. You can include a simple script in **/usr/lib/pm-utils/sleep.d/** to automate this procedure. For example, create a script **99serial** for your application:

```
#!/bin/sh

case "$1" in
    hibernate|suspend)
        echo "operations before serial ports suspend"
        ;;
    thaw|resume)
        echo "operations after serial ports resume"
        ;;
    *) exit $NA
        ;;
esac
```

# 3

## Managing Communications

---

The V2401/2402-LX ready-to-run embedded computer is a network-centric platform designed to serve as a front-end for data acquisition and industrial control applications. This chapter describes how to configure the various communication functions supported by the Linux operating system.

This chapter covers the following topics:

- ❑ **Changing the Network Settings**
  - Changing the “interfaces” Configuration File
  - Adjusting IP Addresses with “ifconfig”
- ❑ **Serial Port Operation Mode**
- ❑ **Telnet/FTP Server**
- ❑ **DNS Client**
- ❑ **Apache Web Server**
  - Default Homepage
  - Disabling the CGI Function
- ❑ **IPTABLES**
  -

- IPTABLES Hierarchy
  - IPTABLES Modules
  - Observe and Erase Chain Rules
  - Define Policy for Chain Rules
  - Append or Delete Rules
- ❑ NAT (**Network Address Translation**)
  - NAT Example
  - Enabling NAT at Bootup
- ❑ PPP (**Point to Point Protocol**)
  - Connecting to a PPP Server over a Simple Dial-up Connection
  - Connecting to a PPP Server over a Hard-wired Link
  - Checking the Connection
  - Setting up a Machine for Incoming PPP Connections
- ❑ PPPoE
- ❑ NFS (**Network File System**) Client
- ❑ SNMP (**Simple Network Management Protocol**)
- ❑ OpenVPN
  - Ethernet Bridging for Private Networks on Different Subnets
  - Ethernet Bridging for Private Networks on the Same Subnet
  - Routed IP

## Changing the Network Settings

The V2401/2402-LX computer has four basic Gigabit Ethernet ports named LAN1 to LAN2. The default IP addresses and netmasks of the network interfaces are as follows:

|       | Default IP Address | Netmask       |
|-------|--------------------|---------------|
| LAN 1 | 192.168.3.127      | 255.255.255.0 |
| LAN 2 | 192.168.4.127      | 255.255.255.0 |

These network settings can be modified by changing the **interfaces** configuration file, or they can be adjusted temporarily with the **ifconfig** command.

### Changing the “interfaces” Configuration File

1. Type **cd /etc/network** to change directory.

```
MOXA:~# cd /etc/network
```

2. Type **vi interfaces** to edit the network configuration file with **vi** editor. You can configure the V2401/2402-LX’s Ethernet ports for static or dynamic (DHCP) IP addresses.

```
MOXA:/etc/network# vi interfaces
```

### Static IP Address

As shown in the example shown below, the default static IP addresses can be modified.

```
# The loopback network interface
auto lo
iface lo inet loopback

# The primary network interface
auto eth0
iface eth0 inet static
    address 192.168.3.127
    netmask 255.255.255.0
    broadcast 192.168.3.255

auto eth1
iface eth1 inet static
    address 192.168.4.127
    netmask 255.255.255.0
    broadcast 192.168.4.255
```

## Dynamic IP Address using DHCP

To configure one or both LAN ports to request an IP address dynamically, replace **static** with **dhcp** and then delete the rest of the lines.

```
# The primary network interface
allow-hotplug eth0
iface eth0 inet dhcp
```

After modifying the boot settings of the LAN interface, issue the following command to activate the LAN settings immediately.

```
# /etc/init.d/networking restart
```

```
MOXA:~# /etc/init.d/networking restart
```

## Adjusting IP Addresses with “ifconfig”

IP settings can be adjusted during run-time, but the new settings will not be saved to the flash ROM without modifying the file **/etc/network/interfaces**. For example, type the command **# ifconfig eth0 192.168.1.1** to change the IP address of LAN1 to 192.168.1.1.

```
MOXA:~# ifconfig eth0 192.168.1.1
MOXA:~#
```

## Serial Port Operation Mode

The V2401/2402 computer has four serial ports named COM1, COM2, COM3, and COM4. The ports support RS-232, RS-422, 2-wire RS-485, and 4-wire RS-485 operation modes with baudrate settings up to 921600 bps.

By default, the serial interface is set to RS-232. You can use the **setinterface** command to change the serial port operation mode, as indicated below:

**setinterface device-node [interface-no]**

device-node: /dev/ttyMn; n = 0,1,2,...  
 interface-no: [see following table]:

| interface-no | Operation Mode          |
|--------------|-------------------------|
| None         | Display current setting |
| 0            | RS-232                  |
| 1            | 2-wire RS-485           |
| 2            | RS-422                  |
| 3            | 4-wire RS-485           |

For example, use the following commands to set **/dev/ttyM0** to RS-422:

```
MOXA:/ dev# setinterface /dev/ttyM0
Usage: setinterface device-node [interface-no]
        device-node      - /dev/ttyM0 ~ /dev/ttyM3
        interface-no     - following:
        0   - set to RS232 interface
        1   - set to RS485-2 WIRES interface
        2   - set to RS422 interface
        3   - set to RS885-4 WIRES interface
MOXA:/ dev# setinterface /dev/ttyM0 0
MOXA:/ dev# setinterface /dev/ttyM0 2
```

The V2401-LX contains an additional RS-232 connector to connect eight RS-232 devices. The corresponding device nodes in Linux are **ttyM8** to **ttyM15**.

## Telnet/FTP Server

In addition to supporting Telnet client/server and FTP client/server, the V2401/2402-LX also supports SSH and sftp client/server. To enable or disable the Telnet/ftp server, you need to edit the file **/etc/inetd.conf**.

1. Mount the root file system with write permission.

```
MOXA:~# mount -o remount,rw /dev/sdal /
```

2. Type **# cd /etc** to change the directory.

```
MOXA:~# cd /etc
```

3. Type **# vi inetd.conf** to edit the configuration file.

```
MOXA:/etc# vi inetd.conf
```

### Enabling the Telnet/FTP Server

The following example shows the default content of the file **/etc/inetd.conf**. The default is to “enable the Telnet/ftp server:”

```
discard dgram udp wait root /bin/discard
discard stream tcp nowait root /bin/discard
telnet stream tcp nowait root /bin/telnetd
ftp stream tcp nowait root /bin/ftpd -l
```

### Disabling the Telnet/FTP Server

Disable the daemon by typing “#” in front of the first character of the row to comment out the line. For example, to disable the **FTP** server, use the following commands:

```
discard dgram udp wait root /bin/discard  
discard stream tcp nowait root /bin/discard  
telnet stream tcp nowait root /bin/telnetd  
#ftp stream tcp nowait root /bin/ftpd -l
```

After you finish writing or modifying the code, remember to execute “umount /” to change the root directory back to Read-only mode.

```
MOXA:~# umount /
```

## DNS Client

The V2401/2402-LX supports DNS client (but not DNS server). To set up DNS client, you need to edit three configuration files: **/etc/hostname**, **/etc/resolv.conf**, and **/etc/nsswitch.conf**.

### **/etc/hostname**

1. Mount the root file system with write permission.

```
MOXA:~# mount -o remount,rw /dev/sdal/
```

2. Edit **/etc/hostname**:

```
MOXA:~# vi /etc/hostname  
MOXA
```

3. After you finish writing or modifying the code, remember to execute “umount /” to change the root directory back to Read-only mode.

```
MOXA:~# umount /
```

4. Re-configure the hostname.

```
MOXA:~# /etc/init.d/hostname.sh start
```

5. Check the new hostname.

```
MOXA:~# hostname
```

## /etc/resolv.conf

This is the most important file that you need to edit when using DNS. For example, before you using # **ntpdate time.stdtime.gov.tw** to update the system time, you will need to add the DNS server address to the file. Ask your network administrator which DNS server address you should use. The DNS server's IP address is specified with the **nameserver** command. For example, add the following line to /etc/resolv.conf (assuming the DNS server's IP address is 168.95.1.1):

**nameserver 168.95.1.1**

```
MOXA:/etc# cat resolv.conf
#
# resolv.conf  This file is the resolver configuration file
# See resolver(5).
#
#nameserver 192.168.1.16
nameserver 168.95.1.1
nameserver 140.115.1.31
nameserver 140.115.236.10
MOXA:/etc#
```

## /etc/nsswitch.conf

This file defines the sequence of files, **/etc/hosts** or **/etc/resolv.conf**, to be read to resolve the IP address.

The **hosts** line in **/etc/nsswitch.conf** means use **/etc/host** first and DNS service to resolve the address.

```
# /etc/nsswitch.conf
#
# Example configuration of GNU Name Service Switch
functionality.
# If you have the `glibc-doc-reference` and `info` packages
installed, try:
# `info libc "Name Service Switch"' for information about this
file.

passwd:            compat
group:             compat
shadow:            compat

hosts:              files dns
UID      PID      PPID    C    STIME   TTY        TIME     CMD
root     1         0  0 18:00 ? 00:00:02 Init [2]
root     2         0  0 18:00 ? 00:00:00 [kthreadd]
root     3         2  0 18:00 ? 00:00:00 [migration/0]
root     4         2  0 18:00 ? 00:00:00 [ksoftirqd/0]
root     5         2  0 18:00 ? 00:00:00 [watchdog/0]
root     6         2  0 18:00 ? 00:00:00 [migration/1]
root     7         2  0 18:00 ? 00:00:00 [ksoftirqd/1]
```

## Apache Web Server

### Default Homepage

The Apache web server's main configuration file is **/etc/apache2/sites-enabled/000-default**, with the default homepage located at **/var/www/apache2-default/index.html**.

Save your own homepage to the following directory:

**/var/www/apache2-default**

Save your CGI page to the following directory:

**/var/www/apache2-default/cgi-bin/**

Before you modify the homepage, use a browser (such as Microsoft Internet Explore or Mozilla Firefox) from your PC to test if the Apache web server is working. Type the LAN1 IP address in the browser's address box to open the homepage. For example, if the default IP address 192.168.3.127 is still active, type:

**http://192.168.3.127/**

To test the default CGI page, type:

**http://192.168.3.127/cgi-bin/w3mmail.cgi**

### Disabling the CGI Function

The CGI function is enabled by default. If you want to disable the function, modify the file **/etc/apache2/sites-enabled/000-default**.

1. Mount the root file system with write permission.

```
MOXA:~# mount -o remount,rw /dev/sda1/
```

2. Type **# vi/etc/apache2/sites-enabled/000-default** to edit the configuration file.

Comment on the following lines:

```
#ScriptAlias /cgi-bin/ /var/www/apache2-default/cgi-bin/
#<Directory "/var/www/apache2 default/cgi-bin/">
# AllowOverride None
# Options ExecCGI -MultiViews +SymLinksIfOwnerMatch
# #Order allow,deny
# Order deny,allow
# Allow from all
#</Directory>
```


```
MOXA:/etc# vi /etc/apache2/sites-available/default
#ScriptAlias /cgi-bin/ /var/www/apache2-default/cgi-bin/
#<Directory "/var/www/apache2 default/cgi-bin/">
#     AllowOverride None
#     Options ExecCGI -MultiViews +SymLinksIfOwnerMatch
#     #Order allow,deny
#     Order deny,allow
#     Allow from all
#</Directory>
```

3. After you finish writing or modifying the code, remember to execute “umount /” to change the root directory back to Read-only mode.

```
MOXA:~# umount /
```

4. Re-start the apache server.

```
MOXA:~# /etc/init.d/apache2 restart
```

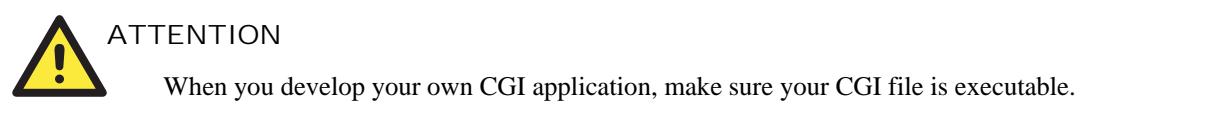

## Saving Web Pages to a USB Storage Device

Some applications may have web pages that take up a lot of memory space. This section describes how to save web pages to the USB mass storage device, and then configure the Apache web server's DocumentRoot to open these pages. The files used in this example can be downloaded from Moxa's website.

1. Prepare the web pages and then save the pages to the USB storage device. Click on the following link to download the web page test suite:  
<http://www.w3.org/MarkUp/Test/HTML401.zip>.
2. Uncompress the zip file to your desktop PC, and then use FTP to transfer it to the V2401/2402-LX's **/media/usb0** directory.
3. Mount the root file system with write permission.

```
MOXA:~# mount -o remount,rw /dev/sdal/
```

4. Type **# vi/etc/apache2/sites-enabled/000-default** to edit the configuration file.

```
MOXA:/etc# vi /etc/apache2/sites-enabled/000-default
```

5. Change the DocumentRoot directory to the USB storage directory /media/usb0/www.

```
...
<VirtualHost *:80>
...
...
    DocumentRoot /media/usb0/www
    <Directory />
        Options FollowSymLinks
        AllowOverride None
    </Directory>
...
...
    ScriptAlias /cgi-bin/ /media/usb0/www/cgi-bin/
    <Directory "/media/usb0/www/cgi-bin/">
        AllowOverride None
        Options ExecCGI -MultiViews +SymLinksIfOwnerMatch
        Order allow,deny
        Allow from all
    </Directory>
...
</VirtualHost>
...
<VirtualHost *:443>
...
...
    DocumentRoot /media/usb0/www
    <Directory />
        Options FollowSymLinks
        AllowOverride None
    </Directory>
...
...
    ScriptAlias /cgi-bin/ /media/usb0/www/cgi-bin/
    <Directory "/media/usb0/wwwz/cgi-bin/">
        AllowOverride None
        Options ExecCGI -MultiViews +SymLinksIfOwnerMatch
        Order allow,deny
        Allow from all
    </Directory>
...
</VirtualHost>
```

6. Use the following commands to restart the Apache web server:

```
#cd /etc/init.d  
#./apache2 restart
```

7. Open your browser and connect to the V2401/2402-LX by typing the current LAN1 IP address in the browser's address box.
8. After finishing modification or writing, remember to execute “umount /” to change the root directory back to Read-only mode.

```
MOXA:~# umount /
```

9. Re-start the apache server.

```
MOXA:~# /etc/init.d/apache2 restart
```



#### ATTENTION

Visit the Apache website at <http://httpd.apache.org/docs/> for more information about setting up Apache servers.

## IPTABLES

IPTABLES is an administrative tool for setting up, maintaining, and inspecting the Linux kernel's IP packet filter rule tables. Several different tables are defined, with each table containing built-in chains and user-defined chains.

Each chain is a list of rules that apply to a certain type of packet. Each rule specifies what to do with a matching packet. A rule (such as a jump to a user-defined chain in the same table) is called a **target**.

The V2401/2402-LX supports three types of IPTABLES: Filter tables, NAT tables, and Mangle tables.

#### Filter Table—includes three chains:

INPUT chain  
OUTPUT chain  
FORWARD chain

#### NAT Table—includes three chains:

PREROUTING chain—transfers the destination IP address (DNAT).  
POSTROUTING chain—works after the routing process and before the Ethernet device process to transfer the source IP address (SNAT).  
OUTPUT chain—produces local packets.

## Sub-tables

Source NAT (SNAT)—changes the first source IP address of the packet.

Destination NAT (DNAT)—changes the first destination IP address of the packet.

MASQUERADE—a special form for SNAT. If one host can connect to the Internet, then the other computers that connect to this host can connect to the Internet when the computer does not have an actual IP address.

REDIRECT—a special form of DNAT that re-sends packets to a local host independent of the destination IP address.

## Mangle Table—includes two chains


PREROUTING chain—pre-processes packets before the routing process.

OUTPUT chain—processes packets after the routing process.

Mangle tables can have one of three extensions—TTL, MARK, TOS.

## IPTABLES Hierarchy

The following figure shows the IPTABLES hierarchy.

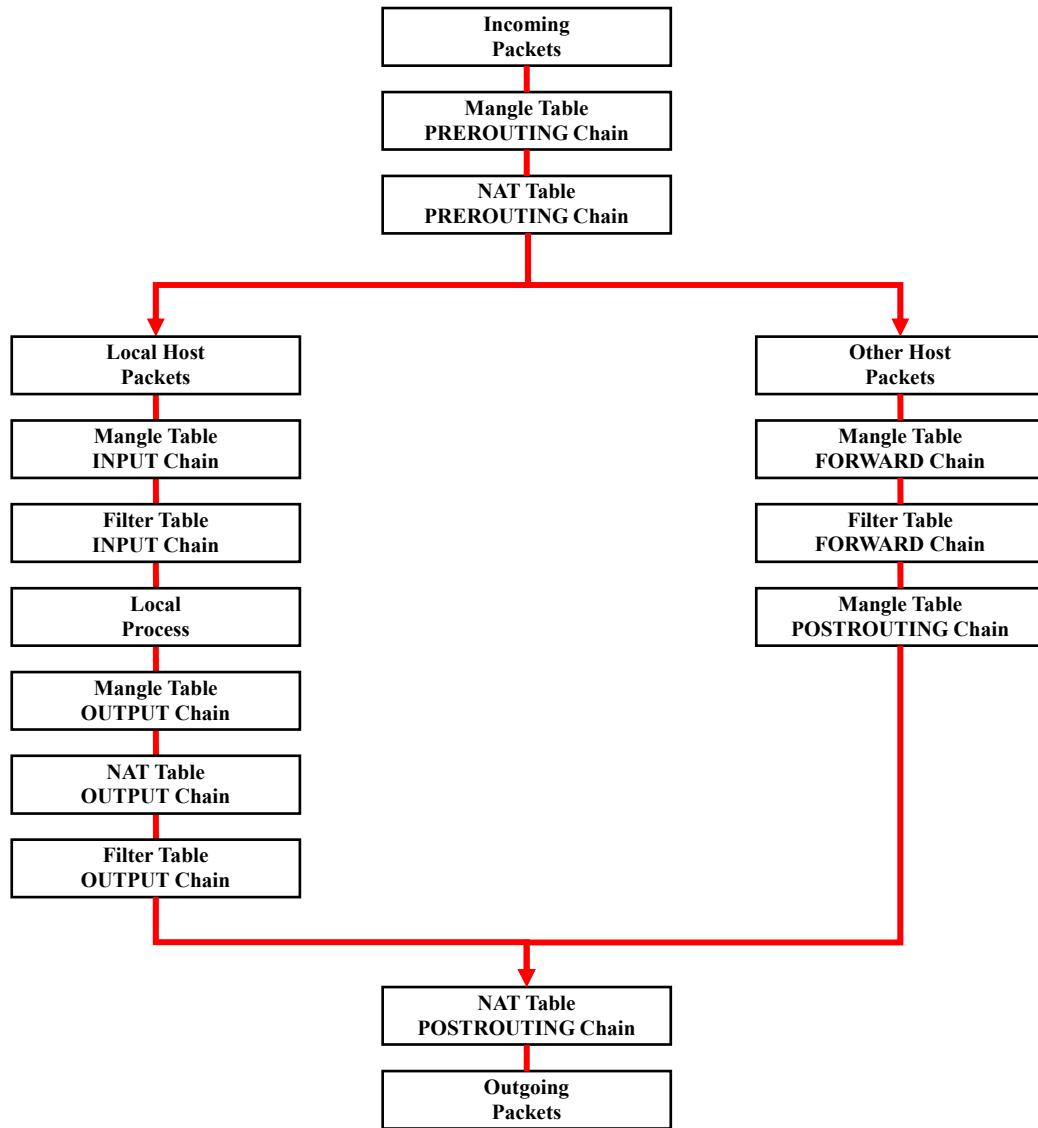

## IPTABLES Modules

The V2401/2402-LX supports the following sub-modules. Be sure to use the module that matches your application.

|                            |                         |                      |                            |
|----------------------------|-------------------------|----------------------|----------------------------|
| arpable_filter.ko          | arp_tables.ko           | arpt_mangle.ko       | ip_conntrack_amanda.ko     |
| ip_conntrack_ftp.ko        | ip_conntrack_h323.ko    | ip_conntrack_irc.ko  | ip_conntrack.ko            |
| ip_conntrack_netbios_ns.ko | ip_conntrack_netlink.ko | ip_conntrack_pptp.ko | ip_conntrack_proto_sctp.ko |
| ip_conntrack_sip.ko        | ip_conntrack_tftp.ko    | ip_nat_amanda.ko     | ip_nat_ftp.ko              |
| ip_nat_h323.ko             | ip_nat_irc.ko           | ip_nat.ko            | ip_nat_pptp.ko             |
| ip_nat_sip.ko              | ip_nat_snmp_basic.ko    | ip_nat_tftp.ko       | ip_queue.ko                |
| iptable_filter.ko          | iptable_mangle.ko       | iptable_nat.ko       | iptable_raw.ko             |
| ip_tables.ko               | ipt_addrtpe.ko          | ipt_ah.ko            | ipt_CLUSTERIP.ko           |
| ipt_dscp.ko                | ipt_DSCP.ko             | ipt_ecn.ko           | ipt_ECN.ko                 |
| ipt_hashlimit.ko           | ipt_iprange.ko          | ipt_LOG.ko           | ipt_MASQUERADE.ko          |
| ipt_NETMAP.ko              | ipt_owner.ko            | ipt_recent.ko        | ipt_REDIRECT.ko            |
| ipt_REJECT.ko              | ipt_SAME.ko             | ipt_TCPMSS.ko        | ipt_tos.ko                 |
| ipt_TOS.ko                 | ipt_ttl.ko              | ipt_TTL.ko           | ipt_ULOG.ko                |

The basic syntax to enable and load an IPTABLES module is as follows:

```
# lsmod
# modprobe ip_tables
# modprobe iptable_filter
#modprobe iptable_mangle
#modprobe iptable_nat
```

Use **lsmod** to check if the **ip\_tables** module has already been loaded in the V2401/2402-LX. Use **modprobe** to insert and enable the module.

Use **iptables**, **iptables-restore**, **iptables-save** to maintain the database.



### ATTENTION

IPTABLES plays the role of packet filtering or NAT. Be careful when setting up the IPTABLES rules. If the rules are not correct, remote hosts that connect via a LAN or PPP may be denied. We recommend using the VGA console to set up the IPTABLES. Click on the following links for more information about IPTABLES.

<http://www.linuxguruz.com/iptables/>  
<http://www.netfilter.org/documentation/HOWTO//packet-filtering-HOWTO.html>

Since the IPTABLES command is very complex, to illustrate the IPTABLES syntax we have divided our discussion of the various rules into three categories: Observe and erase chain rules, Define policy rules, and Append or delete rules.

## Observe and Erase Chain Rules

**Usage:**

**# iptables [-t tables] [-L] [-n]**

- t tables: Table to manipulate (default: ‘filter’); example: nat or filter.
- L [chain]: List List all rules in selected chains. If no chain is selected, all chains are listed.
- n: Numeric output of addresses and ports.

**# iptables [-t tables] [-F|X|Z]**

- F: Flush the selected chain (all the chains in the table if none is listed).
- X: Delete the specified user-defined chain.
- Z: Set the packet and byte counters in all chains to zero.

**Examples:**

**# iptables -L -n**

In this example, since we do not use the -t parameter, the system uses the default “filter” table. Three chains are included: INPUT, OUTPUT, and FORWARD. INPUT chains are accepted automatically, and all connections are accepted without being filtered.

```
# iptables -F  
# iptables -X  
# iptables -Z
```

## Define Policy for Chain Rules

**Usage:**

**# iptables [-t tables] [-P] [INPUT, OUTPUT, FORWARD, PREROUTING, OUTPUT, POSTROUTING] [ACCEPT, DROP]**

- P: Set the policy for the chain to the given target.
- INPUT: For packets coming into the V2401/2402-I-LX.
- OUTPUT: For locally-generated packets.
- FORWARD: For packets routed out through the V2401/2402-I-LX.
- PREROUTING: To alter packets as soon as they come in.
- POSTROUTING: To alter packets as they are about to be sent out.

**Examples:**

```
#iptables -P INPUT DROP  
#iptables -P OUTPUT ACCEPT  
#iptables -P FORWARD ACCEPT  
#iptables -t nat -P PREROUTING ACCEPT  
#iptables -t nat -P OUTPUT ACCEPT  
#iptables -t nat -P POSTROUTING ACCEPT
```

In this example, the policy accepts outgoing packets and denies incoming packets.

## Append or Delete Rules

### Usage:

```
# iptables [-t table] [-AI] [INPUT, OUTPUT, FORWARD] [-io interface] [-p tcp, udp, icmp, all] [-s IP/network] [--sport ports] [-d IP/network] [--dport ports] -j [ACCEPT, DROP]
```

- A: Append one or more rules to the end of the selected chain.
- I: Insert one or more rules in the selected chain as the given rule number.
- i: Name of an interface via which a packet is going to be received.
- o: Name of an interface via which a packet is going to be sent.
- p: The protocol of the rule or of the packet to check.
- s: Source address (network name, host name, network IP address, or plain IP address).
- sport: Source port number.
- d: Destination address.
- dport: Destination port number.
- j: Jump target. Specifies the target of the rules; i.e., how to handle matched packets.

For example, ACCEPT the packet, DROP the packet, or LOG the packet.

### Examples:

Example 1: Accept all packets from the lo interface.

```
# iptables -A INPUT -i lo -j ACCEPT
```

Example 2: Accept TCP packets from 192.168.0.1.

```
# iptables -A INPUT -i eth0 -p tcp -s 192.168.0.1 -j ACCEPT
```

Example 3: Accept TCP packets from Class C network 192.168.1.0/24.

```
# iptables -A INPUT -i eth0 -p tcp -s 192.168.1.0/24 -j ACCEPT
```

Example 4: Drop TCP packets from 192.168.1.25.

```
# iptables -A INPUT -i eth0 -p tcp -s 192.168.1.25 -j DROP
```

Example 5: Drop TCP packets addressed for port 21.

```
# iptables -A INPUT -i eth0 -p tcp --dport 21 -j DROP
```

Example 6: Accept TCP packets from 192.168.0.24 to V2401/2402-I-LX's port 137, 138, 139

```
# iptables -A INPUT -i eth0 -p tcp -s 192.168.0.24 --dport 137:139 -j ACCEPT
```

Example 7: Log TCP packets that visit V2401/2402-I-LX's port 25.

```
# iptables -A INPUT -i eth0 -p tcp --dport 25 -j LOG
```

Example 8: Drop all packets from MAC address 01:02:03:04:05:06.

```
# iptables -A INPUT -i eth0 -p all --mac-source 01:02:03:04:05:06 -j DROP
```



### ATTENTION

In Example 8, remember to issue the command `# modprobe ipt_mac` first to load the module `ipt_mac`.

## NAT (Network Address Translation)

The NAT (Network Address Translation) protocol translates IP addresses used on one network into IP addresses used on a connecting network. One network is designated the inside network and the other is the outside network. Typically, the V2401/2402-LX connects several devices on a network and maps local inside network addresses to one or more global outside IP addresses, and un-maps the global IP addresses on incoming packets back into local IP addresses.




### ATTENTION

Click on the following links for more information about NAT.

<http://www.netfilter.org/documentation/HOWTO//packet-filtering-HOWTO.html>

## NAT Example

The IP address of all packets leaving LAN1 are changed to **192.168.3.127** (you will need to load the module **ipt\_MASQUERADE**):

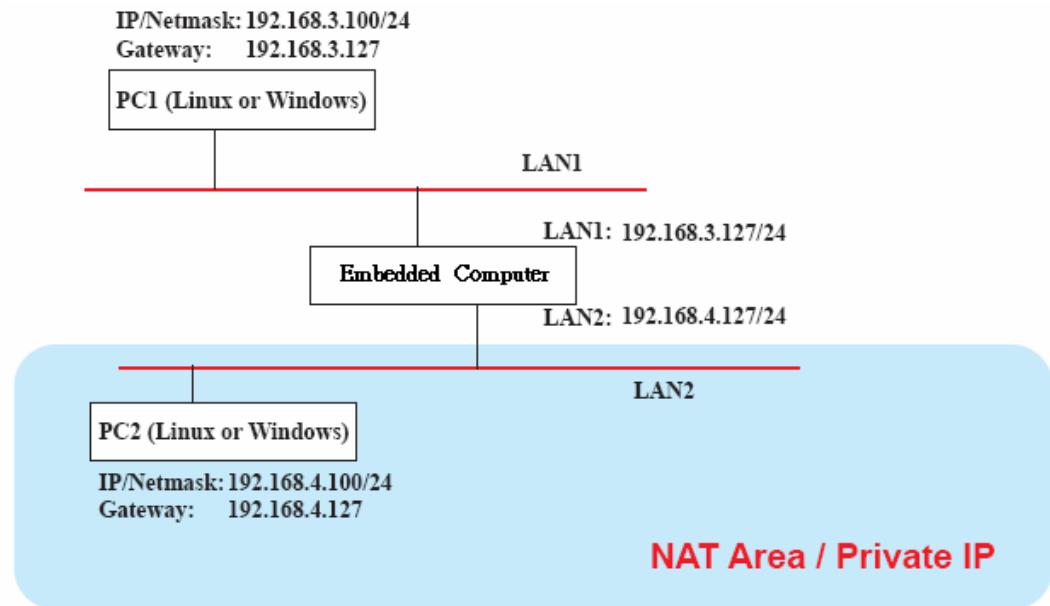

```
#echo 1 > /proc/sys/net/ipv4/ip_forward
#modprobe ipt_MASQUERADE
#iptables -t nat -A POSTROUTING -o eth0 -j MASQUERADE
```

## Enabling NAT at Bootup

In most real world situations, you will want to use a simple shell script to enable NAT when the V2401/2402-LX boots up. The following script is an example.

```
#!/bin/bash
# If you put this shell script in the /home/nat.sh
# Remember to chmod 744 /home/nat.sh
# Edit the rc.local file to make this shell startup automatically.
# vi /etc/rc.local
# Add a line in the end of rc.local /home/nat.sh

EXIF= "eth0" #This is an external interface for setting up a valid IP address.
EXNET= "192.168.4.0/24" #This is an internal network address.

# Step 1. Insert modules.

# Here 2> /dev/null means the standard error messages will be dump to null device.

modprobe ip_tables 2>/dev/null
modprobe ip_nat_ftp 2>/dev/null
modprobe ip_nat_irc 2>/dev/null
modprobe ip_conntrack 2>/dev/null
modprobe ip_conntrack_ftp 2>/dev/null
modprobe ip_conntrack_irc 2>/dev/null

# Step 2. Define variables, enable routing and erase default rules.

PATH=/bin:/sbin:/usr/bin:/usr/sbin:/usr/local/bin:/usr/local/sbin
export PATH
echo "1" > /proc/sys/net/ipv4/ip_forward
/sbin/iptables -F
/sbin/iptables -X
/sbin/iptables -Z
/sbin/iptables -F -t nat
/sbin/iptables -X -t nat
/sbin/iptables -Z -t nat
/sbin/iptables -P INPUT ACCEPT
/sbin/iptables -P OUTPUT ACCEPT
/sbin/iptables -P FORWARD ACCEPT
/sbin/iptables -t nat -P PREROUTING ACCEPT
/sbin/iptables -t nat -P POSTROUTING ACCEPT
/sbin/iptables -t nat -P OUTPUT ACCEPT

# Step 3. Enable IP masquerade.
```

## PPP (Point to Point Protocol)

PPP (Point to Point Protocol) is used to run IP (Internet Protocol) and other network protocols over a serial link. PPP can be used for direct serial connections (using a null-modem cable) over a Telnet link, and links established using a modem over a telephone line.

Modem/PPP access is almost identical to connecting directly to a network through the V2401/2402-LX's Ethernet port. Since PPP is a peer-to-peer system, the V2401/2402-LX can also use PPP to link two networks (or a local network to the Internet) to create a Wide Area Network (WAN).



### ATTENTION

Click on the following links for more information about PPP.

<http://tldp.org/HOWTO/PPP-HOWTO/index.html>  
<http://axion.physics.ubc.ca/ppp-linux.html>

## Connecting to a PPP Server over a Simple Dial-up Connection

The following command is used to connect to a PPP server by modem. Use this command for old ppp servers that prompt for a login name (replace "username" with the correct name) and password (replace "password" with the correct password). Note that "debug crtsets" and "defaultroute 192.1.1.17" are optional.

```
#pppd connect 'chat -v " ATDT5551212 CONNECT " oin: username word: password'
/dev/ttyS0 115200 debug crtsets modem defaultroute 192.1.1.17
```

If the PPP server does not prompt for the username and password, the command should be entered as follows. Replace "username" with the correct username and replace "password" with the correct password.

```
#pppd connect 'chat -v " ATDT5551212 CONNECT " user username password password
/dev/ttyS0 115200 crtsets modem
```

The pppd options are described below:

**connect 'chat etc...'** This option gives the command to contact the PPP server. The **chat** program is used to dial a remote computer. The entire command is enclosed in single quotes because pppd expects a one-word argument for the **connect** option. The options for **chat** are given below:

**-v** verbose mode; log what we do to syslog  
" " Double quotes—don't wait for a prompt, but instead do ... (Note that you must include a space after the second quotation mark)

**ATDT5551212** Dial the modem, and then ...

**CONNECT** Wait for an answer.

" " Send a return (null text followed by the usual return)

**oin: username word: password**  
Log in with username and password.

Refer to the chat man page, chat.8, for more information about the **chat** utility.

**/dev/** Specify the callout serial port.

|                     |   |
|---------------------|---|
| <b>115200</b>       | The baud rate.  |
| <b>debug</b>        | Log status in syslog.   |
| <b>crtsets</b>      | Use hardware flow control between computer and modem<br>(at 115200 this is a must).   |
| <b>modem</b>        | Indicates that this is a modem device; pppd will hang up the phone before<br>and after making the call.   |
| <b>defaultroute</b> | Once the PPP link is established, make it the default route; if you have a PPP<br>link to the Internet, this is probably what you want.   |
| <b>192.1.1.17</b>   | This is a degenerate case of a general option of the form x.x.x.x:y.y.y.y. Here<br>x.x.x.x is the local IP address and y.y.y.y is the IP address of the remote end<br>of the PPP connection. If this option is not specified, or if just one side is<br>specified, then x.x.x.x defaults to the IP address associated with the local<br>machine's hostname (located in /etc/hosts), and y.y.y.y is determined by the<br>remote machine. |

## Connecting to a PPP Server over a Hard-wired Link

If a username and password are not required, use the following command (note that **noipdefault** is optional):

```
#pppd connect 'chat -v" " " " ' noipdefault /dev/tty 19200 crtsets
```

If a username and password is required, use the following command (note that **noipdefault** is optional, and root is both the username and password):

```
#pppd connect 'chat -v" " " " ' user root password root noipdefault /dev/ttys0 19200 crtsets
```

## Checking the Connection

Once you have set up a PPP connection, there are some steps you can take to test the connection. First, type:

```
#sbin/ifconfig
```

Depending on your distribution, the command might be located elsewhere. After executing the command, you should be able to see all of the network interfaces that are UP.

**ppp0** should be one of them, and you should recognize the first IP address as your own and the **P-t-P address** (point-to-point address, the address of your server). The output is similar to the following:

```
lo      Link encap Local Loopback
        inet addr 127.0.0.1   Bcast 127.255.255.255 Mask
255.0.0.0
        UP LOOPBACK RUNNING   MTU 2000   Metric 1
        RX packets 0 errors 0 dropped 0 overrun 0

ppp0    Link encap Point-to-Point Protocol
        inet addr 192.76.32.3   P-t-P 129.67.1.165 Mask
255.255.255.0
        UP POINTOPOINT RUNNING   MTU 1500   Metric 1
        RX packets 33 errors 0 dropped 0 overrun 0
        TX packets 42 errors 0 dropped 0 overrun 0
```

Now, type:

**#ping z.z.z.z**

where z.z.z.z is the address of your name server. The output is similar to the following:

```
MOXA:~# ping 129.67.1.165
PING 129.67.1.165 (129.67.1.165): 56 data bytes
64 bytes from 129.67.1.165: icmp_seq=0 ttl=225 time=268 ms
64 bytes from 129.67.1.165: icmp_seq=1 ttl=225 time=247 ms
64 bytes from 129.67.1.165: icmp_seq=2 ttl=225 time=266 ms
^C
--- 129.67.1.165 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max = 247/260/268 ms
MOXA:~#
```

Try typing:

**#netstat -nr**

This should show three routes similar to the following:

| Kernel routing table |              |                 |       |        |     |      |      |
|----------------------|--------------|-----------------|-------|--------|-----|------|------|
| Destination          | Gateway      | Genmask         | Flags | Metric | Ref | Use  |      |
| iface                |              |                 |       |        |     |      |      |
| 129.67.1.165         | 0.0.0.0      | 255.255.255.255 | UH    | 0      | 0   | 6    | ppp0 |
| 127.0.0.0            | 0.0.0.0      | 255.0.0.0       | U     | 0      | 0   | 0    | lo   |
| 0.0.0.0              | 129.67.1.165 | 0.0.0.0         | UG    | 0      | 0   | 6298 | ppp0 |

If your output looks similar but does not have the “destination 0.0.0.0” line (which refers to the default route used for connections), you may have run pppd without the **defaultroute** option. At this point, you can try using Telnet, ftp, or finger, bearing in mind that you will have to use numeric IP addresses unless you have configured **/etc/resolv.conf** correctly.

## Setting up a Machine for Incoming PPP Connections

### Method 1: pppd dial-in with pppd commands

This first example applies to using a modem, and requiring authorization with a username and password.

```
#pppd /dev/ttyS0 115200 crtscs modem 192.168.16.1:192.168.16.2 login auth
```

You should also add the following line to the file `/etc/ppp/pap-secrets`:

```
* * " "
```

The first star (\*) lets everyone login. The second star (\*) lets every host connect. The pair of double quotation marks ("") indicates that the file `/etc/passwd` can be used to check the password. The last star (\*) is to let any IP connect.

The following example does not check the username and password:

```
# pppd/dev/ttyS0 115200 crtscs modem 192.168.16.1:192.168.16.2
```

### Method 2: pppd dial-in with pppd script

Configure a dial-in script `/etc/ppp/peer/dialin`

```
# You usually need this if there is no PAP authentication
noauth
#auth
#login

# The chat script (be sure to edit that file, too!)
init "/usr/sbin/chat -v -f /etc/ppp/ppp-ttyM0.chat"

# Set up routing to go through this PPP link
defaultroute

# Default modem (you better replace this with /dev/ttySx! )
/dev/ttyM0

# Speed
115200

# Keep modem up even if connection fails
persist
crtscs
modem
192.168.16.1:192.168.16.2
debug
-detach
```

Configure the chat script `/etc/ppp/ppp-ttyM0.chat`

```
SAY      'Auto Answer ON\n'
''      ATS0=1
```

Start the `pppd` dial-in service.

```
# pppd call dialin
```



## ATTENTION

If you hope to have auto dial-in service, you can respawn the dial-in service in **/etc/inittab**.

```
MOXA:~# mount -o remount,rw /dev/sda1/
MOXA:~# echo "p0:2345:respawn:pppd call dialin" >>
/etc/inittab
MOXA:~# umount /
```

## PPPoE

The following procedure is for setting up PPPoE:

1. Connect the V2401/2402-LX's LAN port to an ADSL modem with a cross-over cable, HUB, or switch.
2. Log in to the V2401/2402-LX as the root user.
3. Edit the file **/etc/ppp/chap-secrets** and add the following:  
“username@hinet.net” \* “password” \*

```
# Secrets for authentication using CHAP
# client      server secret          IP addresses

# PPPOE example, if you want to use it, you need to unmark it
# and modify it
"username@hinet.net" * "password" *
```

**username@hinet.net** is the username obtained from the ISP to log in to the ISP account.  
**password** is the corresponding password for the account.

4. Edit the file **/etc/ppp/pap-secrets** and add the following:  
"username@hinet.net" \* "password" \*

```
# ATTENTION: The definitions here can allow users to login  
without a  
# password if you don't use the login option of pppd! The  
mgetty Debian  
# package already provides this option; make sure you don't  
change that.  
  
# INBOUND connections  
  
# Every regular user can use PPP and has to use passwords  
from /etc/passwd  
*      hostname      " "      *  
"username@hinet.net"   *      "password"      *  
  
# UserIDs that cannot use PPP at all. Check your /etc/passwd  
and add any  
# other accounts that should not be able to use pppd!  
guest  hostname      " * "      -  
master  hostname      " * "      -  
root    hostname      " * "      -  
support hostname      " * "      -  
stats   hostname      " * "      -  
  
# OUTBOUND connections
```

**username@hinet.net** is the username obtained from the ISP to log in to the ISP account.  
**password** is the corresponding password for the account.

5. Edit the file **/etc/ppp/options** and add the following line:

```
plugin rp-pppoe
```

```
# received. Note: it is not advisable to use this option
with the persist
# option without the demand option. If the active-filter
option is given,
# data packets which are rejected by the specified activity
filter also
# count as the link being idle.
#idle <n>

# Specifies how many seconds to wait before re-initiating the
link after
# it terminates. This option only has any effect if the
persist or demand
# option is used. The holdoff period is not applied if the
link was
# terminated because it was idle.
#holdoff <n>

# Wait for up n milliseconds after the connect script
finishes for a valid
# PPP packet from the peer. At the end of this time, or when
a valid PPP
# packet is received from the peer, pppd will commence
negotiation by
# sending its first LCP packet. The default value is 1000 (1
second).
# This wait period only applies if the connect or pty option
is used.
#connect-delay <n>

# Load the pppoe plugin
plugin rp-pppoe.so

# ---<End of File>---
```

6. If you use LAN1 to connect to the ADSL modem, add file **/etc/ppp/options.eth0**. If you use LAN2 to connect to the ADSL modem, then add **/etc/ppp/options.eth1**, etc.

```
name username@hinet.net
mtu 1492
mru 1492
defaultroute
noipdefault
~
~
"/etc/ppp/options.eth0" 5 lines, 67 characters
```

Type your username (the one you set in the **/etc/ppp/pap-secrets** and **/etc/ppp/chap-secrets** files) after the **name** option. You may add other options as desired.

7. Set up DNS.

If you are using DNS servers supplied by your ISP, edit the file **/etc/resolv.conf** by adding the following lines of code:

```
nameserver ip_addr_of_first_dns_server  
nameserver ip_addr_of_second_dns_server
```

For example:

```
nameserver 168.95.1.1  
nameserver 139.175.10.20
```

```
MOXA:/etc# cat resolv.conf  
#  
# resolv.conf This file is the resolver configuration file  
# See resolver(5).  
#  
#nameserver 192.168.1.16  
nameserver 168.95.1.1  
nameserver 139.175.10.20  
nameserver 140.115.1.31  
nameserver 140.115.236.10  
MOXA:/etc#
```

8. Use the following command to create a **pppoe** connection:

```
#pppd eth0
```

The ADSL modem is connected to the **LAN1** port, which is named **eth0**. If the ADSL modem is connected to **LAN2**, use **eth1**, etc.

9. Type **#ifconfig ppp0** to check if the connection is OK. If the connection is OK, you should see the IP address of ppp0. Use **#ping** to test the IP address.

```
ppp0      Link encap Point-to-Point Protocol  
          inet  addr  192.76.32.3      P-t-P  129.67.1.165  Mask  
255.255.255.0  
          UP POINTOPOINT RUNNING    MTU 1500  Metric 1  
          RX packets 33 errors 0 dropped 0 overrun 0  
          TX packets 42 errors 0 dropped 0 overrun 0
```

10. If you want to disconnect it, use the kill command to kill the **pppd** process.

## NFS (Network File System) Client

The Network File System (NFS) is used to mount a disk partition on a remote machine (as if it were on a local hard drive), allowing fast, seamless sharing of files across a network. NFS allows users to develop applications for the V2401/2402-LX without worrying about the amount of disk space that will be available. The V2401/2402-LX supports only NFS client protocol.



### ATTENTION

Click on the following links for more information about NFS.

<http://www.ietf.org/rfc/rfc1213.txt>  
<http://www.faqs.org/rfcs/rfc1317.html>

The following procedures illustrate how to mount a remote NFS Server.

1. Scan the NFS Server's shared directory.

**#showmount -e HOST**

|            |   |
|------------|---|
| showmount: | Show the mount information of an NFS Server |
| -e:        | Show the NFS Server's export list.          |
| HOST:      | IP address or DNS address                   |

2. Establish a mount point on the NFS Client site.

**#mkdir -p /home/nfs/public**

3. Mount the remote directory to a local directory.

**# mount -t nfs -o nolock 192.168.3.100:/home/public /home/nfs/public**

This is where 192.168.3.100 is the example IP address of the NFS server.

## SNMP (Simple Network Management Protocol)

The V2401/2402-LX comes with the SNMP V1 (Simple Network Management Protocol) agent software pre-installed. It supports **RFC 1213 MIB-II**. The following example shows an SNMP agent responding to a query from the SNMP browser on the host site:

```
***** SNMP QUERY STARTED *****
[root@jaredRH90 root]# snmpwalk -v 1 -c public
192.168.30.128|more
SNMPv2-MIB::sysDescr.0 = STRING: Linux Moxa 2.6.18-5-686 #1
SMP Mon Dec 24 16:41
:07 UTC 2007 i686
SNMPv2-MIB::sysObjectID.0 = OID: SNMPv2-
SMI::enterprises.8691.12.680
SNMPv2-MIB::sysUpTime.0 = Timeticks: (134544) 0:22:25.44
SNMPv2-MIB::sysContact.0 = STRING: "Moxa Inc."
SNMPv2-MIB::sysName.0 = STRING: Moxa
SNMPv2-MIB::sysLocation.0 = STRING: "Fl.8, No.6, Alley 6,
Lane 235, Pao-Chiao Rd
. Shing Tien City, Taipei, Taiwan, R.O.C."
SNMPv2-MIB::sysORLastChange.0 = Timeticks: (12) 0:00:00.12
SNMPv2-MIB::sysORID.1 = OID: IF-MIB::ifMIB
SNMPv2-MIB::sysORID.2 = OID: SNMPv2-MIB::snmpMIB
SNMPv2-MIB::sysORID.3 = OID: TCP-MIB::tcpMIB
SNMPv2-MIB::sysORID.4 = OID: IP-MIB::ip
SNMPv2-MIB::sysORID.5 = OID: UDP-MIB::udpMIB
SNMPv2-MIB::sysORID.6 = OID: SNMP-VIEW-BASED-ACM-
MIB::vacmBasicGroup
SNMPv2-MIB::sysORID.7 = OID: SNMP-FRAMEWORK-
MIB::snmpFrameworkMIBCompliance
SNMPv2-MIB::sysORID.8 = OID: SNMP-MPD-MIB::snmpMPDCompliance
SNMPv2-MIB::sysORID.9 = OID: SNMP-USER-BASED-SM-
MIB::usmMIBCompliance
SNMPv2-MIB::sysORDescr.1 = STRING: The MIB module to describe
generic objects fo
r network interface sub-layers
SNMPv2-MIB::sysORDescr.2 = STRING: The MIB module for SNMPv2
entities
SNMPv2-MIB::sysORDescr.3 = STRING: The MIB module for
managing TCP implementatio
...
SNMPv2-MIB::snmpOutBadValues.0 = Counter32: 0
SNMPv2-MIB::snmpOutGenErrs.0 = Counter32: 0
SNMPv2-MIB::snmpOutGetRequests.0 = Counter32: 0
SNMPv2-MIB::snmpOutGetNexsts.0 = Counter32: 0
SNMPv2-MIB::snmpOutSetRequests.0 = Counter32: 0
SNMPv2-MIB::snmpOutGetResponses.0 = Counter32: 540
SNMPv2-MIB::snmpOutTraps.0 = Counter32: 0
SNMPv2-MIB::snmpEnableAuthenTraps.0 = INTEGER: disabled(2)
SNMPv2-MIB::snmpSilentDrops.0 = Counter32: 0
SNMPv2-MIB::snmpProxyDrops.0 = Counter32: 0
[root@jaredRH90 root]#
***** SNMP QUERY FINISHED *****
```

**ATTENTION**

Visit the following links for more information about **RFC 1213 MIB-II**.

<http://www.ietf.org/rfc/rfc1213.txt>

## OpenVPN


OpenVPN provides two types of tunnels for users to implement VPNS: **Routed IP Tunnels** and **Bridged Ethernet Tunnels**.

An Ethernet bridge is used to connect different Ethernet networks together. The Ethernets are bundled into one bigger, “logical” Ethernet. Each Ethernet corresponds to one physical interface (or port) that is connected to the bridge.

On each OpenVPN machine, you should carry out configurations in the **/etc/openvpn** directory, where script files and key files reside. Once established, all operations will be performed in that directory.

### Ethernet Bridging for Private Networks on Different Subnets

1. Set up four machines, as shown in the following diagram.

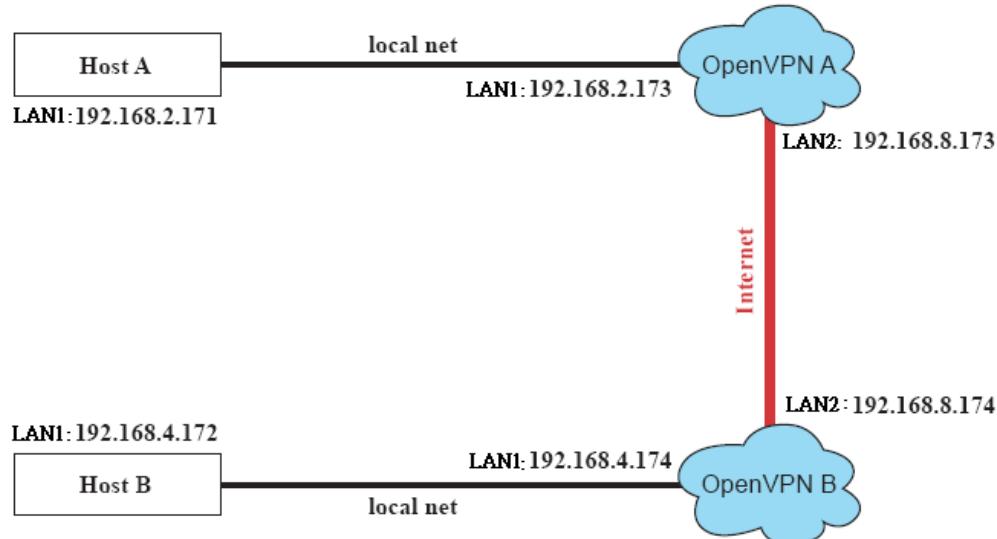

Host A represents the machine that belongs to OpenVPN A, and Host B represents the machine that belongs to OpenVPN B. The two remote subnets are configured for a different range of IP addresses. When this configuration is moved to a public network, the external interfaces of the OpenVPN machines should be configured for static IPs, or connected to another device (such as a firewall or DSL box) first.

2. Generate a preset shared key by typing the command:  
`# openvpn --genkey --secret secrouter.key`
3. Copy the file that is generated to the OpenVPN machine:  
`# scp /etc/openvpn/secrouter.key 192.168.8.174:/etc/openvpn`

**ATTENTION**

A preshared key is located at `/etc/openvpn/secrouter.key`. You can use it for testing purposes. We suggest creating a new key for non-testing purpose.

4. On machine OpenVPN A, modify the remote address in the configuration file `/etc/openvpn/tap0-br.conf`.

```
# point to the peer
remote 192.168.8.174
dev tap0
port 1194
secret /etc/openvpn/secrouter.key
cipher DES-EDE3-CBC
auth MD5
tun-mtu 1500
tun-mtu-extra 64
ping 40
up /etc/openvpn/tap0-br.sh
-----
```

5. Next, modify the routing table in the `/etc/openvpn/tap0-br.sh` script file.

```
-----Start-----
#!/bin/sh
# value after "-net" is the subnet behind the remote peer
route add -net 192.168.4.0 netmask 255.255.255.0 dev br0
-----end-----
```

And then configure the bridge interface in **/etc/openvpn/bridge**.

```
#!/bin/bash
# Create global variables
# Define Bridge Interface
br="br0"
# Define list of TAP interfaces to be bridged,
# for example tap="tap0 tap1 tap2".
tap="tap0"
# Define physical ethernet interface to be bridged
# with TAP interface(s) above.
eth="eth1"
eth_ip="192.168.8.173"
eth_netmask="255.255.255.0"
eth_broadcast="192.168.8.255"
#gw="192.168.8.174"
...
```

Start the bridge script file to configure the bridge interface.

**# /etc/openvpn/bridge restart**

6. On machine OpenVPN B, modify the remote address in configuration file **/etc/openvpn/tap0-br.conf**.

```
# point to the peer
remote 192.168.8.173
dev tap0
secret /etc/openvpn/secrouter.key
cipher DES-EDE3-CBC
auth MD5
tun-mtu 1500
tun-mtu-extra 64
ping 40
up /etc/openvpn/tap0-br.sh
#comp-lzo
```

7. Next modify the routing table in **/etc/openvpn/tap0-br.sh** script file.

```
-----Start-----
-----
#!/bin/sh
# value after "-net" is the subnet behind the remote peer
route add -net 192.168.2.0 netmask 255.255.255.0 dev br0
#----- end -----
-----
```

And then configure the bridge interface in **/etc/openvpn/bridge**.

```
#!/bin/bash
# Create global variables
# Define Bridge Interface
br="br0"
# Define list of TAP interfaces to be bridged,
# for example tap="tap0 tap1 tap2".
tap="tap0"
# Define physical ethernet interface to be bridged
# with TAP interface(s) above.
eth="eth1"
eth_ip="192.168.8.174"
eth_netmask="255.255.255.0"
eth_broadcast="192.168.8.255"
#gw="192.168.8.173"
...
```

Start the bridge script file to configure the bridge interface.

```
# /etc/openvpn/bridge restart
```



#### ATTENTION

Select cipher and authentication algorithms by specifying **cipher** and **auth**. To see which algorithms are available, type:

```
# openvpn --show-ciphers
# openvpn --show-auths
```

8. Start both OpenVPN peers on machine OpenVPN A and OpenVPN B.

```
# openvpn --config /etc/openvpn/tap0-br.conf&
```

If you see the line **Peer Connection Initiated with 192.168.8.173:5000**on each machine, the connection between OpenVPN machines has been established successfully on UDP port 5000.



#### ATTENTION

You can create link symbols to start the OpenVPN service at boot time:

```
# ln -sf /etc/init.d/openvpn /etc/rc2.d/S16openvpn
```

To stop the service, you should create these links:

```
# ln -sf /etc/init.d/openvpn /etc/rc0.d/K80openvpn
```

9. On each OpenVPN machine, check the routing table by typing the command # **route**

| Destination  | Gateway | Genmask       | Flags | Metric | Ref |
|--------------|---------|---------------|-------|--------|-----|
| Use Iface    |         |               |       |        |     |
| 192.168.5.0  | 0.0.0.0 | 255.255.255.0 | U     | 0      | 0 0 |
| eth2         |         |               |       |        |     |
| 192.168.4.0  | 0.0.0.0 | 255.255.255.0 | U     | 0      | 0 0 |
| br0          |         |               |       |        |     |
| 192.168.3.0  | 0.0.0.0 | 255.255.255.0 | U     | 0      | 0 0 |
| eth0         |         |               |       |        |     |
| 192.168.30.0 | 0.0.0.0 | 255.255.255.0 | U     | 0      | 0 0 |
| eth3         |         |               |       |        |     |
| 192.168.8.0  | 0.0.0.0 | 255.255.255.0 | U     | 0      | 0 0 |
| br0          |         |               |       |        |     |

Interface **eth1** and device **tap0** both connect to the bridging interface, and the virtual device **tun** sits on top of **tap0**. This ensures that all traffic coming to this bridge from internal networks connected to interface eth1 write to the TAP/TUN device that the OpenVPN program monitors. Once the OpenVPN program detects traffic on the virtual device, it sends the traffic to its peer.

10. To create an indirect connection to Host B from Host A, you need to add the following routing item:

```
# route add -net 192.168.4.0 netmask 255.255.255.0 dev eth0
```

To create an indirect connection to Host A from Host B, you need to add the following routing item:

```
# route add -net 192.168.2.0 netmask 255.255.255.0 dev eth0
```

Now ping Host B from Host A by typing:

```
# ping 192.168.4.174
```


A successful ping indicates that you have created a VPN system that only allows authorized users from one internal network to access users at the remote site. For this system, all data is transmitted by UDP packets on port 5000 between OpenVPN peers.

11. To shut down OpenVPN programs, type the command:

```
# killall -TERM openvpn
```

## Ethernet Bridging for Private Networks on the Same Subnet

- Set up four machines, as shown in the following diagram.

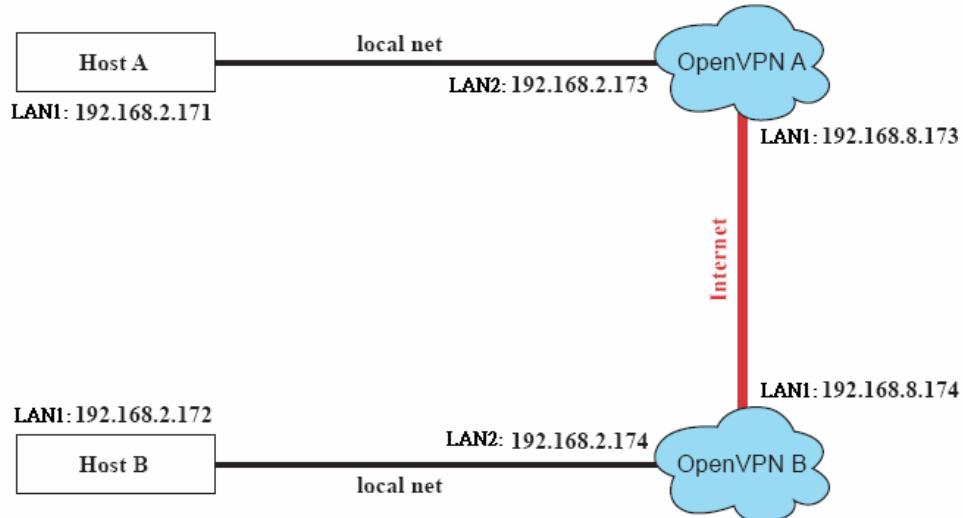


- The configuration procedure is almost the same as for the previous example. The only difference is that you will need to comment out the parameter **up** in **/etc/openvpn/tap0-br.conf** of OpenVPN A and **/etc/openvpn/tap0-br.conf** of OpenVPN B.

```
# point to the peer
remote 192.168.8.174
dev tap0
secret /etc/openvpn/secrouter.key
cipher DES-EDE3-CBC
auth MD5
tun-mtu 1500
tun-mtu-extra 64
ping 40
#up /etc/openvpn/tap0-br.sh
#comp-lzo
```

## Routed IP

- Set up four machines, as shown in the following diagram.

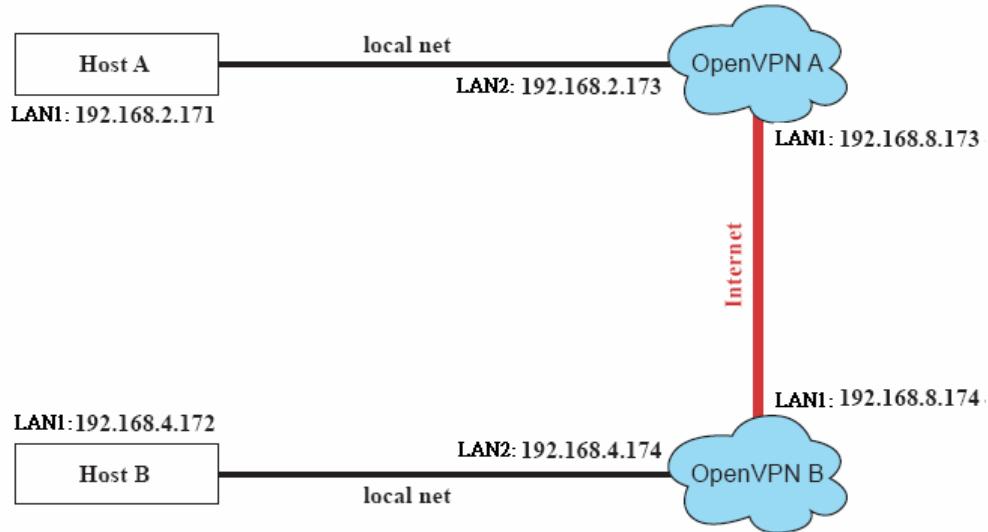

- On machine OpenVPN A, modify the remote address in configuration file `/etc/openvpn/tun.conf`.

```

# point to the peer
remote 192.168.8.174
dev tun
secret /etc/openvpn/secrouter.key
cipher DES-EDE3-CBC
auth MD5
tun-mtu 1500
tun-mtu-extra 64
ping 40
ifconfig 192.168.2.173 192.168.4.174
up /etc/openvpn/tun.sh
  
```

- Next, modify the routing table in script file `/etc/openvpn/tun.sh`.

```

-----Start-----
#!/bin/sh
# value after "-net" is the subnet behind the remote peer
route add -net 192.168.2.0 netmask 255.255.255.0 gw $5
-----end-----
  
```

4. On machine OpenVPN B, modify the remote address in configuration file `/etc/openvpn/tun.conf`.

```
# point to the peer
remote 192.168.8.173
dev tun
secret /etc/openvpn/secrouter.key
cipher DES-EDE3-CBC
auth MD5
tun-mtu 1500
tun-mtu-extra 64
ping 40
ifconfig 192.168.4.174 192.168.2.173
up /etc/openvpn/tun.sh
```

And then modify the routing table in script file `/etc/openvpn/tun.sh`.

```
-----Start-----
#!/bin/sh
# value after "-net" is the subnet behind the remote peer
route add -net 192.168.2.0 netmask 255.255.255.0 gw $5
-----end-----
```

The first argument of parameter **ifconfig** is the local internal interface and the second argument is the internal interface at the remote peer.

**\$5** is the argument that the OpenVPN program passes to the script file. Its value is the second argument of **ifconfig** in the configuration file.

5. Check the routing table after you run the OpenVPN programs, by typing the command `# route`.

| Destination   | Gateway | Genmsk        | Flags           | Metric |   |
|---------------|---------|---------------|-----------------|--------|---|
| Ref           | Use     | Iface         |                 |        |   |
| 192.168.4.174 | *       |               | 255.255.255.255 | UH     | 0 |
| 0             | 0       | tun0          |                 |        |   |
| 192.168.4.0   |         | 192.168.4.174 | 255.255.255.0   | UG     | 0 |
| 0             | 0       | tun0          |                 |        |   |
| 192.168.2.0   | *       |               | 255.255.255.0   | U      | 0 |
| 0             | 0       | eth1          |                 |        |   |
| 192.168.8.0   | *       |               | 255.255.255.0   | U      | 0 |
| 0             | 0       | eth0          |                 |        |   |

# 4

## Programmer Guide

---

This chapter covers the following topics:

- Device API**
- RTC (Real Time Clock)**
- UART**
- Digital I/O**

## Device API

The V2401/2402 supports control devices with the **ioctl** system API. The interface is shown as below.

```
int ioctl(int d, int request, ...);
```

Input:

<d> open device node return file handle

<request> argument in or out

## RTC (Real Time Clock)

The device node is located at **/dev/rtc**. The V2401/2402 supports standard Linux simple RTC control. You must include <**linux/rtc.h**>.

1. Function: RTC\_RD\_TIME

```
int ioctl(fd, RTC_RD_TIME, struct rtc_time *time);
```

Description: read time information from RTC. It will return the value on argument 3.

2. Function: RTC\_SET\_TIME

```
int ioctl(fd, RTC_SET_TIME, struct rtc_time *time);
```

Description: set RTC time. Argument 3 will be passed to RTC.

## UART

The normal tty device node is **/dev/ttys0** and **/dev/ttys1**.

The V2401/2402 supports standard Linux termios control with RS-232/422/485 serial ports.

To configure the serial ports, follow these steps.

1. You must include “**moxadvice.h**”, which you can find in the folder \example\moxalib in CD.

```
#define RS232_MODE 0
#define RS485_2WIRE_MODE 1
#define RS422_MODE 2
#define RS485_4WIRE_MODE 3
```

2. Function: MOXA\_SET\_OP\_MODE

```
int ioctl(fd, MOXA_SET_OP_MODE, &mode)
```

Description Set the interface mode. Argument 3 mode will pass to the UART device driver and change it.

### 3. Function: MOXA\_GET\_OP\_MODE

```
int ioctl(fd, MOXA_GET_OP_MODE, &mode)
```

Description Get the interface mode. Argument 3 mode will return the interface mode.

There are two Moxa private ioctl control definitions for setting up special baudrates.

```
MOXA_SET_SPECIAL_BAUD_RATE
```

```
MOXA_GET_SPECIAL_BAUD_RATE
```

If you use this ioctl to set a special baudrate, the termios cflag will be B4000000, in which case the B4000000 define will be different. If the baudrate you get from termios (or from calling tcgetattr()) is B4000000, you must call ioctl with MOXA\_GET\_SPECIAL\_BAUD\_RATE to get the actual baudrate.

### Example to set the baudrate

```
#include "moxadvice.h"
#include <termios.h>
struct termios term;
int fd, speed;
fd = open("/dev/ttys0", O_RDWR);
tcgetattr(fd, &term);
term.c_cflag &= ~(CBAUD | CBAUDEX);
term.c_cflag |= B4000000;
tcsetattr(fd, TCSANOW, &term);
speed = 500000;
ioctl(fd, MOXA_SET_SPECIAL_BAUD_RATE, &speed);
```

### Example to get the baudrate

```
#include "moxadvice.h"
#include <termios.h>
struct termios term;
int fd, speed;
fd = open("/dev/ttys0", O_RDWR);
tcgetattr(fd, &term);
if ( (term.c_cflag & (CBAUD|CBAUDEX)) != B4000000 ) {
// follow the standard termios baud rate define
} else {
ioctl(fd, MOXA_GET_SPECIAL_BAUD_RATE, &speed);
}
```

## Baudrate inaccuracy

Divisor = 921600/Target Baud Rate. (Only Integer part)

ENUM = 8 \* (921600/Target - Divisor) (Round up or down)

**Inaccuracy = ( (Target Baud Rate – 921600/(Divisor + (ENUM/8))) / Target Baud Rate ) \* 100%**

E.g.,

To calculate 500000 bps

Divisor = 1, ENUM = 7,

Inaccuracy = 1.7%

\* To work reliably, you should set inaccuracy under 2%.

## Special Note

1. If the target baudrate is not a special baudrate (e.g. 50, 75, 110, 134, 150, 200, 300, 600, 1200, 1800, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400, 460800, 921600), the termios cflag will be set to the same flag.
2. If you use **stty** to get the serial information, you will get speed equal to 0 for the special baudrate.

## Digital I/O

Digital Output channels can be set to high or low. The channels are controlled by the function call **set\_dout\_state()**. Use the digital input channels to detect the state change of the digital input signal. The DI channels can also be used to detect whether or not the state of a digital signal changes during a fixed period of time. This can be done by the function call, **set\_din\_event()**.

Return error code definitions:

```
#define DIO_ERROR_PORT -1 // no such port
#define DIO_ERROR_MODE -2 // no such mode or state
#define DIO_ERROR_CONTROL -3 // open or ioctl fail
#define DIO_ERROR_DURATION -4 // The value of duration is not 0
                           // or not in the range, 40 <= duration <= 3600000 milliseconds (1
                           // hour)
#define DIO_ERROR_DURATION_20MS -5 // The value of duration must
                                // be a multiple of 20 ms
#define DIO_OK 0
```

DIN and DOUT definitions:

```
#define DIO_HIGH 1
#define DIO_LOW 0
```

## Moxa functions for DI/DO

|             |   |
|-------------|---|
| Function    | <b>int set_dout_state(int doport, int state)</b>  |
| Description | Set the DOUT port to high or low state.   |
| Input       | <doport> The DOUT port you want to set. Port starts from 0 to 3<br><state> Set high or low state; DIO_HIGH (1) for high, DIO_LOW (0) for low. |
| Output      | none  |
| Return      | refer to the error code   |

|             |  |
|-------------|--|
| Function    | <b>int get_din_state(int diport, int *state)</b>   |
| Description | Get the DIN port state   |
| Input       | <diport> The DIN port to get the state of. Port numbering is from 0 to 3<br><state> Save the current state |
| Output      | <state> DIO_HIGH (1) for high, DIO_LOW (0) for low   |
| Return      | Refer to the error code  |

|             |  |
|-------------|--|
| Function    | <b>int get_dout_state(int doport, int *state)</b>                              |
| Description | Get the DOUT port state  |
| Input       | <doport> The DOUT port to get the state of.<br><state> Save the current state. |
| Output      | <state> DIO_HIGH (1) for high, DIO_LOW (0) for low                             |
| Return      | Refer to the error code  |

|             |  |
|-------------|--|
| Function    | <b>int set_din_event(int diport, void (*func)(int diport), int mode, long int duration)</b>  |
| Description | Set the DIN event when the state is changed from high to low or from low to high   |
| Input       | <diport> The port that will be used to detect the DIN event.<br>Port numbering is from 0 to 3. This value depends on your device.<br><(*func) (int diport)><br>Not NULL: Returns the call back function. When the event occurs, the call back function will be invoked.<br>NULL: Clear this event<br><mode><br>DIN_EVENT_HIGH_TO_LOW (1): From high to low<br>DIN_EVENT_LOW_TO_HIGH (0): From low to high<br>DIN_EVENT_CLEAR (-1): Clear this event<br><duration><br>0: Detect the din event DIN_EVENT_HIGH_TO_LOW or DIN_EVENT_LOW_TO_HIGH without duration<br>Not 0: Detect the din event DIN_EVENT_HIGH_TO_LOW or DIN_EVENT_LOW_TO_HIGH with duration.<br>Note:<br>The value of “duration” must be a multiple of 20 milliseconds.<br>The range of “duration” is 0, or 40 <= duration <= 3600000 milliseconds. |

|        |  |
|--------|--|
|        | The error of the measurement is 24 ms. For example, if the DIN duration is 200 ms, this event will be generated when the DIN pin stays in the same state for a time between 176 ms and 200 ms. |
| Output | None   |
| Return | Refer to the error code  |

|             |  |
|-------------|--|
| Function    | <b>int get_din_event(int diport, int *mode, long int *duration)</b>  |
| Description | To retrieve the DIN event configuration, including mode (DIN_EVENT_HIGH_TO_LOW or DIN_EVENT_LOW_TO_HIGH), and the value of "duration."   |
| Input       | <diport> Which DIN port you want to retrieve<br><mode> Save the set event.<br><duration> The duration the DIN port is kept in high or low state. - return to the current duration value of diport  |
| Output      | <mode><br>DIN_EVENT_HIGH_TO_LOW (1): From high to low<br>DIN_EVENT_LOW_TO_HIGH(0): From low to high<br>DIN_EVENT_CLEAR(-1): Clear this event<br><duration><br>The value of duration should be 0 or 40 <= duration <= 3600000 milliseconds. |
| Return      | Refer to the error code  |

## Special Note

1. You have to build the moxalib in advance for DI/DO. The moxalib is included in the folder **\example\moxalib** in CD.
2. Make sure to link the library **libmoxalib** for DI/DO programming, and include the header file **moxadevice.h**. Only one program at a time can use the DI/DO library.
3. Due to hardware limitation, you need to modify MIN\_DURATION as 60 for V2401/2402.

## Examples

### DIO Program Source Code File Example

File Name: tdio.c

Description: This program connects DO1 to DI1, changes the digital output state to high or low by manual input, then detects and counts the state changed events from DI1.

```
#include    <stdio.h>
#include    <stdlib.h>
#ifndef NO_MOXADEVICE_HEADER
    #include    "moxadevice.h"
#else
    #include    <moxadevice.h>
#endif
```

```
#include    <fcntl.h>

/* Due to hardware limitation, MIN_DURATION should be 60 for DA710
*/
#define MIN_DURATION 40

static char *DataString[2]={"Low ", "High "};

static void hightoloweevent(int diport)
{
    printf("\nDIN port %d high to low.\n", diport);
}

static void lowtohighevent(int diport)
{
    printf("\nDIN port %d low to high.\n", diport);
}

int main(int argc, char * argv[])
{
    int      i, j, state, retval;
    unsigned long duration;

    while( 1 ) {
        printf("\nSelect a number of menu, other key to exit. \n\
1.set high to low event      \n\
2.get now data.            \n\
3.set low to high event      \n\
4.clear event              \n\
5.set high data.           \n\
6.set low data.            \n\
7. quit                    \n\
8. show event and duration \n\
Choose : ");

        retval =0;
        scanf("%d", &i);
        if ( i == 1 ) { // set high to low event
```

```
    printf("Please keyin the DIN number : ");
    scanf("%d", &i);

    printf("Please input the DIN duration, this minimum
value must be over %d : ",MIN_DURATION);

    scanf("%lu", &duration);

    retval=set_din_event(i, hightolowevent,
DIN_EVENT_HIGH_TO_LOW, duration);

} else if ( i == 2 ) { // get now data
    printf("DIN data : ");
    for ( j=0; j<MAX_DIN_PORT; j++ ) {
        get_din_state(j, &state);
        printf("%s", DataString[state]);
    }
    printf("\n");
    printf("DOUT data : ");
    for ( j=0; j<MAX_DOUT_PORT; j++ ) {
        get_dout_state(j, &state);
        printf("%s", DataString[state]);
    }
    printf("\n");
} else if ( i == 3 ) { // set low to high event
    printf("Please keyin the DIN number : ");
    scanf("%d", &i);

    printf("Please input the DIN duration, this minimum
value must be over %d : ",MIN_DURATION);

    scanf("%lu", &duration);

    retval = set_din_event(i, lowtohighevent,
DIN_EVENT_LOW_TO_HIGH, duration);

} else if ( i == 4 ) { // clear event
    printf("Please keyin the DIN number : ");
    scanf("%d", &i);

    retval=set_din_event(i, NULL, DIN_EVENT_CLEAR, 0);

} else if ( i == 5 ) { // set high data
    printf("Please keyin the DOUT number : ");
    scanf("%d", &i);

    retval=set_dout_state(i, 1);

} else if ( i == 6 ) { // set low data
```

```
    printf("Please keyin the DOUT number : ");
    scanf("%d", &i);
    retval=set_dout_state(i, 0);
} else if ( i == 7 ) { // quit
    break;
} else if ( i == 8 ) { // show event and duration
    printf("Event:\n");
    for ( j=0; j<MAX_DOUT_PORT; j++ ) {
        retval=get_din_event(j, &i, &duration);
        switch ( i ) {
            case DIN_EVENT_HIGH_TO_LOW :
                printf("(htl,%lu)", duration);
                break;
            case DIN_EVENT_LOW_TO_HIGH :
                printf("(lth,%lu)", duration);
                break;
            case DIN_EVENT_CLEAR :
                printf("(clr,%lu)", duration);
                break;
            default :
                printf("err " );
                break;
        }
    }
    printf("\n");
} else {
    printf("Select error, please select again !\n");
}
switch(retval) {
    case DIO_ERROR_PORT:
        printf("DIO error port\n");
        break;
    case DIO_ERROR_MODE:
        printf("DIO error mode\n");
        break;
    case DIO_ERROR_CONTROL:
```

```
        printf("DIO error control\n");
        break;
    case DIO_ERROR_DURATION:
        printf("DIO error duratoin\n");
    case DIO_ERROR_DURATION_20MS:
        printf("DIO error! The duratoin is not a multiple
of 20 ms\n");
        break;
    }
}

return 0;
}

DIO Program Make File Example
include ../compile.mk
CC=$(PREFIX)gcc
STRIP=$(PREFIX)strip
AR=$(PREFIX)ar
LNAME=moxalib
all:    release
release: $(MOXALIB_OBJ)
        $(AR) rcs lib$(LNAME).a $(MOXALIB_OBJ)
%.o:%.c
        $(CC) -c $<
install:      lib$(LNAME).a
        cp -a lib$(LNAME).a $(MOXALIB_INSTALL_DIR)
        cp -a moxadevice.h /usr/local/arm-linux/include
        cp -a moxadevice.h /usr/local/arm-linux/arm-linux/include
clean:
        /bin/rm -f *.o *.a
```

# 5

## System Recovery

---


The V2401/2402-LX is installed with the Embedded Linux operating system, which is located in the Flash DOM (CompactFlash card) shipped with the V2401/2402-LX computer. Although it rarely happens, you may find on occasion that operating system files and/or the disk file system are damaged. This chapter describes how to recover the Linux operating system.

This chapter covers the following topics:

- Recovery Environment**
- Recovery Procedure**

## Recovery Environment


The recovery environment includes the V2401/2402-LX embedded computer and a bootable USB disk with the recovery programs and system image file.

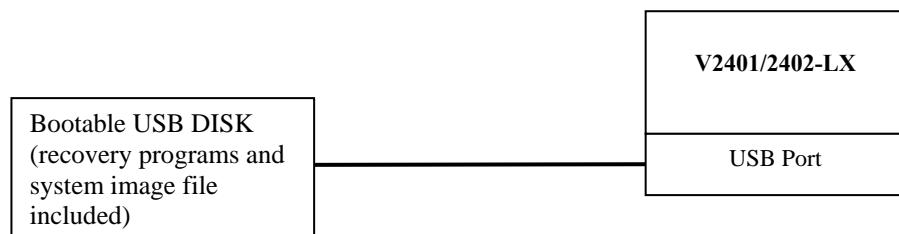

## Recovery Procedure

### Step 1: Format an Empty USB Disk.

- a. Prepare a USB disk that has at least a 256 MB capacity.
- b. Format your USB disk with the **HP USB Disk Format Tool**. Open the utility and select the device and FAT file system. You need empty disk only. DO NOT check the option **Create a DOS startup disk**.
- c. Click **Start**.

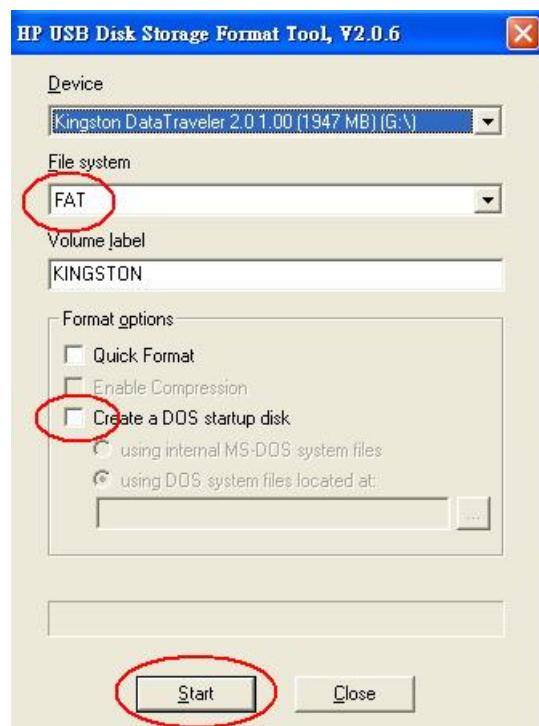




## ATTENTION

The HP USB Disk Storage Format Tool can be downloaded from many web sites. Do a search on **HP USB Disk Storage Format Tool** from any search engine to locate the tool.

**Step 2: Create a Linux Bootable USB Disk.**


- a. You can find the **utility\_tools\Recovery** directory in the Recovery CD shipped with the V2401/2402-LX computer.
- b. Configure Windows Explorer to show hidden files (including protected operating system files).
- c. Copy all files in the **utility\_tools\Recovery** directory to the root directory of your USB disk.

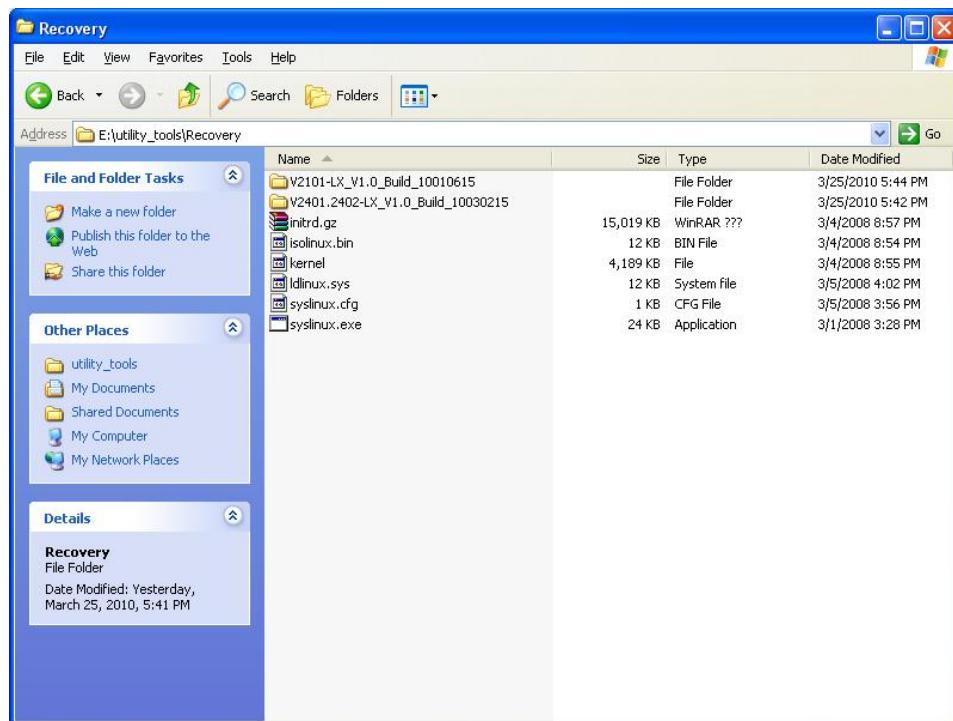


- d. Open a DOS prompt and type **M:\syslinux.exe M:** to create a bootable Linux disk.  
In this example, M: is the USB Disk drive number.

**Step 3: Set up the BIOS to Boot from a USB Disk.**

- Insert the USB disk.
- Power on and press **DEL** to enter the bios setup menu.
- Select **Advanced → Hard Disk Boot Priority** and then press **Enter**.
- From the setup menu, use “**↑**” or “**↓**” to select the USB device

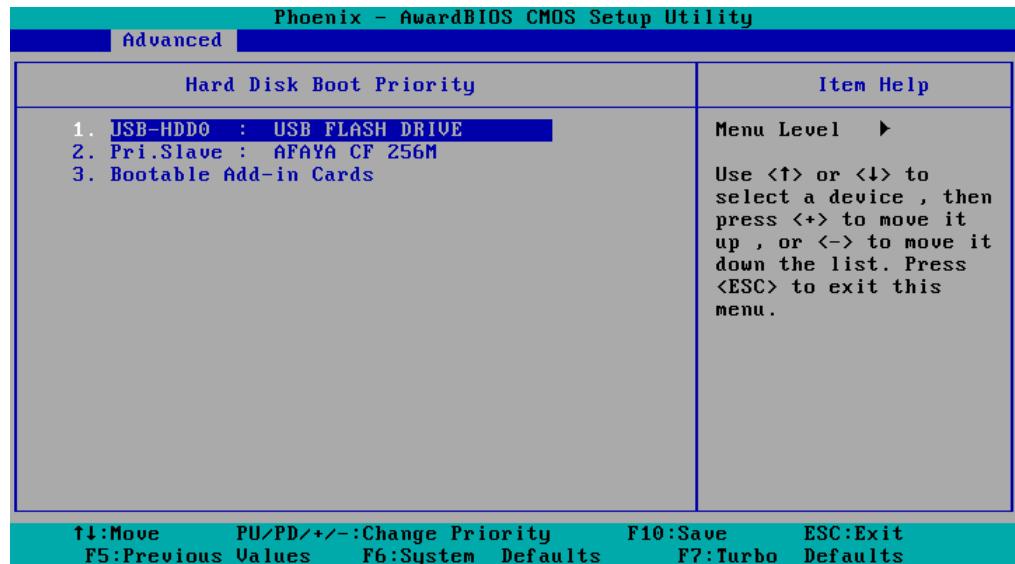

- Press “**+**” to move the selection up to the first priority, and press **Esc** to exit the setup menu.
- Make sure the first boot device is **Hard Disk**. If not, press **Enter** to change it.

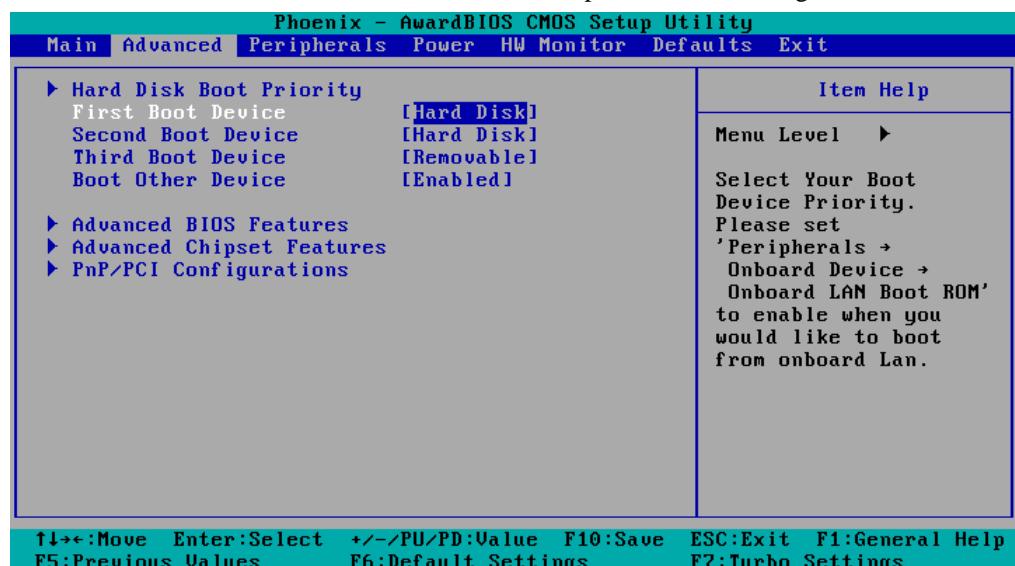


- Select **Exit → Save & Exit Setup** and then press **Enter**.
- Choose **Y** to save to the CMOS and then exit.




## ATTENTION

Please note that some USB disks will be regarded as the **Removable Device**. If it happens, see the following steps.


## a. Select Removable Device Priority.

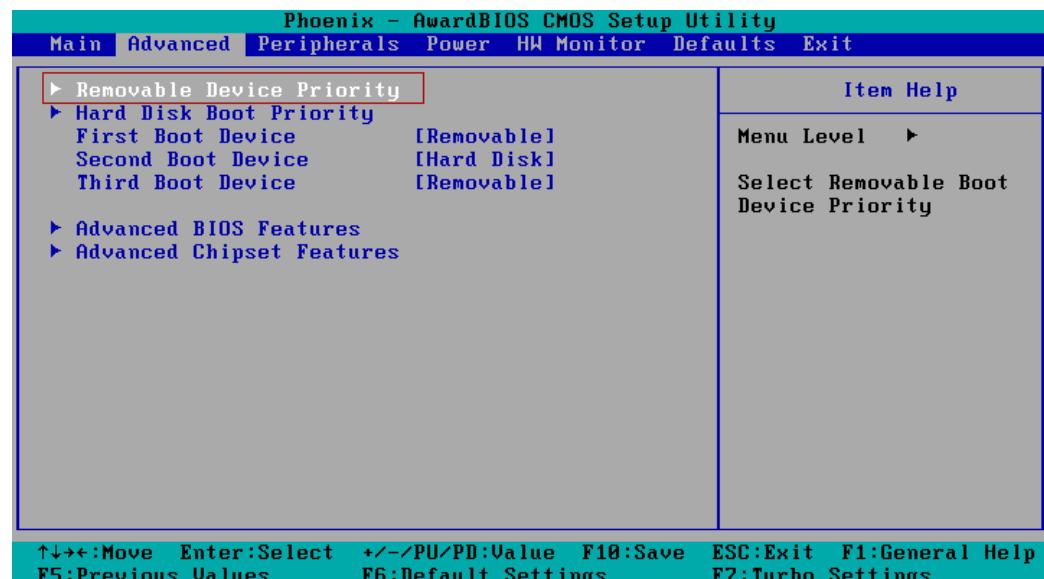

## b. Make sure that the USB disk has been detected. Press Esc to exit.

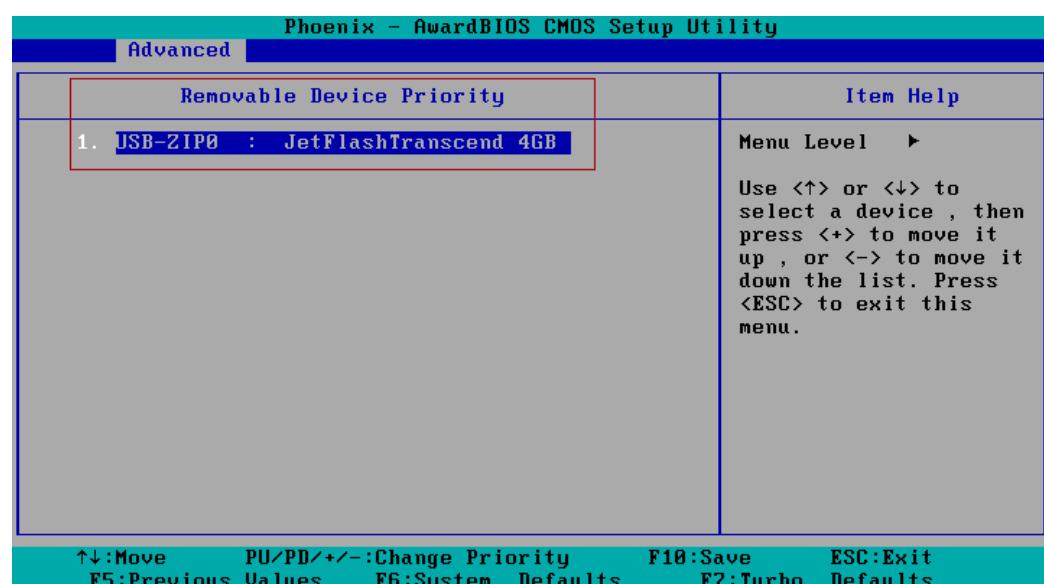


- c. Make sure that the **First Boot Device is Removable**. If not, select **First Boot Device**, press **Enter** and select it from the list.

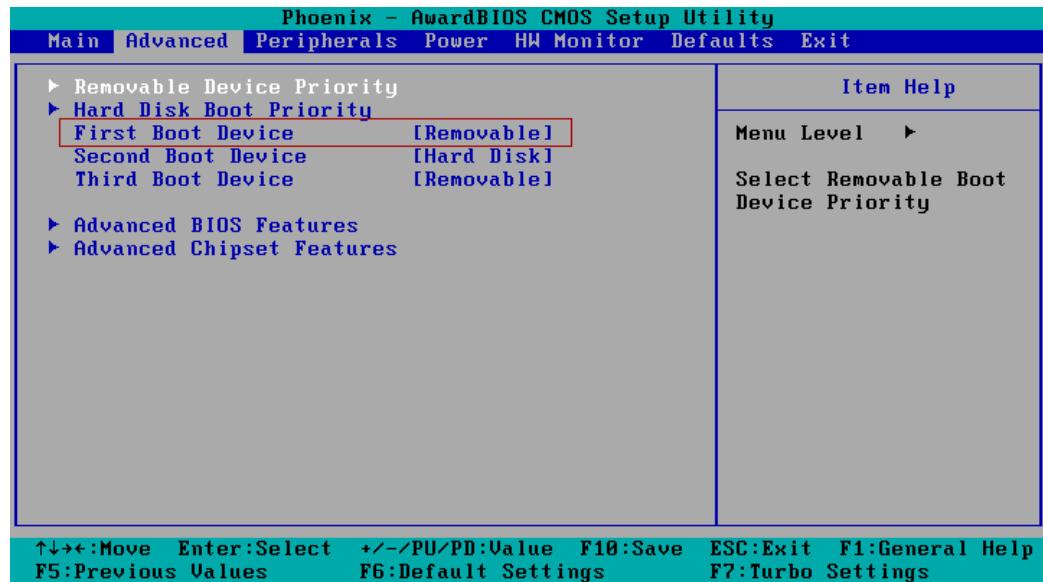


- d. Select **Exit → Save & Exit Setup** and then press **Enter**.  
e. Choose **Y** to save to the CMOS and then exit.

#### Step 4: Recover the Linux system from a USB Disk.


- a. If the BIOS setup is correct, it will boot from the USB disk. Follow the steps below to set up recovery parameters.

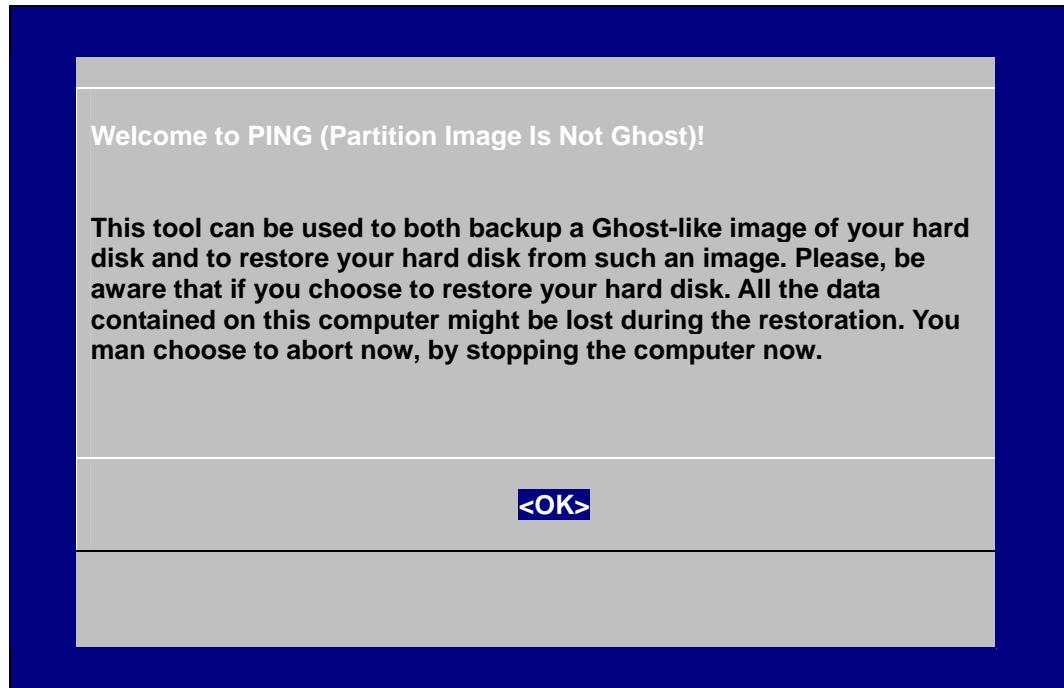


- b. Choose **OK** to go to the next step.
- c. Choose shut down the V2401/2402-LX when the restoration is finished.

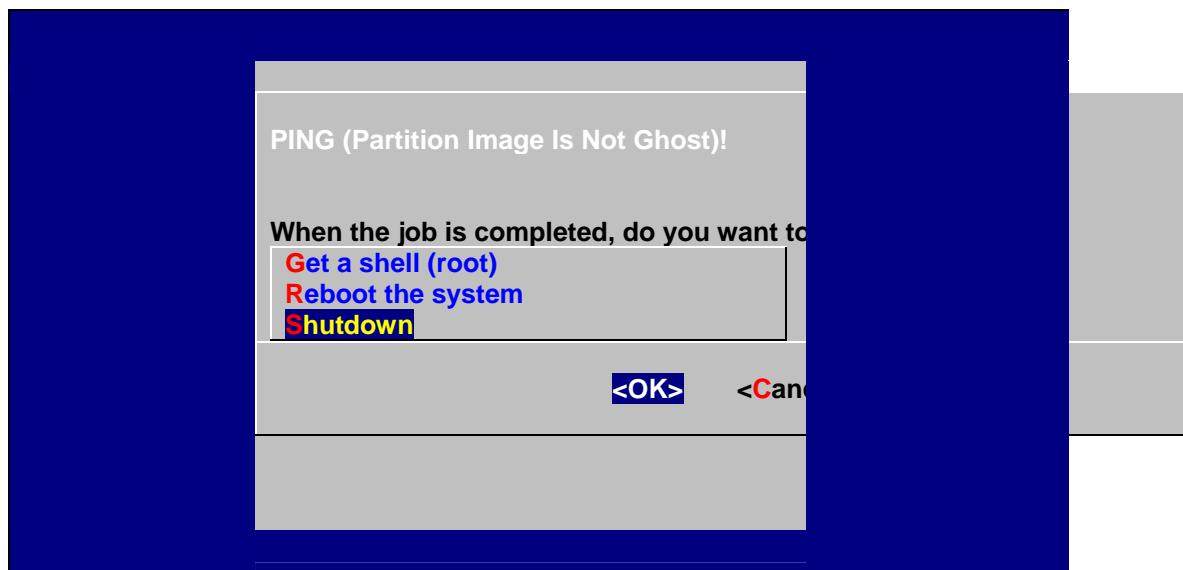


- d. Choose restore image from **Local disk partition**.

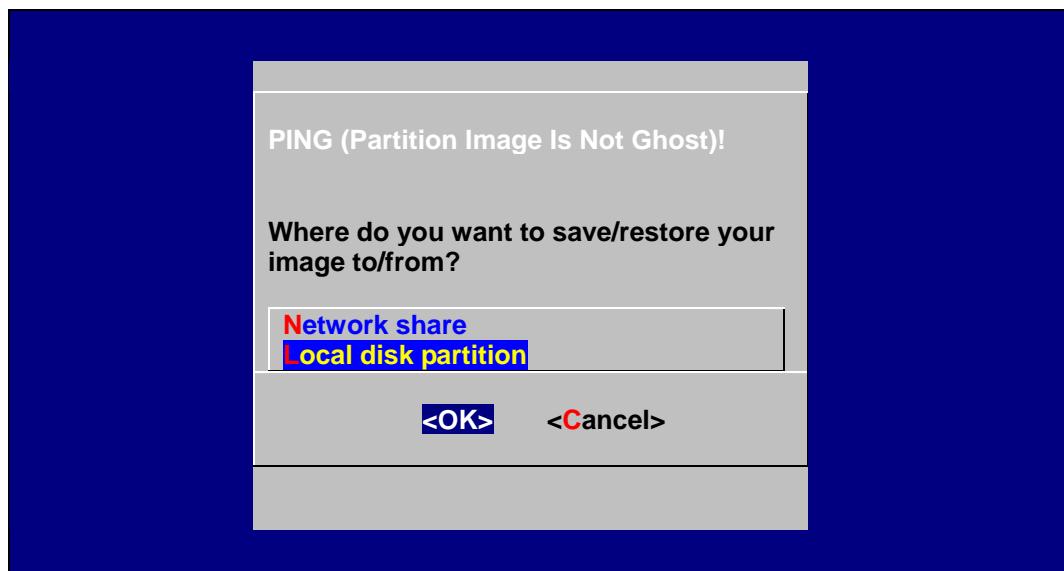


- e. Choose ### Choose THIS if you want a restoration ###

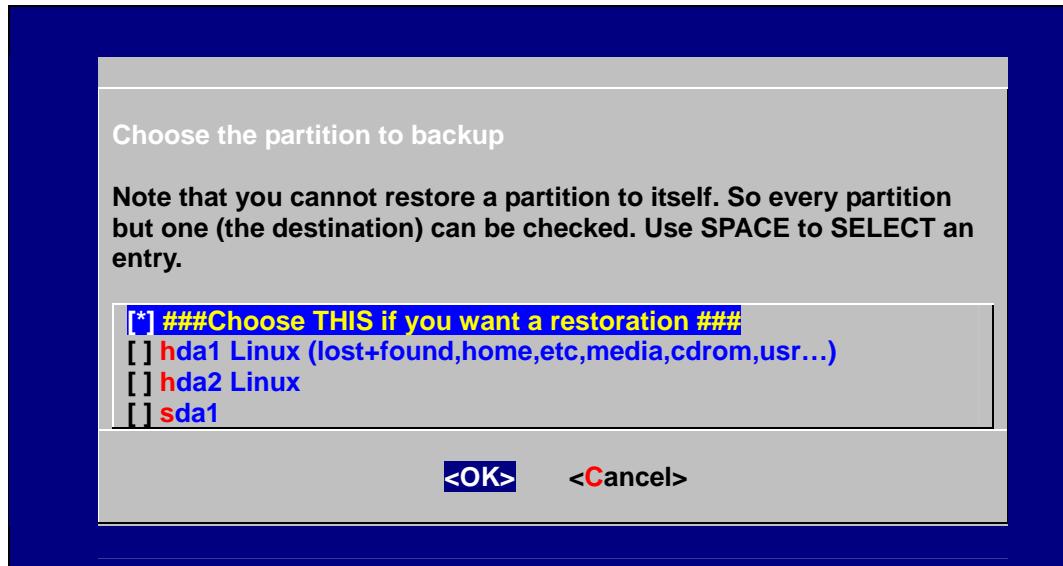


- f. Choose the restoration source device sda1.

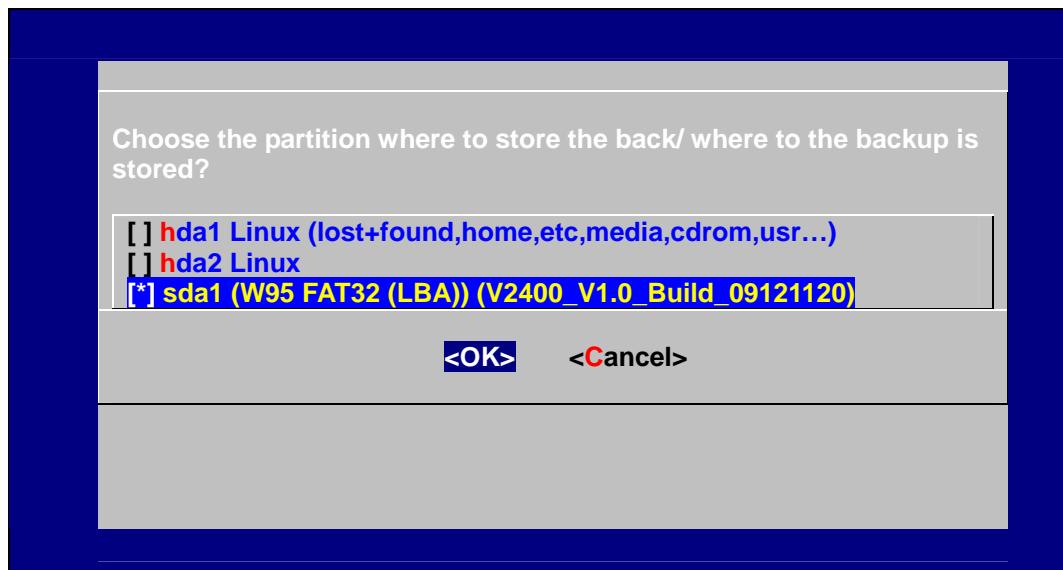

- g. Enter “\” to choose the root directory of the restoration image.

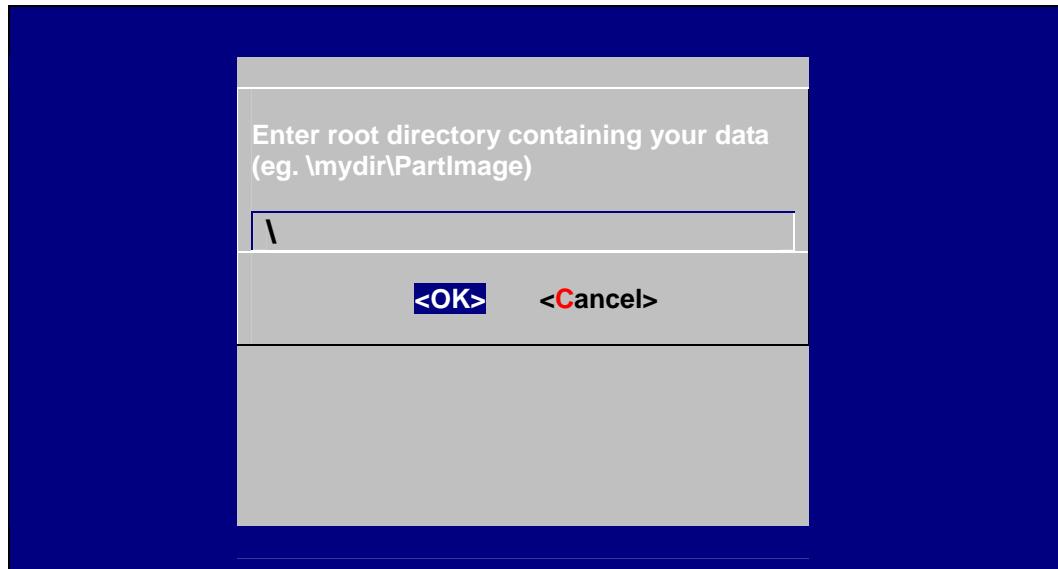

- h. Choose **V2401/2402\_V1.0\_Build\_09121120** for the restoration image.

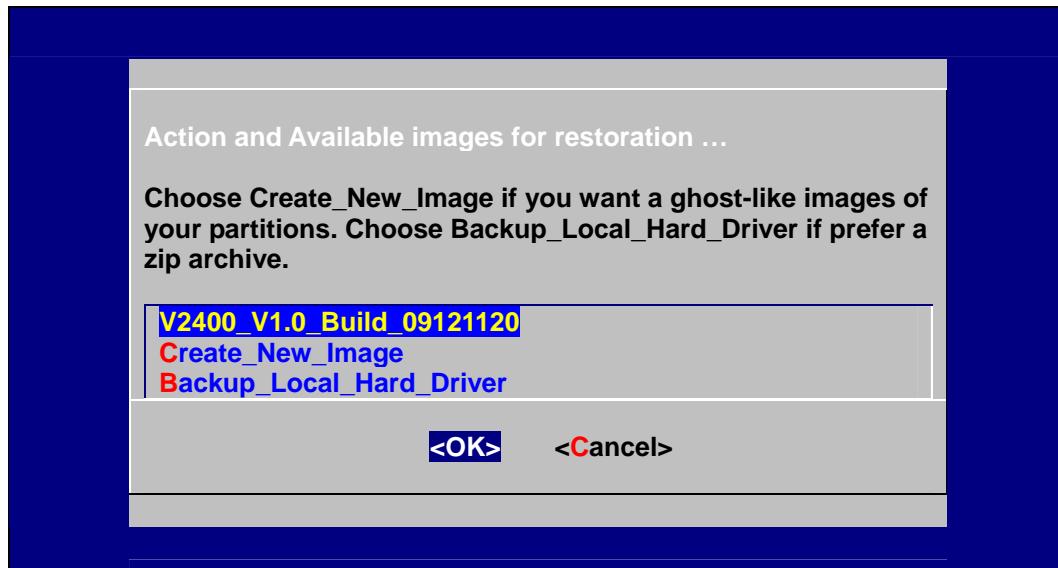

When operation is finished, turn off the computer and remove the USB disk.




#### ATTENTION

**DO NOT** turn off the power during system recovery, as the system may crash.

**Step 5: Set up the BIOS back to boot from DOM Disk.**

- a. Power on and press **DEL** to enter the bios setup menu.
- b. Select **Advanced → Hard Disk Boot Priority** and then press **Enter**.
- c. From the setup menu, use “**↑**” or “**↓**” to select the DOM or CompactFlash device.
- d. Press “**+**” to move the selection up to the first priority, and press **Esc** to exit the setup menu.
- e. Select **Exit → Save & Exit Setup** and then press **Enter**.
- f. Choose **Y** to save to the CMOS and then exit.
- g. Wait a few minutes for the system to boot. When the recovery process is finished, you will again be able to see the Linux desktop.

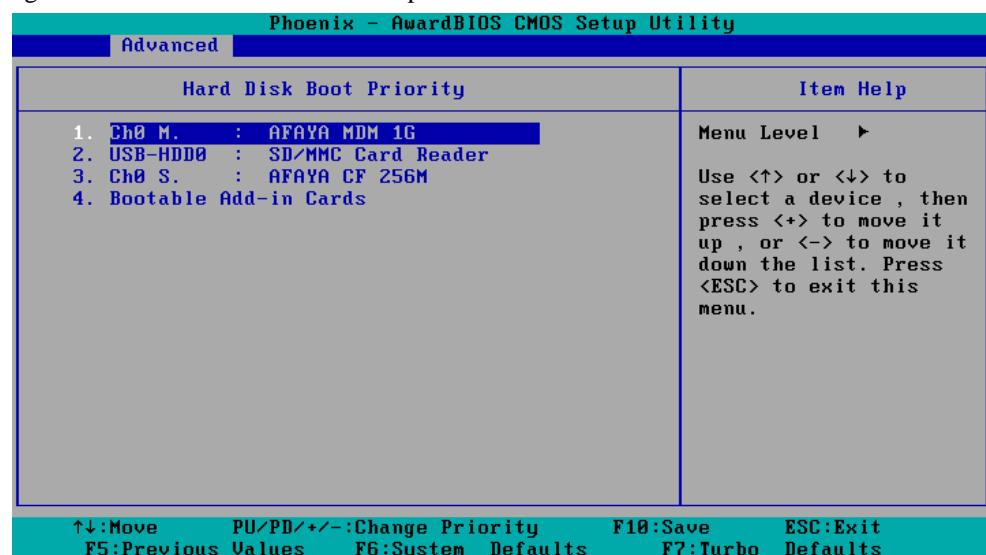

# A

## Software Component List

---

|                     |                    |  |
|---------------------|--------------------|--|
| acpi-support-base   | 0.109-11           | scripts for handling base ACPI events such as the power button |
| acpid               | 1.0.8-1lenny2      | Utilities for using ACPI power management                      |
| adduser             | 3.110              | add and remove users and groups                                |
| alacarte            | 0.11.5-1           | easy GNOME menu editing tool                                   |
| alsa-base           | 1.0.17.dfsg-4      | ALSA driver configuration files                                |
| alsa-utils          | 1.0.16-2           | ALSA utilities   |
| apache2             | 2.2.9-10+lenny6    | Apache HTTP Server metapackage                                 |
| apache2-mpm-prefork | 2.2.9-10+lenny6    | Apache HTTP Server - traditional non-threaded model            |
| apache2-utils       | 2.2.9-10+lenny6    | utility programs for webservers                                |
| apache2.2-common    | 2.2.9-10+lenny6    | Apache HTTP Server common files                                |
| app-install-data    | 2008.11.27         | Application Installer Data Files                               |
| apt                 | 0.7.20.2+lenny1    | Advanced front-end for dpkg                                    |
| apt-utils           | 0.7.20.2+lenny1    | APT utility programs   |
| aptitude            | 0.4.11.11-1~lenny1 | terminal-based package manager                                 |
| aspell              | 0.60.6-1           | GNU Aspell spell-checker                                       |
| aspell-en           | 6.0-0-5.1          | English dictionary for GNU Aspell                              |
| autoconf            | 2.61-8             | automatic configure script builder                             |
| autoconf2.13        | 2.13-59            | automatic configure script builder (obsolete version)          |
| automake            | 1:1.10.1-3         | A tool for generating GNU Standards-compliant Makefiles        |
| automake1.4         | 1:1.4-p6-13        | A tool for generating GNU Standards-compliant Makefiles        |
| autotools-dev       | 20080123.1         | Update infrastructure for config.{guess,sub} files             |
| base-files          | 5lenny4            | Debian base system miscellaneous files                         |
| base-passwd         | 3.5.20             | Debian base system master                                      |

|                        |                          |  |
|------------------------|--------------------------|--|
|                        |                          | password and group files                                       |
| bash                   | 3.2-4                    | The GNU Bourne Again SHell                                     |
| bash-completion        | 20080705                 | programmable completion for the bash shell                     |
| bc                     | 1.06.94-3                | The GNU bc arbitrary precision calculator language             |
| bind9-host             | 1:9.5.1.dfsg.P3-1+lenny1 | Version of 'host' bundled with BIND 9.X                        |
| binutils               | 2.18.1~cvs20080103-7     | The GNU assembler, linker and binary utilities                 |
| bridge-utils           | 1.4-5                    | Utilities for configuring the Linux Ethernet bridge            |
| bsdmainutils           | 6.1.10                   | collection of more utilities from FreeBSD                      |
| bsdutils               | 1:2.13.1.1-1             | Basic utilities from 4.4BSD-Lite                               |
| busybox                | 1:1.10.2-2               | Tiny utilities for small and embedded systems                  |
| bzip2                  | 1.0.5-1                  | high-quality block-sorting file compressor - utilities         |
| capplets-data          | 1:2.22.2.1-2             | configuration applets for GNOME 2 - data files                 |
| cdrdao                 | 1:1.2.2-16               | records CDs in Disk-At-Once (DAO) mode                         |
| console-common         | 0.7.80                   | basic infrastructure for text console configuration            |
| console-data           | 2:1.07-11                | keymaps, fonts, charset maps, fallback tables for console-tool |
| console-tools          | 1:0.2.3dbs-65.1          | Linux console and font utilities                               |
| coreutils              | 6.10-6                   | The GNU core utilities   |
| cpio                   | 2.9-13                   | GNU cpio -- a program to manage archives of files              |
| cpp                    | 4:4.3.2-2                | The GNU C preprocessor (cpp)                                   |
| cpp-4.3                | 4.3.2-1.1                | The GNU C preprocessor   |
| cron                   | 3.0pl1-105               | management of regular background processing                    |
| dbus                   | 1.2.1-5+lenny1           | simple interprocess messaging system                           |
| dbus-x11               | 1.2.1-5+lenny1           | simple interprocess messaging system (X11 deps)                |
| debconf                | 1.5.24                   | Debian configuration management system                         |
| debconf-i18n           | 1.5.24                   | full internationalization support for debconf                  |
| debian-archive-keyring | 2009.01.31               | GnuPG archive keys of the Debian archive                       |
| debian-faq             | 4.0.4                    | The Debian FAQ   |
| debianutils            | 2.30                     | Miscellaneous utilities specific to Debian                     |
| deborphan              | 1.7.27                   | program that can find unused packages, e.g. libraries          |
| defoma                 | 0.11.10-0.2              | Debian Font Manager --   |

|                              |                          |   |
|------------------------------|--------------------------|---|
|                              |                          | automatic font configuration framework                      |
| deskbar-applet               | 2.22.3.1-1               | universal search and navigation bar for GNOME               |
| desktop-base                 | 5.0.3                    | common files for the Debian Desktop                         |
| desktop-file-utils           | 0.15-1                   | Utilities for .desktop files                                |
| dhcp3-client                 | 3.1.1-6+lenny3           | DHCP client   |
| dhcp3-common                 | 3.1.1-6+lenny3           | common files used by all the dhcp3* packages                |
| dialog                       | 1.1-20080316-1           | Displays user-friendly dialog boxes from shell scripts      |
| dictionaries-common          | 0.98.12                  | Common utilities for spelling dictionary tools              |
| diff                         | 2.8.1-12                 | File comparison utilities                                   |
| dmidecode                    | 2.9-1                    | Dump Desktop Management Interface data                      |
| dnsutils                     | 1:9.5.1.dfsg.P3-1+lenny1 | Clients provided with BIND                                  |
| doc-base                     | 0.8.20                   | utilities to manage online documentation                    |
| docbook-xml                  | 4.5-6                    | standard XML documentation system, for software and systems |
| dpkg                         | 1.14.25                  | Debian package management system                            |
| dvd+rw-tools                 | 7.1-3                    | DVD+-RW/R tools   |
| e2fslibs                     | 1.41.3-1                 | ext2 filesystem libraries                                   |
| e2fsprogs                    | 1.41.3-1                 | ext2/ext3/ext4 file system utilities                        |
| eject                        | 2.1.5+deb1-4             | ejects CDs and operates CD-Changers under Linux             |
| eog                          | 2.22.3-2                 | Eye of GNOME graphics viewer program                        |
| esound-clients               | 0.2.36-3                 | Enlightened Sound Daemon - clients                          |
| esound-common                | 0.2.36-3                 | Enlightened Sound Daemon - Common files                     |
| ethtool                      | 6+20080913-1             | display or change Ethernet device settings                  |
| evolution-data-server        | 2.22.3-1.1+lenny2        | evolution database backend server                           |
| evolution-data-server-common | 2.22.3-1.1+lenny2        | architecture independent files for Evolution Data Server    |
| fam                          | 2.7.0-13.3               | File Alteration Monitor                                     |
| file                         | 4.26-1                   | Determines file type using "magic" numbers                  |
| findutils                    | 4.4.0-2                  | utilities for finding files--find, xargs                    |
| fontconfig                   | 2.6.0-3                  | generic font configuration library - support binaries       |
| fontconfig-config            | 2.6.0-3                  | generic font configuration library - configuration          |

|                      |                 |   |
|----------------------|-----------------|---|
| ftp                  | 0.17-18         | The FTP client  |
| g++                  | 4:4.3.2-2       | The GNU C++ compiler  |
| g++-4.3              | 4.3.2-1.1       | The GNU C++ compiler  |
| gcc                  | 4:4.3.2-2       | The GNU C compiler  |
| gcc-4.2-base         | 4.2.4-6         | The GNU Compiler Collection (base package)                      |
| gcc-4.3              | 4.3.2-1.1       | The GNU C compiler  |
| gcc-4.3-base         | 4.3.2-1.1       | The GNU Compiler Collection (base package)                      |
| gconf2               | 2.22.0-1        | GNOME configuration database system (support tools)             |
| gconf2-common        | 2.22.0-1        | GNOME configuration database system (common files)              |
| gdb                  | 6.8-3           | The GNU Debugger  |
| gdm                  | 2.20.7-4lenny1  | GNOME Display Manager   |
| gdm-themes           | 0.6.1           | Themes for the GNOME Display Manager                            |
| gedit                | 2.22.3-1+lenny1 | official text editor of the GNOME desktop environment           |
| gedit-common         | 2.22.3-1+lenny1 | official text editor of the GNOME desktop environment (support) |
| genisoimage          | 9:1.1.9-1       | Creates ISO-9660 CD-ROM filesystem images                       |
| gettext-base         | 0.17-4          | GNU Internationalization utilities for the base system          |
| gksu                 | 2.0.0-8         | graphical frontend to su  |
| gnome-about          | 2.22.3-2        | The GNOME about box   |
| gnome-applets        | 2.22.3-3        | Various applets for GNOME 2 panel - binary files                |
| gnome-applets-data   | 2.22.3-3        | Various applets for GNOME 2 panel - data files                  |
| gnome-control-center | 1:2.22.2.1-2    | utilities to configure the GNOME desktop                        |
| gnome-core           | 1:2.22.2~5      | The GNOME Desktop Environment -- essential components           |
| gnome-desktop-data   | 2.22.3-2        | Common files for GNOME 2 desktop apps                           |
| gnome-doc-utils      | 0.12.2-1        | a collection of documentation utilities for the Gnome project   |
| gnome-icon-theme     | 2.22.0-1        | GNOME Desktop icon theme  |
| gnome-keyring        | 2.22.3-2        | GNOME keyring services (daemon and tools)                       |
| gnome-media          | 2.22.0-3        | GNOME media utilities   |
| gnome-media-common   | 2.22.0-3        | GNOME media utilities - common files                            |
| gnome-menus          | 2.22.2-4        | an implementation of the freedesktop menu specification for GN  |
| gnome-mime-data      | 2.18.0-1        | base MIME and Application database for GNOME.                   |

|                            |                        |   |
|----------------------------|------------------------|---|
| gnome-mount                | 0.7-2                  | wrapper for (un)mounting and ejecting storage devices     |
| gnome-netstatus-applet     | 2.12.1-2               | Network status applet for GNOME 2                         |
| gnome-panel                | 2.20.3-5               | launcher and docking facility for GNOME                   |
| gnome-panel-data           | 2.20.3-5               | common files for the GNOME Panel                          |
| gnome-power-manager        | 2.22.1-4               | power management tool for the GNOME desktop               |
| gnome-session              | 2.22.3-2               | The GNOME 2 Session Manager                               |
| gnome-settings-daemon      | 2.22.2.1-2             | GNOME settings daemon                                     |
| gnome-system-monitor       | 2.22.3-1               | Process viewer and system resource monitor for GNOME 2    |
| gnome-terminal             | 2.22.3-3               | The GNOME 2 terminal emulator application                 |
| gnome-terminal-data        | 2.22.3-3               | Data files for the GNOME terminal emulator                |
| gnome-user-guide           | 2.22.1-1               | GNOME user's guide  |
| gnome-utils                | 2.20.0.1-3             | GNOME desktop utilities                                   |
| gnupg                      | 1.4.9-3+lenny1         | GNU privacy guard - a free PGP replacement                |
| gpgv                       | 1.4.9-3+lenny1         | GNU privacy guard - signature verification tool           |
| grep                       | 2.5.3~dfsg-6           | GNU grep, egrep and fgrep                                 |
| groff-base                 | 1.18.1.1-21            | GNU troff text-formatting system (base system components) |
| grub                       | 0.97-47lenny2          | GRand Unified Bootloader (Legacy version)                 |
| grub-common                | 1.96+20080724-16       | GRand Unified Bootloader, version 2 (common files)        |
| gstreamer0.10-alsa         | 0.10.19-2              | GStreamer plugin for ALSA                                 |
| gstreamer0.10-plugins-base | 0.10.19-2              | GStreamer plugins from the "base" set                     |
| gstreamer0.10-plugins-good | 0.10.8-4.1~lenny2      | GStreamer plugins from the "good" set                     |
| gstreamer0.10-x            | 0.10.19-2              | GStreamer plugins for X11 and Pango                       |
| gzip                       | 1.3.12-6               | The GNU compression utility                               |
| hal                        | 0.5.11-8               | Hardware Abstraction Layer                                |
| hal-info                   | 20080508+git20080601-1 | Hardware Abstraction Layer - fdi files                    |
| hicolor-icon-theme         | 0.10-1                 | default fallback theme for FreeDesktop.org icon themes    |
| hostname                   | 2.95                   | utility to set/show the host name or domain name          |
| ifenslave                  | 2                      | Attach and detach slave interfaces to a bonding device    |
| ifenslave-2.6              | 1.1.0-10               | Attach and detach slave                                   |

|                      |                       |   |
|----------------------|-----------------------|---|
|                      |                       | interfaces to a bonding device                                  |
| ifupdown             | 0.6.8+nmu1            | high level tools to configure network interfaces                |
| initramfs-tools      | 0.92o                 | tools for generating an initramfs                               |
| initscripts          | 2.86.ds1-61           | Scripts for initializing and shutting down the system           |
| iproute              | 20080725-2            | networking and traffic control tools                            |
| iptables             | 1.4.2-6               | administration tools for packet filtering and NAT               |
| iputils-ping         | 3:20071127-1          | Tools to test the reachability of network hosts                 |
| iso-codes            | 3.5.1-1               | ISO language, territory, currency, script codes and their tran  |
| klibc-utils          | 1.5.12-2              | small utilities built with klibc for early boot                 |
| libaa1               | 1.4p5-37+b1           | ascii art library   |
| libacl1              | 2.2.47-2              | Access control list shared library                              |
| libao2               | 0.8.8-4               | Cross Platform Audio Output Library                             |
| libapache2-mod-php5  | 5.2.6.dfsg.1-1+lenny4 | server-side, HTML-embedded scripting language (Apache 2 module) |
| libapm1              | 3.2.2-12              | Library for interacting with APM driver in kernel               |
| libapr1              | 1.2.12-5+lenny1       | The Apache Portable Runtime Library                             |
| libaprutil1          | 1.2.12+dfsg-8+lenny4  | The Apache Portable Runtime Utility Library                     |
| libart-2.0-2         | 2.3.20-2              | Library of functions for 2D graphics - runtime files            |
| libasound2           | 1.0.16-2              | ALSA library  |
| libaspell15          | 0.60.6-1              | GNU Aspell spell-checker runtime library                        |
| libatk1.0-0          | 1.22.0-1              | The ATK accessibility toolkit                                   |
| libatk1.0-data       | 1.22.0-1              | Common files for the ATK accessibility toolkit                  |
| libattr1             | 1:2.4.43-2            | Extended attribute shared library                               |
| libaudiofile0        | 0.2.6-7+lenny1        | Open-source version of SGI's audiofile library                  |
| libavahi-client3     | 0.6.23-3lenny1        | Avahi client library  |
| libavahi-common-data | 0.6.23-3lenny1        | Avahi common data files   |
| libavahi-common3     | 0.6.23-3lenny1        | Avahi common library  |
| libavahi-glib1       | 0.6.23-3lenny1        | Avahi glib integration library                                  |
| libavc1394-0         | 0.5.3-1+b1            | control IEEE 1394 audio/video devices                           |
| libbeagle1           | 0.3.5-1+b1            | library for accessing beagle using C                            |

|                           |                          |  |
|---------------------------|--------------------------|--|
| libbind9-40               | 1:9.5.1.dfsg.P3-1+lenny1 | BIND9 Shared Library used by BIND                              |
| libblkid1                 | 1.41.3-1                 | block device id library  |
| libbonobo2-0              | 2.22.0-1                 | Bonobo CORBA interfaces library                                |
| libbonobo2-common         | 2.22.0-1                 | Bonobo CORBA interfaces library -- support files               |
| libbonoboui2-0            | 2.22.0-1                 | The Bonobo UI library  |
| libbonoboui2-common       | 2.22.0-1                 | The Bonobo UI library -- common files                          |
| libbz2-1.0                | 1.0.5-1                  | high-quality block-sorting file compressor library - runtime   |
| libc6                     | 2.7-18lenny2             | GNU C Library: Shared libraries                                |
| libc6-dev                 | 2.7-18lenny2             | GNU C Library: Development Libraries and Header Files          |
| libc6-i686                | 2.7-18lenny2             | GNU C Library: Shared libraries [i686 optimized]               |
| libcaca0                  | 0.99.beta14-1            | colour ASCII art library                                       |
| libcairo-perl             | 1.060-1                  | Perl interface to the Cairo graphics library                   |
| libcairo2                 | 1.6.4-7                  | The Cairo 2D vector graphics library                           |
| libcairomm-1.0-1          | 1.6.0-1                  | C++ wrappers for Cairo (shared libraries)                      |
| libcamel1.2-11            | 2.22.3-1.1+lenny2        | The Evolution MIME message handling library                    |
| libcap1                   | 1:1.10-14                | support for getting/setting POSIX.1e capabilities              |
| libcap2                   | 2.11-2                   | support for getting/setting POSIX.1e capabilities              |
| libcdio7                  | 0.78.2+dfsg1-3           | library to read and control CD-ROM                             |
| libcdparanoia0            | 3.10.2+debian-5          | audio extraction tool for sampling CDs (library)               |
| libcomerr2                | 1.41.3-1                 | common error description library                               |
| libcompress-raw-zlib-perl | 2.012-1lenny1            | low-level interface to zlib compression library                |
| libcompress-zlib-perl     | 2.012-1                  | Perl module for creation and manipulation of gzip files        |
| libconsole                | 1:0.2.3dbs-65.1          | Shared libraries for Linux console and font manipulation       |
| libcpufreq0               | 004-2                    | shared library to deal with the cpufreq Linux kernel feature   |
| libcroco3                 | 0.6.1-2                  | a generic Cascading Style Sheet (CSS) parsing and manipulation |
| libcucul0                 | 0.99.beta14-1            | low-level Unicode character drawing library                    |
| libcups2                  | 1.3.8-1+lenny7           | Common UNIX Printing System(tm) - libs                         |
| libcwidget3               | 0.5.12-4                 | high-level terminal interface                                  |

|                       |                          |  |
|-----------------------|--------------------------|--|
|                       |                          | library for C++ (runtime files)                                |
| libdatrie0            | 0.1.3-2                  | Double-array trie library                                      |
| libdb4.5              | 4.5.20-13                | Berkeley v4.5 Database Libraries [runtime]                     |
| libdb4.6              | 4.6.21-11                | Berkeley v4.6 Database Libraries [runtime]                     |
| libdbus-1-3           | 1.2.1-5+lenny1           | simple interprocess messaging system                           |
| libdbus-glib-1-2      | 0.76-1                   | simple interprocess messaging system (GLib-based shared librar |
| libdevmapper1.02.1    | 2:1.02.27-4              | The Linux Kernel Device Mapper userspace library               |
| libdirectfb-1.0-0     | 1.0.1-11                 | direct frame buffer graphics - shared libraries                |
| libdirectfb-extra     | 1.0.1-11                 | direct frame buffer graphics - extra providers                 |
| libdmx1               | 1:1.0.2-3                | X11 Distributed Multihead extension library                    |
| libdns45              | 1:9.5.1.dfsg.P3-1+lenny1 | DNS Shared Library used by BIND                                |
| libdrm2               | 2.3.1-2                  | Userspace interface to kernel DRM services -- runtime          |
| libdv4                | 1.0.0-1+b1               | software library for DV format digital video (runtime lib)     |
| libebook1.2-9         | 2.22.3-1.1+lenny2        | Client library for evolution address books                     |
| libecal1.2-7          | 2.22.3-1.1+lenny2        | Client library for evolution calendars                         |
| libedata-book1.2-2    | 2.22.3-1.1+lenny2        | Backend library for evolution address books                    |
| libedata-cal1.2-6     | 2.22.3-1.1+lenny2        | Backend library for evolution calendars                        |
| libedataserver1.2-9   | 2.22.3-1.1+lenny2        | Utility library for evolution data servers                     |
| libedataserverui1.2-8 | 2.22.3-1.1+lenny2        | GUI utility library for evolution data servers                 |
| libedit2              | 2.11~20080614-1          | BSD editline and history libraries                             |
| libeel2-2.20          | 2.20.0-7                 | Eazel Extensions Library (for GNOME2)                          |
| libeel2-data          | 2.20.0-7                 | Eazel Extensions Library - data files (for GNOME2)             |
| libgroupwise1.2-13    | 2.22.3-1.1+lenny2        | Client library for accessing groupwise POA through SOAP interf |
| libenchant1c2a        | 1.4.2-3.3                | a wrapper library for various spell checker engines            |
| libept0               | 0.5.22                   | High-level library for managing Debian package information     |
| libesd0               | 0.2.36-3                 | Enlightened Sound Daemon - Shared libraries                    |
| libevent1             | 1.3e-3                   | An asynchronous event  |

|                      |                   |  |
|----------------------|-------------------|--|
|                      |                   | notification library   |
| libexempi3           | 2.0.1-1           | library to parse XMP metadata (Library)                        |
| libexif12            | 0.6.16-2.1        | library to parse EXIF files                                    |
| libexpat1            | 2.0.1-4+lenny3    | XML parsing C library - runtime library                        |
| libfam0              | 2.7.0-13.3        | Client library to control the FAM daemon                       |
| libffi5              | 3.0.7-1           | Foreign Function Interface library runtime                     |
| libflac8             | 1.2.1-1.2         | Free Lossless Audio Codec - runtime C library                  |
| libfont-afm-perl     | 1.20-1            | Font::AFM - Interface to Adobe Font Metrics files              |
| libfontconfig1       | 2.6.0-3           | generic font configuration library - runtime                   |
| libfontenc1          | 1:1.0.4-3         | X11 font encoding library                                      |
| libfreetype6         | 2.3.7-2+lenny1    | FreeType 2 font engine, shared library files                   |
| libfreezethaw-perl   | 0.43-4            | converting Perl structures to strings and back                 |
| libfs6               | 2:1.0.1-1         | X11 Font Services library                                      |
| libgail-common       | 1.22.3-1          | GNOME Accessibility Implementation Library -- common modules   |
| libgail18            | 1.22.3-1          | GNOME Accessibility Implementation Library -- shared libraries |
| libgc1c2             | 1:6.8-1.1         | conservative garbage collector for C and C++                   |
| libgcc1              | 1:4.3.2-1.1       | GCC support library  |
| libgconf2-4          | 2.22.0-1          | GNOME configuration database system (shared libraries)         |
| libgcrypt11          | 1.4.1-1           | LGPL Crypto library - runtime library                          |
| libgdata-google1.2-1 | 2.22.3-1.1+lenny2 | Client library for accessing Google POA through SOAP interface |
| libgdata1.2-1        | 2.22.3-1.1+lenny2 | Client library for accessing Google POA through SOAP interface |
| libgdbm3             | 1.8.3-3           | GNU dbm database routines (runtime version)                    |
| libgksu2-0           | 2.0.7-1           | library providing su and sudo functionality                    |
| libgl1-mesa-dri      | 7.0.3-7           | A free implementation of the OpenGL API -- DRI modules         |
| libgl1-mesa-glx      | 7.0.3-7           | A free implementation of the OpenGL API -- GLX runtime         |
| libglade2-0          | 1:2.6.2-1         | library to load .glade files at runtime                        |
| libglib-perl         | 1:1.190-2         | Perl interface to the GLib and                                 |

|                           |                |  |
|---------------------------|----------------|--|
|                           |                | GObject libraries  |
| libglib2.0-0              | 2.16.6-2       | The GLib library of C routines                                 |
| libglib2.0-data           | 2.16.6-2       | Common files for GLib library                                  |
| libglibmm-2.4-1c2a        | 2.16.4-1       | C++ wrapper for the GLib toolkit (shared libraries)            |
| libglu1-mesa              | 7.0.3-7        | The OpenGL utility library (GLU)                               |
| libgmp3c2                 | 2:4.2.2+dfsg-3 | Multiprecision arithmetic library                              |
| libgnome-desktop-2        | 2.22.3-2       | Utility library for loading .desktop files - runtime files     |
| libgnome-keyring0         | 2.22.3-2       | GNOME keyring services library                                 |
| libgnome-media0           | 2.22.0-3       | runtime libraries for the GNOME media utilities                |
| libgnome-menu2            | 2.22.2-4       | an implementation of the freedesktop menu specification for GN |
| libgnome-window-settings1 | 1:2.22.2.1-2   | Utility library for getting window manager settings            |
| libgnome2-0               | 2.20.1.1-1     | The GNOME 2 library - runtime files                            |
| libgnome2-canvas-perl     | 1.002-1+b2     | Perl interface to the GNOME canvas library                     |
| libgnome2-common          | 2.20.1.1-1     | The GNOME 2 library - common files                             |
| libgnome2-perl            | 1.042-1+b1     | Perl interface to the GNOME libraries                          |
| libgnome2-vfs-perl        | 1.080-1+b1     | Perl interface to the 2.x series of the GNOME VFS library      |
| libgnomecanvas2-0         | 2.20.1.1-1     | A powerful object-oriented display - runtime files             |
| libgnomecanvas2-common    | 2.20.1.1-1     | A powerful object-oriented display - common files              |
| libgnomecups1.0-1         | 0.2.3-3        | GNOME library for CUPS interaction                             |
| libgnomekbd-common        | 2.22.0-1       | GNOME library to manage keyboard configuration - common files  |
| libgnomekbd2              | 2.22.0-1       | GNOME library to manage keyboard configuration - shared librar |
| libgnomekbdui2            | 2.22.0-1       | User interface library for libgnomekbd - shared library        |
| libgnomeprint2.2-0        | 2.18.5-1       | The GNOME 2.2 print architecture - runtime files               |
| libgnomeprint2.2-data     | 2.18.5-1       | The GNOME 2.2 print architecture - data files                  |
| libgnomeprintui2.2-0      | 2.18.3-1       | GNOME 2.2 print architecture User Interface - runtime files    |
| libgnomeprintui2.2-common | 2.18.3-1       | GNOME 2.2 print architecture User Interface - common files     |

|                                 |                  |  |
|---------------------------------|------------------|--|
| libgnomeui-0                    | 2.20.1.1-2       | The GNOME 2 libraries (User Interface) - runtime files         |
| libgnomeui-common               | 2.20.1.1-2       | The GNOME 2 libraries (User Interface) - common files          |
| libgnomevfs2-0                  | 1:2.22.0-5       | GNOME Virtual File System (runtime libraries)                  |
| libgnomevfs2-bin                | 1:2.22.0-5       | GNOME Virtual File System (support binaries)                   |
| libgnomevfs2-common             | 1:2.22.0-5       | GNOME Virtual File System (common files)                       |
| libgnomevfs2-extra              | 1:2.22.0-5       | GNOME Virtual File System (extra modules)                      |
| libgnutls26                     | 2.4.2-6+lenny2   | the GNU TLS library - runtime library                          |
| libgomp1                        | 4.3.2-1.1        | GCC OpenMP (GOMP) support library                              |
| libgpg-error0                   | 1.4-2            | library for common error values and messages in GnuPG componen |
| libgpm2                         | 1.20.4-3.1       | General Purpose Mouse - shared library                         |
| libgsf-1-114                    | 1.14.8-1lenny2   | Structured File Library - runtime version                      |
| libgsf-1-common                 | 1.14.8-1lenny2   | Structured File Library - common files                         |
| libgssglue1                     | 0.1-2            | mechanism-switch gssapi library                                |
| libgstreamer-plugins-base0.10-0 | 0.10.19-2        | GStreamer libraries from the "base" set                        |
| libgstreamer0.10-0              | 0.10.19-3        | Core GStreamer libraries and elements                          |
| libgtk2-perl                    | 1:1.190-1        | Perl interface to the 2.x series of the Gimp Toolkit library   |
| libgtk2.0-0                     | 2.12.12-1~lenny1 | The GTK+ graphical user interface library                      |
| libgtk2.0-bin                   | 2.12.12-1~lenny1 | The programs for the GTK+ graphical user interface library     |
| libgtk2.0-common                | 2.12.12-1~lenny1 | Common files for the GTK+ graphical user interface library     |
| libgtkmm-2.4-1c2a               | 1:2.12.7-1       | C++ wrappers for GTK+ 2.4 (shared libraries)                   |
| libgtksourceview-common         | 1.8.5-1          | common files for the GTK+ syntax highlighting widget           |
| libgtksourceview1.0-0           | 1.8.5-1          | shared libraries for the GTK+ syntax highlighting widget       |
| libgtksourceview2.0-0           | 2.2.2-1          | shared libraries for the GTK+ syntax highlighting widget       |
| libgtksourceview2.0-common      | 2.2.2-1          | common files for the GTK+ syntax highlighting widget           |
| libgtop2-7                      | 2.22.3-1         | gtop system monitoring library                                 |
| libgtop2-common                 | 2.22.3-1         | common files for the gtop system monitoring library            |
| libucharmap6                    | 1:2.22.3-2       | Unicode browser widget library                                 |

|                          |                          |  |
|--------------------------|--------------------------|--|
|                          |                          | (shared library)   |
| libgweather-common       | 2.22.3-1                 | GWeather common files  |
| libgweather1             | 2.22.3-1                 | GWeather shared library  |
| libhal-storage1          | 0.5.11-8                 | Hardware Abstraction Layer - shared library for storage device |
| libhal1                  | 0.5.11-8                 | Hardware Abstraction Layer - shared library                    |
| libhtml-format-perl      | 2.04-2                   | format HTML syntax trees into text, PostScript or RTF          |
| libhtml-parser-perl      | 3.56-1+lenny1            | A collection of modules that parse HTML text documents         |
| libhtml-tagset-perl      | 3.20-2                   | Data tables pertaining to HTML                                 |
| libhtml-tree-perl        | 3.23-1                   | represent and create HTML syntax trees                         |
| libhunspell-1.2-0        | 1.2.6-1                  | spell checker and morphological analyzer (shared library)      |
| libice6                  | 2:1.0.4-1                | X11 Inter-Client Exchange library                              |
| libidl0                  | 0.8.10-0.1               | library for parsing CORBA IDL files                            |
| libidn11                 | 1.8+20080606-1           | GNU libidn library, implementation of IETF IDN specifications  |
| libiec61883-0            | 1.1.0-2                  | an partial implementation of IEC 61883                         |
| libio-compress-base-perl | 2.012-1                  | Base Class for IO::Compress modules                            |
| libio-compress-zlib-perl | 2.012-1                  | Perl interface to zlib   |
| libisc45                 | 1:9.5.1.dfsg.P3-1+lenny1 | ISC Shared Library used by BIND                                |
| libisccc40               | 1:9.5.1.dfsg.P3-1+lenny1 | Command Channel Library used by BIND                           |
| libisccfg40              | 1:9.5.1.dfsg.P3-1+lenny1 | Config File Handling Library used by BIND                      |
| libjpeg62                | 6b-14                    | The Independent JPEG Group's JPEG runtime library              |
| libkeyutils1             | 1.2-9                    | Linux Key Management Utilities (library)                       |
| libklibc                 | 1.5.12-2                 | minimal libc subset for use with initramfs                     |
| libkrb53                 | 1.6.dfsg.4~beta1-5lenny1 | MIT Kerberos runtime libraries                                 |
| liblcms1                 | 1.17.dfsg-1+lenny2       | Color management library                                       |
| libldap-2.4-2            | 2.4.11-1+lenny1          | OpenLDAP libraries   |
| liblocale-gettext-perl   | 1.05-4                   | Using libc functions for internationalization in Perl          |
| liblockfile1             | 1.08-3                   | NFS-safe locking library, includes dotlockfile program         |
| liblwres40               | 1:9.5.1.dfsg.P3-1+lenny1 | Lightweight Resolver Library used by BIND                      |

|                        |                    |   |
|------------------------|--------------------|---|
| liblzo2-2              | 2.03-1             | data compression library  |
| libmagic1              | 4.26-1             | File type determination library using "magic" numbers           |
| libmailtools-perl      | 2.03-1             | Manipulate email in perl programs                               |
| libmalaga7             | 7.12-1             | An automatic language analysis library                          |
| libmetacity0           | 1:2.22.0-2         | library of lightweight GTK2 based Window Manager                |
| libmldb-perl           | 2.01-2             | Store multidimensional hash structures in perl tied hashes      |
| libmozjs1d             | 1.9.0.16-1         | The Mozilla SpiderMonkey JavaScript library                     |
| libmpfr1ldbl           | 2.3.1.dfsg.1-2     | multiple precision floating-point computation                   |
| libmysqlclient15off    | 5.0.51a-24+lenny2  | MySQL database client library                                   |
| libnautilus-burn4      | 2.20.0-1           | Nautilus Burn Library - runtime version                         |
| libnautilus-extension1 | 2.20.0-7           | libraries for nautilus components - runtime version             |
| libncurses5            | 5.7+20081213-1     | shared libraries for terminal handling                          |
| libncursesw5           | 5.7+20081213-1     | shared libraries for terminal handling (wide character support) |
| libnet-dbus-perl       | 0.33.6-1+b1        | Extension for the DBus bindings                                 |
| libnet-lite-ftp-perl   | 0.54-2             | Perl FTP client with support for TLS                            |
| libnet-ssleay-perl     | 1.35-1             | Perl module for Secure Sockets Layer (SSL)                      |
| libnet-telnet-perl     | 3.03-3             | Script telnetable connections                                   |
| libnewt0.52            | 0.52.2-11.3+lenny1 | Not Erik's Windowing Toolkit - text mode windowing with slang   |
| libnfsidmap2           | 0.20-1             | An nfs idmapping library  |
| libnotify1             | 0.4.4-3            | sends desktop notifications to a notification daemon            |
| libnspr4-0d            | 4.7.1-5            | NetScape Portable Runtime Library                               |
| libnss3-1d             | 3.12.3.1-0lenny1   | Network Security Service libraries                              |
| libogg0                | 1.1.3-4            | Ogg Bitstream Library   |
| liboil0.3              | 0.3.15-1           | Library of Optimized Inner Loops                                |
| liboobs-1-4            | 2.22.0-2           | GObject based interface to system-tools-backends - shared libr  |
| liborbit2              | 1:2.14.13-0.1      | libraries for ORBit2 - a CORBA ORB                              |
| libpam-gnome-keyring   | 2.22.3-2           | PAM module to unlock the GNOME keyring upon login               |
| libpam-modules         | 1.0.1-5+lenny1     | Pluggable Authentication  |

|                    |                        |  |
|--------------------|------------------------|--|
|                    |                        | Modules for PAM  |
| libpam-runtime     | 1.0.1-5+lenny1         | Runtime support for the PAM library                            |
| libpam0g           | 1.0.1-5+lenny1         | Pluggable Authentication Modules library                       |
| libpanel-applet2-0 | 2.20.3-5               | library for GNOME Panel applets                                |
| libpango1.0-0      | 1.20.5-5               | Layout and rendering of internationalized text                 |
| libpango1.0-common | 1.20.5-5               | Modules and configuration files for the Pango                  |
| libpcap0.8         | 0.9.8-5                | system interface for user-level packet capture                 |
| libpci3            | 1:3.0.0-6              | Linux PCI Utilities (shared library)                           |
| libpcre3           | 7.6-2.1                | Perl 5 Compatible Regular Expression Library - runtime files   |
| libperl5.10        | 5.10.0-19lenny2        | Shared Perl library  |
| libpixman-1-0      | 0.10.0-2               | pixel-manipulation library for X and cairo                     |
| libpkcs11-helper1  | 1.05-1                 | library that simplifies the interaction with PKCS#11           |
| libpng12-0         | 1.2.27-2+lenny2        | PNG library - runtime  |
| libpopt0           | 1.14-4                 | lib for parsing cmdline parameters                             |
| libpq5             | 8.3.9-0lenny1          | PostgreSQL C client library                                    |
| librarian0         | 0.8.1-1                | Rarian is a documentation meta-data library (library package)  |
| libraw1394-8       | 1.3.0-4                | library for direct access to IEEE 1394 bus (aka FireWire)      |
| libreadline5       | 5.2-3.1                | GNU readline and history libraries, run-time libraries         |
| librpcsecgss3      | 0.18-1                 | allows secure rpc communication using the rpcsec_gss protocol  |
| librsvg2-2         | 2.22.2-2lenny1         | SAX-based renderer library for SVG files (runtime)             |
| librsvg2-common    | 2.22.2-2lenny1         | SAX-based renderer library for SVG files (extra runtime)       |
| libsasl2-2         | 2.1.22.dfsg1-23+lenny1 | Cyrus SASL - authentication abstraction library                |
| libscrollkeeper0   | 0.3.14-16              | Library to load .omf files (runtime files)                     |
| libselinux1        | 2.0.65-5               | SELinux shared libraries                                       |
| libsensors3        | 1:2.10.7-1             | library to read temperature/voltage/fan sensors                |
| libsepol1          | 2.0.30-2               | Security Enhanced Linux policy library for changing policy bin |
| libsexy2           | 0.1.11-2+b1            | collection of additional GTK+ widgets - library                |

|                          |                        |  |
|--------------------------|------------------------|--|
| libshout3                | 2.2.2-5                | MP3/Ogg Vorbis broadcast streaming library                       |
| libsigc++-2.0-0c2a       | 2.0.18-2               | type-safe Signal Framework for C++ - runtime                     |
| libslab0                 | 0.9.8.svn.20070430-1.1 | beautification app library file                                  |
| libslang2                | 2.1.3-3                | The S-Lang programming library - runtime version                 |
| libsm6                   | 2:1.0.3-2              | X11 Session Management library                                   |
| libsmbclient             | 2:3.2.5-4lenny7        | shared library that allows applications to talk to SMB/CIFS se   |
| libsmbios-bin            | 2.0.3.dfsg-1           | Provide access to (SM)BIOS information -- utility binaries       |
| libsmbios2               | 2.0.3.dfsg-1           | Provide access to (SM)BIOS information -- dynamic library        |
| libsnmp-base             | 5.4.1~dfsg-12          | SNMP (Simple Network Management Protocol) MIBs and documentation |
| libsnmp15                | 5.4.1~dfsg-12          | SNMP (Simple Network Management Protocol) library                |
| libsoup2.4-1             | 2.4.1-2                | an HTTP library implementation in C -- Shared library            |
| libspeex1                | 1.2~rc1-1              | The Speex codec runtime library                                  |
| libsplashy1              | 0.3.13-3               | Library to draw splash screen on boot, shutdown, resume or sus   |
| libsqLite3-0             | 3.5.9-6                | SQLite 3 shared library  |
| libss2                   | 1.41.3-1               | command-line interface parsing library                           |
| libssl0.9.8              | 0.9.8g-15+lenny5       | SSL shared libraries   |
| libstartup-notification0 | 0.9-1                  | library for program launch feedback (shared library)             |
| libstdc++6               | 4.3.2-1.1              | The GNU Standard C++ Library v3                                  |
| libstdc++6-4.3-dev       | 4.3.2-1.1              | The GNU Standard C++ Library v3 (development files)              |
| libsysfs2                | 2.1.0-5                | interface library to sysfs                                       |
| libtag1c2a               | 1.5-3                  | TagLib Audio Meta-Data Library                                   |
| libtalloc1               | 1.2.0~git20080616-1    | hierarchical pool based memory allocator                         |
| libtasn1-3               | 1.4-1                  | Manage ASN.1 structures (runtime)                                |
| libtext-charwidth-perl   | 0.04-5+b1              | get display widths of characters on the terminal                 |
| libtext-iconv-perl       | 1.7-1+b1               | converts between character sets in Perl                          |
| libtext-wrapi18n-perl    | 0.06-6                 | internationalized substitute of Text::Wrap                       |
| libthai-data             | 0.1.9-4+lenny1         | Data files for Thai language                                     |

|                       |                       |  |
|-----------------------|-----------------------|--|
|                       |                       | support library  |
| libthai0              | 0.1.9-4+lenny1        | Thai language support library                                  |
| libtheora0            | 1.0~beta3-1           | The Theora Video Compression Codec                             |
| libtie-ixhash-perl    | 1.21-2                | ordered associative arrays for Perl                            |
| libtiff4              | 3.8.2-11.2            | Tag Image File Format (TIFF) library                           |
| libtimedate-perl      | 1.1600-9              | Time and date functions for Perl                               |
| libtotem-plparser10   | 2.22.3-1              | Totem Playlist Parser library - runtime version                |
| libtrackerclient0     | 0.6.6-2               | metadata database, indexer and search tool - library           |
| libts-0.0-0           | 1.0-4                 | touch screen library   |
| liburi-perl           | 1.35.dfsg.1-1         | Manipulates and accesses URI strings                           |
| libusb-0.1-4          | 2:0.1.12-13           | userspace USB programming library                              |
| libuuid-perl          | 0.02-3+b1             | Perl extension for using UUID interfaces as defined in e2fspro |
| libuuid1              | 1.41.3-1              | universally unique id library                                  |
| libvisual-0.4-0       | 0.4.0-2.1             | Audio visualization framework                                  |
| libvisual-0.4-plugins | 0.4.0.dfsg.1-2        | Audio visualization framework plugins                          |
| libvoikko1            | 1.7-2                 | Finnish spell-checker and hyphenator library                   |
| libvolume-id0         | 0.125-7+lenny3        | libvolume_id shared library                                    |
| libvorbis0a           | 1.2.0.dfsg-3.1+lenny1 | The Vorbis General Audio Compression Codec                     |
| libvorbisenc2         | 1.2.0.dfsg-3.1+lenny1 | The Vorbis General Audio Compression Codec                     |
| libvorbisfile3        | 1.2.0.dfsg-3.1+lenny1 | The Vorbis General Audio Compression Codec                     |
| libvte-common         | 1:0.16.14-4           | Terminal emulator widget for GTK+ 2.0 - common files           |
| libvte9               | 1:0.16.14-4           | Terminal emulator widget for GTK+ 2.0 - runtime files          |
| libwavpack1           | 4.50.1-1              | an audio codec (lossy and lossless) - library                  |
| libwbclient0          | 2:3.2.5-4lenny7       | client library for interfacing with winbind service            |
| libwnck-common        | 2.22.3-1              | Window Navigator Construction Kit - common files               |
| libwnck22             | 2.22.3-1              | Window Navigator Construction Kit - runtime files              |
| libwrap0              | 7.6.q-16              | Wietse Venema's TCP wrappers library                           |
| libwww-perl           | 5.813-1               | WWW client/server library for Perl (aka LWP)                   |
| libx11-6              | 2:1.1.5-2             | X11 client-side library  |

|                     |                      |  |
|---------------------|----------------------|--|
| libx11-data         | 2:1.1.5-2            | X11 client-side library  |
| libx86-1            | 1.1+ds1-2            | x86 real-mode library  |
| libxapian15         | 1.0.7-4              | Search engine library  |
| libxau6             | 1:1.0.3-3            | X11 authorisation library  |
| libxaw7             | 2:1.0.4-2            | X11 Athena Widget library  |
| libxcb-render-util0 | 0.2.1+git1-1         | utility libraries for X C Binding<br>-- render-util              |
| libxcb-render0      | 1.1-1.2              | X C Binding, render extension                                    |
| libxcb-xlib0        | 1.1-1.2              | X C Binding, Xlib/XCB<br>interface library                       |
| libxcb1             | 1.1-1.2              | X C Binding  |
| libxcomposite1      | 1:0.4.0-3            | X11 Composite extension<br>library                               |
| libxcursor1         | 1:1.1.9-1            | X cursor management library                                      |
| libxdamage1         | 1:1.1.1-4            | X11 damaged region extension<br>library                          |
| libxdmcp6           | 1:1.0.2-3            | X11 Display Manager Control<br>Protocol library                  |
| libxext6            | 2:1.0.4-1            | X11 miscellaneous extension<br>library                           |
| libxfixed3          | 1:4.0.3-2            | X11 miscellaneous 'fixes'<br>extension library                   |
| libxfont1           | 1:1.3.3-1            | X11 font rasterisation library                                   |
| libxft2             | 2.1.12-3             | FreeType-based font drawing<br>library for X                     |
| libxi6              | 2:1.1.4-1            | X11 Input extension library                                      |
| libxinerama1        | 2:1.0.3-2            | X11 Xinerama extension<br>library                                |
| libxkbfile1         | 1:1.0.5-1            | X11 keyboard file manipulation<br>library                        |
| libxklavier12       | 3.5-2                | X Keyboard Extension high-<br>level API                          |
| libxml-parser-perl  | 2.36-1.1+b1          | Perl module for parsing XML<br>files                             |
| libxml-twig-perl    | 1:3.32-1             | Perl module for processing<br>huge XML documents in tree<br>mode |
| libxml-xpath-perl   | 1.13-6               | Perl module for processing<br>XPath                              |
| libxml2             | 2.6.32.dfsg-5+lenny1 | GNOME XML library  |
| libxml2-utils       | 2.6.32.dfsg-5+lenny1 | XML utilities  |
| libxmu6             | 2:1.0.4-1            | X11 miscellaneous utility<br>library                             |
| libxmuu1            | 2:1.0.4-1            | X11 miscellaneous micro-<br>utility library                      |
| libxpm4             | 1:3.5.7-1            | X11 pixmap library   |
| libxrandr2          | 2:1.2.3-1            | X11 RandR extension library                                      |
| libxrender1         | 1:0.9.4-2            | X Rendering Extension client<br>library                          |
| libxres1            | 2:1.0.3-1            | X11 Resource extension library                                   |
| libxslt1.1          | 1.1.24-2             | XSLT processing library -<br>runtime library                     |

|                          |                  |  |
|--------------------------|------------------|--|
| libxss1                  | 1:1.1.3-1        | X11 Screen Saver extension library                       |
| libxt6                   | 1:1.0.5-3        | X11 toolkit intrinsics library                           |
| libxtrap6                | 2:1.0.0-5        | X11 event trapping extension library                     |
| libxtst6                 | 2:1.0.3-1        | X11 Testing -- Resource extension library                |
| libxv1                   | 2:1.0.4-1        | X11 Video extension library                              |
| libxxf86dg1              | 2:1.0.2-1        | X11 Direct Graphics Access extension library             |
| libxxf86misc1            | 1:1.0.1-3        | X11 XFree86 miscellaneous extension library              |
| libxxf86vm1              | 1:1.0.2-1        | X11 XFree86 video mode extension library                 |
| linux-image-2.6-686      | 2.6.26+17+lenny1 | Linux 2.6 image on PPro/Celeron/PII/PIII/P4              |
| linux-image-2.6.26-2-686 | 2.6.26-19lenny2  | Linux 2.6.26 image on PPro/Celeron/PII/PIII/P4           |
| linux-libc-dev           | 2.6.26-19lenny2  | Linux support headers for userspace development          |
| linux-sound-base         | 1.0.17.dfsg-4    | base package for ALSA and OSS sound systems              |
| locales                  | 2.7-18           | GNU C Library: National Language (locale) data [support] |
| lockfile-progs           | 0.1.11-0.1       | Programs for locking and unlocking files and mailboxes   |
| login                    | 1:4.1.1-6        | system login tools                                       |
| logrotate                | 3.7.1-5          | Log rotation utility                                     |
| lrzs                     | 0.12.21-4.1      | Tools for zmodem/xmodem/ymodem file transfer             |
| lsb-base                 | 3.2-20           | Linux Standard Base 3.2 init script functionality        |
| lsof                     | 4.78.dfsg.1-4    | List open files  |
| lzma                     | 4.43-14          | Compression method of 7z format in 7-Zip program         |
| m4                       | 1.4.11-1         | a macro processing language                              |
| make                     | 3.81-5           | The GNU version of the "make" utility.                   |
| makedev                  | 2.3.1-88         | creates device files in /dev                             |
| man-db                   | 2.5.2-4          | on-line manual pager                                     |
| manpages                 | 3.05-1           | Manual pages about using a GNU/Linux system              |
| mawk                     | 1.3.3-11.1       | a pattern scanning and text processing language          |
| menu                     | 2.1.41           | generates programs menu for all menu-aware applications  |
| menu-xdg                 | 0.3              | freedesktop.org menu compliant window manager scripts    |
| metacity                 | 1:2.22.0-2       | A lightweight GTK2 based                                 |

|                         |                        |   |
|-------------------------|------------------------|---|
|                         |                        | Window Manager  |
| metacity-common         | 1:2.22.0-2             | Shared files of lightweight GTK2 based Window Manager         |
| mime-support            | 3.44-1                 | MIME files 'mime.types' & 'mailcap', and support programs     |
| minicom                 | 2.3-1                  | friendly menu driven serial communication program             |
| mktemp                  | 1.5-9                  | tool for creating temporary files                             |
| mlocate                 | 0.21.1-1               | quickly find files on the filesystem based on their name      |
| modconf                 | 0.3.9                  | Device Driver Configuration                                   |
| module-init-tools       | 3.4-1                  | tools for managing Linux kernel modules                       |
| mount                   | 2.13.1.1-1             | Tools for mounting and manipulating filesystems               |
| mutt                    | 1.5.18-6               | text-based mailreader supporting MIME, GPG, PGP and threading |
| myspell-en-us           | 1:2.4.0-3              | English_american dictionary for myspell                       |
| mysql-common            | 5.0.51a-24+lenny2      | MySQL database common files                                   |
| nautilus                | 2.20.0-7               | file manager and graphical shell for GNOME                    |
| nautilus-cd-burner      | 2.20.0-1               | CD Burning front-end for Nautilus                             |
| nautilus-data           | 2.20.0-7               | data files for nautilus                                       |
| ncurses-base            | 5.7+20081213-1         | basic terminal type definitions                               |
| ncurses-bin             | 5.7+20081213-1         | terminal-related programs and man pages                       |
| ncurses-term            | 5.7+20081213-1         | additional terminal type definitions                          |
| net-tools               | 1.60-22                | The NET-3 networking toolkit                                  |
| netbase                 | 4.34                   | Basic TCP/IP networking system                                |
| netcat-traditional      | 1.10-38                | TCP/IP swiss army knife                                       |
| nfs-common              | 1:1.1.2-6lenny1        | NFS support files common to client and server                 |
| notification-daemon     | 0.3.7-1+b1             | a daemon that displays passive pop-up notifications           |
| ntpdate                 | 1:4.2.4p4+dfsg-8lenny3 | client for setting system time from NTP servers               |
| openbsd-inetd           | 0.20080125-2           | The OpenBSD Internet Superserver                              |
| openssh-blacklist       | 0.4.1                  | list of default blacklisted OpenSSH RSA and DSA keys          |
| openssh-blacklist-extra | 0.4.1                  | list of non-default blacklisted OpenSSH RSA and DSA keys      |
| openssh-client          | 1:5.1p1-5              | secure shell client, an rlogin/rsh/rpc replacement            |
| openssh-server          | 1:5.1p1-5              | secure shell server, an rshd replacement                      |
| openssl                 | 0.9.8g-15+lenny6       | Secure Socket Layer (SSL)                                     |

|                   |                       |   |
|-------------------|-----------------------|---|
|                   |                       | binary and related cryptographic tools                          |
| openssl-blacklist | 0.4.2                 | list of blacklisted OpenSSL RSA keys                            |
| openvpn           | 2.1~rc11-1            | virtual private network daemon                                  |
| openvpn-blacklist | 0.3                   | list of blacklisted OpenVPN RSA shared keys                     |
| oss-compat        | 0.0.4+nmu2            | OSS compatibility package                                       |
| passwd            | 1:4.1.1-6             | change and administer password and group data                   |
| pciutils          | 1:3.0.0-6             | Linux PCI Utilities   |
| perl              | 5.10.0-19lenny2       | Larry Wall's Practical Extraction and Report Language           |
| perl-base         | 5.10.0-19lenny2       | minimal Perl system   |
| perl-modules      | 5.10.0-19lenny2       | Core Perl modules   |
| php5-common       | 5.2.6.dfsg.1-1+lenny4 | Common files for packages built from the php5 source            |
| pm-utils          | 1.1.2.4-1             | utilities and scripts for power management                      |
| portmap           | 6.0-9                 | RPC port mapper   |
| powermgmt-base    | 1.30+nmu1             | Common utils and configs for power management                   |
| ppp               | 2.4.4rel-10.1         | Point-to-Point Protocol (PPP) - daemon                          |
| pppconfig         | 2.3.18                | A text menu based utility for configuring ppp                   |
| pppoe             | 3.8-3                 | PPP over Ethernet driver  |
| pppoeconf         | 1.18                  | configures PPPoE/ADSL connections                               |
| procps            | 1:3.2.7-11            | /proc file system utilities                                     |
| proftpd           | 1.3.1-17lenny4        | versatile, virtual-hosting FTP daemon                           |
| proftpd-basic     | 1.3.1-17lenny4        | versatile, virtual-hosting FTP daemon - binaries                |
| proftpd-mod-ldap  | 1.3.1-17lenny4        | versatile, virtual-hosting FTP daemon - LDAP module             |
| proftpd-mod-mysql | 1.3.1-17lenny4        | versatile, virtual-hosting FTP daemon - MySQL module            |
| proftpd-mod-pgsql | 1.3.1-17lenny4        | versatile, virtual-hosting FTP daemon - PostgreSQL module       |
| psmisc            | 22.6-1                | Utilities that use the proc filesystem                          |
| python            | 2.5.2-3               | An interactive high-level object-oriented language (default ve) |
| python-beagle     | 0.3.5-1+b1            | Python bindings for beagle                                      |
| python-cairo      | 1.4.12-1.2            | Python bindings for the Cairo vector graphics library           |
| python-central    | 0.6.8                 | register and build utility for Python packages                  |
| python-dbus       | 0.82.4-2              | simple interprocess messaging                                   |

|                       |                      |   |
|-----------------------|----------------------|---|
|                       |                      | system (Python interface)                                       |
| python-fpconst        | 0.7.2-4              | Utilities for handling IEEE 754 floating point special values   |
| python-glade2         | 2.12.1-6             | GTK+ bindings: Glade support                                    |
| python-gmenu          | 2.22.2-4             | an implementation of the freedesktop menu specification for GN  |
| python-gnome2         | 2.22.0-1             | Python bindings for the GNOME desktop environment               |
| python-gnome2-desktop | 2.22.0-2             | Python bindings for the GNOME desktop environment               |
| python-gobject        | 2.14.2-2             | Python bindings for the GObject library                         |
| python-gtk2           | 2.12.1-6             | Python bindings for the GTK+ widget set                         |
| python-gtksourceview2 | 2.2.0-1+b1           | Python bindings for the GtkSourceView widget                    |
| python-libxml2        | 2.6.32.dfsg-5+lenny1 | Python bindings for the GNOME XML library                       |
| python-minimal        | 2.5.2-3              | A minimal subset of the Python language (default version)       |
| python-numeric        | 24.2-9               | Numerical (matrix-oriented) Mathematics for Python              |
| python-pyorbit        | 2.14.3-2             | A Python language binding for the ORBit2 CORBA implementation   |
| python-soappy         | 0.12.0-4             | SOAP Support for Python   |
| python-support        | 0.8.4lenny1          | automated rebuilding support for Python modules                 |
| python2.5             | 2.5.2-15             | An interactive high-level object-oriented language (version 2). |
| python2.5-minimal     | 2.5.2-15             | A minimal subset of the Python language (version 2.5)           |
| radeontool            | 1.5-5                | utility to control ATI Radeon backlight functions on laptops    |
| readline-common       | 5.2-3.1              | GNU readline and history libraries, common files                |
| rsyslog               | 3.18.6-4             | enhanced multi-threaded syslogd                                 |
| scrollkeeper          | 0.3.14-16            | A free electronic cataloging system for documentation           |
| sed                   | 4.1.5-6              | The GNU sed stream editor                                       |
| sgml-base             | 1.26                 | SGML infrastructure and SGML catalog file support               |
| sgml-data             | 2.0.3                | common SGML and XML data  |
| shared-mime-info      | 0.30-2               | FreeDesktop.org shared MIME database and spec                   |
| snmp                  | 5.4.1~dfsg-12        | SNMP (Simple Network Management Protocol) applications          |
| snmpd                 | 5.4.1~dfsg-12        | SNMP (Simple Network Management Protocol) agents                |

|                       |                 |  |
|-----------------------|-----------------|--|
| ssh                   | 1:5.1p1-5       | secure shell client and server (metapackage)                   |
| ssl-cert              | 1.0.23          | simple debconf wrapper for OpenSSL                             |
| sudo                  | 1.6.9p17-2      | Provide limited super user privileges to specific users        |
| synaptic              | 0.62.1+nmu1     | Graphical package manager                                      |
| system-tools-backends | 2.6.0-2lenny3   | System Tools to manage computer configuration -- scripts       |
| sysv-rc               | 2.86.ds1-61     | System-V-like runlevel change mechanism                        |
| sysvinit              | 2.86.ds1-61     | System-V-like init utilities                                   |
| sysvinit-utils        | 2.86.ds1-61     | System-V-like utilities  |
| tar                   | 1.20-1          | GNU version of the tar archiving utility                       |
| tasksel               | 2.78            | Tool for selecting tasks for installation on Debian systems    |
| tasksel-data          | 2.78            | Official tasks used for installation of Debian systems         |
| tcpd                  | 7.6.q-16        | Wietse Venema's TCP wrapper utilities                          |
| tcpdump               | 3.9.8-4         | A powerful tool for network monitoring and data acquisition    |
| telnet                | 0.17-36         | The telnet client  |
| telnetd               | 0.17-36         | The telnet server  |
| tftpd                 | 0.17-16         | Trivial file transfer protocol server                          |
| time                  | 1.7-23          | The GNU time program for measuring cpu resource usage          |
| traceroute            | 2.0.11-2        | Traces the route taken by packets over an IPv4/IPv6 network    |
| ttf-dejavu            | 2.25-3          | Metapackage to pull in ttf-dejavu-core and ttf-dejavu-extra    |
| ttf-dejavu-core       | 2.25-3          | Vera font family derivate with additional characters           |
| ttf-dejavu-extra      | 2.25-3          | Vera font family derivate with additional characters           |
| tzdata                | 2009l-0lenny1.1 | time zone and daylight-saving time data                        |
| ucf                   | 3.0016          | Update Configuration File: preserve user changes to config fil |
| udev                  | 0.125-7+lenny3  | /dev/ and hotplug management daemon                            |
| update-inetd          | 4.31            | inetd configuration file updater                               |
| usbmount              | 0.0.14.1        | automatically mount and unmount USB mass storage devices       |
| usbutils              | 0.73-10         | Linux USB utilities  |
| uswsusp               | 0.7-1.2         | tools to use userspace software                                |

|                        |                    |  |
|------------------------|--------------------|--|
|                        |                    | suspend provided by Linux                                |
| util-linux             | 2.13.1.1-1         | Miscellaneous system utilities                           |
| vbetool                | 1.0-3              | run real-mode video BIOS code to alter hardware state    |
| vim                    | 1:7.1.314-3+lenny2 | Vi IMproved - enhanced vi editor                         |
| vim-common             | 1:7.1.314-3+lenny2 | Vi IMproved - Common files                               |
| vim-runtime            | 1:7.1.314-3+lenny2 | Vi IMproved - Runtime files                              |
| vim-tiny               | 1:7.1.314-3+lenny2 | Vi IMproved - enhanced vi editor - compact version       |
| w3m                    | 0.5.2-2+b1         | WWW browsable pager with excellent tables/frames support |
| watchdog               | 5.4-10             | A software watchdog                                      |
| wget                   | 1.11.4-2+lenny1    | retrieves files from the web                             |
| whiptail               | 0.52.2-11.3+lenny1 | Displays user-friendly dialog boxes from shell scripts   |
| whois                  | 4.7.30             | an intelligent whois client                              |
| wodim                  | 9:1.1.9-1          | command line CD/DVD writing tool                         |
| x-ttcidfont-conf       | 31                 | TrueType and CID fonts configuration for X               |
| x11-apps               | 7.3+4              | X applications   |
| x11-common             | 1:7.3+20           | X Window System (X.Org) infrastructure                   |
| x11-session-utils      | 7.3+1              | X session utilities                                      |
| x11-utils              | 7.3+2+nmu1         | X11 utilities  |
| x11-xfs-utils          | 7.3+1              | X font server utilities                                  |
| x11-xkb-utils          | 7.4+1              | X11 XKB utilities  |
| x11-xserver-utils      | 7.3+5              | X server utilities                                       |
| xauth                  | 1:1.0.3-2          | X authentication utility                                 |
| xbase-clients          | 1:7.3+20           | miscellaneous X clients - metapackage                    |
| xfonts-100dpi          | 1:1.0.0-4          | 100 dpi fonts for X                                      |
| xfonts-75dpi           | 1:1.0.0-4          | 75 dpi fonts for X                                       |
| xfonts-base            | 1:1.0.0-5          | standard fonts for X                                     |
| xfonts-encodings       | 1:1.0.2-3          | Encodings for X.Org fonts                                |
| xfonts-scalable        | 1:1.0.0-6          | scalable fonts for X                                     |
| xfonts-utils           | 1:7.4+1            | X Window System font utility programs                    |
| xinit                  | 1.0.9-2            | X server initialisation tool                             |
| xkb-data               | 1.3-2              | X Keyboard Extension (XKB) configuration data            |
| xml-core               | 0.12               | XML infrastructure and XML catalog file support          |
| xorg                   | 1:7.3+20           | X.Org X Window System                                    |
| xorg-docs              | 1:1.4-4            | Miscellaneous documentation for the X.Org software suite |
| xserver-xephyr         | 2:1.4.2-10.lenny2  | nested X server  |
| xserver-xorg           | 1:7.3+20           | the X.Org X server                                       |
| xserver-xorg-core      | 2:1.4.2-10.lenny2  | Xorg X server - core server                              |
| xserver-xorg-input-all | 1:7.3+20           | the X.Org X server -- input driver metapackage           |

|                               |                      |  |
|-------------------------------|----------------------|--|
| xserver-xorg-input-evdev      | 1:2.0.8-1            | X.Org X server -- evdev input driver               |
| xserver-xorg-input-kbd        | 1:1.3.1-1            | X.Org X server -- keyboard input driver            |
| xserver-xorg-input-mouse      | 1:1.3.0-1            | X.Org X server -- mouse input driver               |
| xserver-xorg-input-synaptics  | 0.14.7~git20070706-3 | Synaptics TouchPad driver for X.Org/XFree86 server |
| xserver-xorg-input-wacom      | 0.7.9.3-2            | X.Org X server -- Wacom input driver               |
| xserver-xorg-video-all        | 1:7.3+20             | the X.Org X server -- output driver metapackage    |
| xserver-xorg-video-apm        | 1:1.2.0-1            | X.Org X server -- APM display driver               |
| xserver-xorg-video-ark        | 1:0.7.0-1            | X.Org X server -- ark display driver               |
| xserver-xorg-video-ati        | 1:6.9.0-1+lenny4     | X.Org X server -- ATI display driver wrapper       |
| xserver-xorg-video-chips      | 1:1.2.0-1            | X.Org X server -- Chips display driver             |
| xserver-xorg-video-cirrus     | 1:1.2.1-1.lenny1     | X.Org X server -- Cirrus display driver            |
| xserver-xorg-video-cyrix      | 1:1.1.0-8            | X.Org X server -- Cyrix display driver             |
| xserver-xorg-video-dummy      | 1:0.3.0-1            | X.Org X server -- dummy display driver             |
| xserver-xorg-video-fbdev      | 1:0.4.0-1            | X.Org X server -- fbdev display driver             |
| xserver-xorg-video-glint      | 1:1.2.1-1            | X.Org X server -- Glint display driver             |
| xserver-xorg-video-i128       | 1:1.3.0-1            | X.Org X server -- i128 display driver              |
| xserver-xorg-video-i740       | 1:1.2.0-1            | X.Org X server -- i740 display driver              |
| xserver-xorg-video-imstt      | 1:1.1.0-7            | X.Org X server -- IMSTT display driver             |
| xserver-xorg-video-intel      | 2:2.3.2-2+lenny6     | X.Org X server -- Intel i8xx, i9xx display driver  |
| xserver-xorg-video-mach64     | 6.8.0-1              | X.Org X server -- ATI Mach64 display driver        |
| xserver-xorg-video-mga        | 1:1.4.9.dfsg-1       | X.Org X server -- MGA display driver               |
| xserver-xorg-video-neomagic   | 1:1.2.1-1            | X.Org X server -- Neomagic display driver          |
| xserver-xorg-video-nsc        | 1:2.8.3-4            | X.Org X server -- NSC Geode GX1 display driver     |
| xserver-xorg-video-nv         | 1:2.1.10-1           | X.Org X server -- NV display driver                |
| xserver-xorg-video-openchrome | 1:0.2.902+svn579-4   | X.Org X server -- VIA display driver               |
| xserver-xorg-video-r128       | 6.8.0-1              | X.Org X server -- ATI r128 display driver          |
| xserver-xorg-video-radeon     | 1:6.9.0-1+lenny4     | X.Org X server -- ATI Radeon                       |

|                                  |                   |   |
|----------------------------------|-------------------|---|
|                                  |                   | display driver                                      |
| xserver-xorg-video-radeonhd      | 1.2.1-2           | X.Org X server -- AMD/ATI r5xx, r6xx display driver |
| xserver-xorg-video-rendition     | 1:4.2.0.dfsg.1-2  | X.Org X server -- Rendition display driver          |
| xserver-xorg-video-s3            | 1:0.6.0-1         | X.Org X server -- legacy S3 display driver          |
| xserver-xorg-video-s3virge       | 1:1.10.1-1        | X.Org X server -- S3 ViRGE display driver           |
| xserver-xorg-video-savage        | 1:2.2.1-2.lenny1  | X.Org X server -- Savage display driver             |
| xserver-xorg-video-siliconmotion | 1:1.6.0-1         | X.Org X server -- SiliconMotion display driver      |
| xserver-xorg-video-sis           | 1:0.10.0-1        | X.Org X server -- SiS display driver                |
| xserver-xorg-video-sisusb        | 1:0.9.0-1         | X.Org X server -- SiS USB display driver            |
| xserver-xorg-video-tdfx          | 1:1.4.0-1         | X.Org X server -- tdfx display driver               |
| xserver-xorg-video-tga           | 1:1.1.0-9         | X.Org X server -- TGA display driver                |
| xserver-xorg-video-trident       | 1:1.3.0-1         | X.Org X server -- Trident display driver            |
| xserver-xorg-video-tseng         | 1:1.2.0-1         | X.Org X server -- Tseng display driver              |
| xserver-xorg-video-v4l           | 0.2.0-1           | X.Org X server -- Video 4 Linux display driver      |
| xserver-xorg-video-vesa          | 1:1.3.0-4         | X.Org X server -- VESA display driver               |
| xserver-xorg-video-vga           | 1:4.1.0-8         | X.Org X server -- VGA display driver                |
| xserver-xorg-video-vmware        | 1:10.16.2-1       | X.Org X server -- VMware display driver             |
| xserver-xorg-video-voodoo        | 1:1.2.0-1         | X.Org X server -- Voodoo display driver             |
| xsltproc                         | 1.1.24-2          | XSLT command line processor                         |
| xulrunner-1.9                    | 1.9.0.16-1        | XUL + XPCOM application runner                      |
| yelp                             | 2.22.1-8+b1       | Help browser for GNOME 2                            |
| zenity                           | 2.22.1-2          | Display graphical dialog boxes from shell scripts   |
| zlib1g                           | 1:1.2.3.3.dfsg-12 | compression library - runtime                       |